


MY-HITE CORNER ADJUSTABLE TABLE

Model Number : FCNAHB

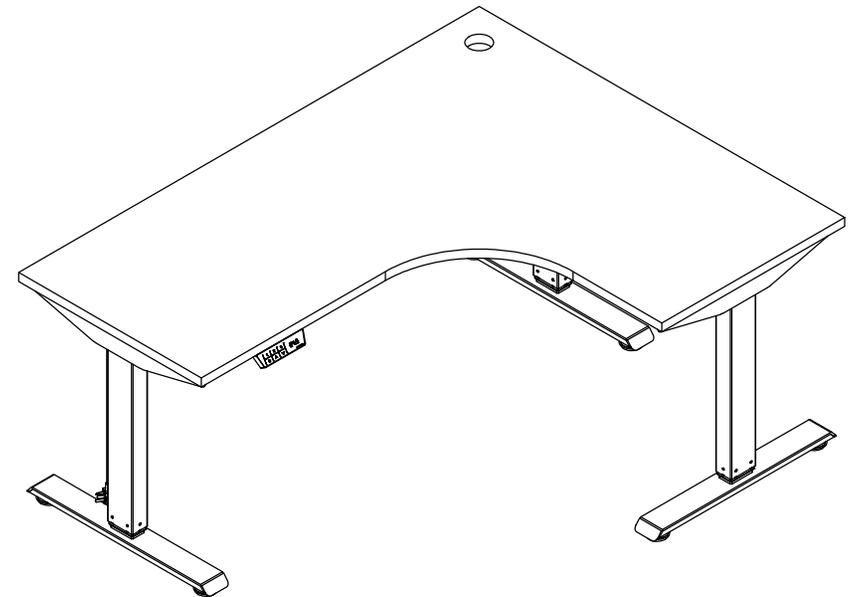

FRIANT & ASSOC.

4901 E.12 STREET OAKLAND, CA 94601
T:510.535.5113 · FAX:510.535.5237

www.Friant.com/systems/my-hite

Please Read Instructions Before Use
ASSEMBLY INSTRUCTIONS

Thank you for choosing Friant. We appreciate the trust and confidence you have placed in us and are committed to providing you the best possible product.

» **Introduction**

Friant offers a comprehensive line of office furniture for every space and requirement, now including My-Hite, a height adjustable table that allows for standing or sitting while working.

» **User Notes**

1. As with all power-operated products, please follow instructions and handle with care.
2. When moving My-Hite tables, please lift the tables, do not drag them.
3. Check that the load on the table does not exceed limits (220lbs straight, 330lbs corner).
4. Table should be level and aligned at all times.

Important:

When placing table in final location, be sure there is ample room for adjustment around ALL sides, and at the highest (50") and lowest (24.5") points the table can reach. Make sure table will not come into contact with any fixed objects (fixed tops, storage, shelving, etc.) while adjusting.

» **Tools Needed**



Single Sided Wrench



Socket Head Wrench



Electric Drill

WARNING:
FAILURE TO FOLLOW THE ASSEMBLY INSTRUCTIONS IN THIS MANUAL CAN RESULT IN PRODUCT DAMAGE, OR PERSONAL INJURY.

Friant & Associates, LLC does not assume any responsibility for product that is altered in any way.

1








1. Read instructions carefully. Check that no parts are missing.

2



2. Carefully identify each component, especially those that are similar. The most common mistake is mixing up the order and placement of parts.


Parts List

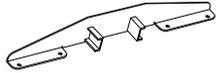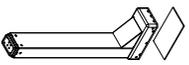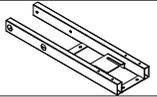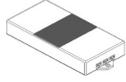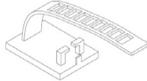PART#		NAME	PIECES
A		Side Bracket	3
B		Column Leg & Pad	3
C		Crossbeam	3
D		Center Rails	2
E		Control Panel	1
F		Control Box	1
G		Telescopic Cover Plate	1
H		Connector Wires	1 + 3
I		Feet	3
J		Socket Button Head Bolt M6*20mm	12
K		Socket Button Head Bolt M6*12mm	20
L		Wire Manager	4
M		Truss Head Screw M5*20mm	34

Installation Steps


Step 1: Place worksurface finished side down on a blanket.

Step 2: Insert **A** side bracket into **B** crossbeam assembly. Repeat on other sides.

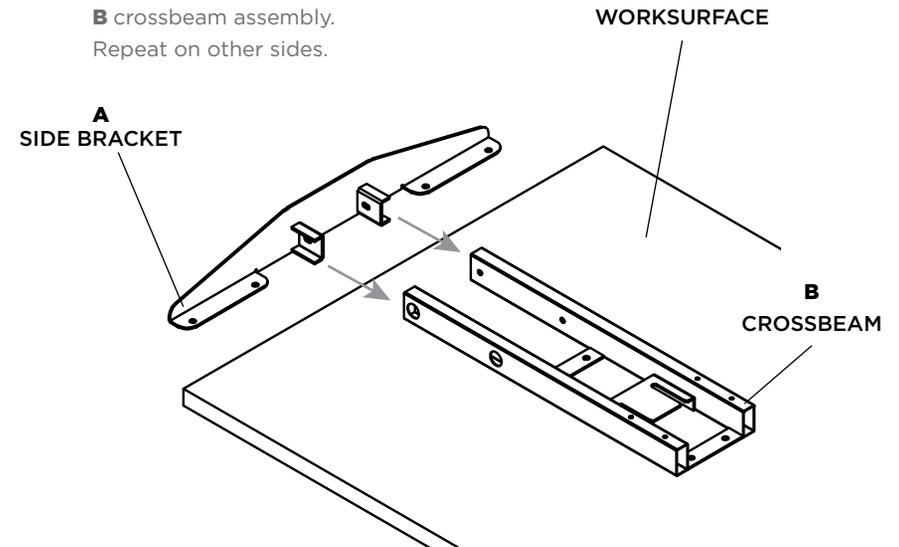


Step 3a: Insert pad into **B** crossbeam.

Step 3b: Insert **C** column leg into **B** crossbeam.

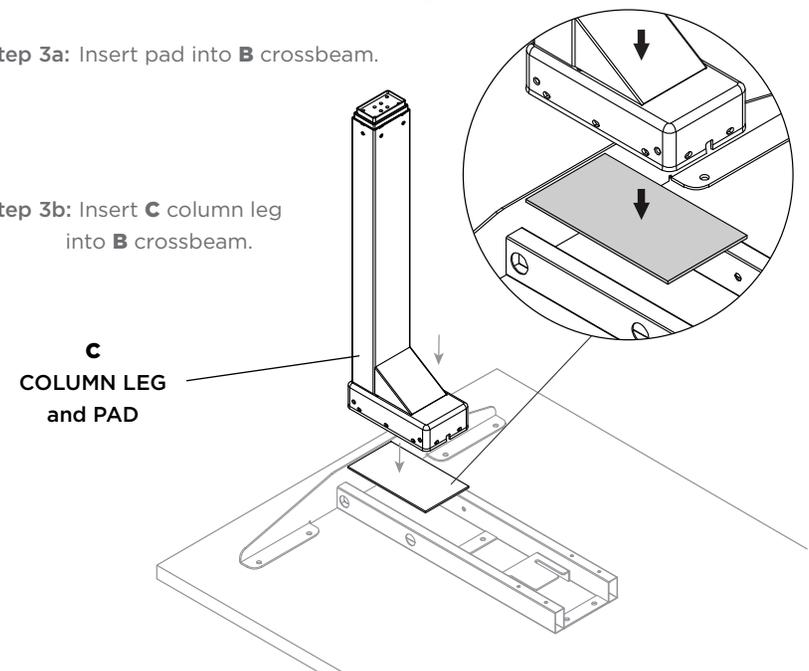


Installation Steps

Step 4: Use 4 socket button head bolts, M6*12mm to secure side bracket, column leg and crossbeam together as shown in detail.

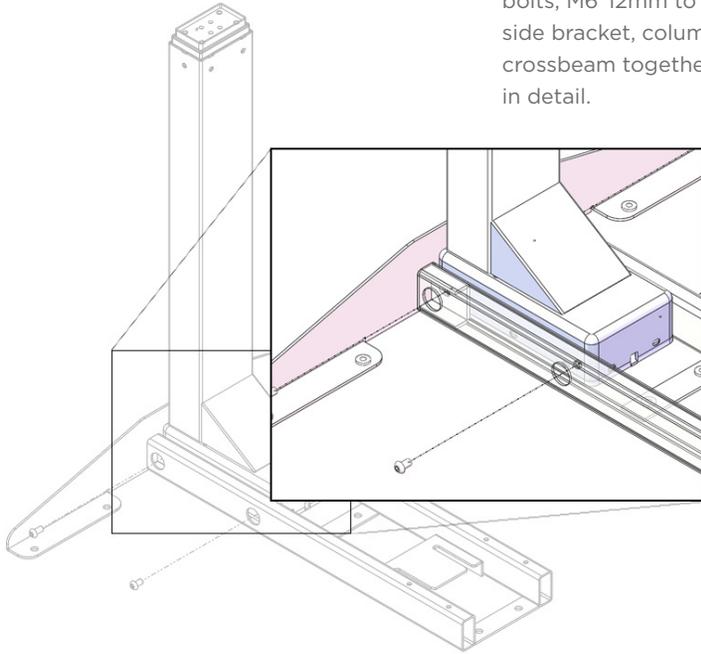

Step 5: Remove pad and repeat steps 3 & 4 with other two legs.

Step 6a: Attach **I** feet to **B** column leg with **J** 4 socket button head bolts, M6*20mm.

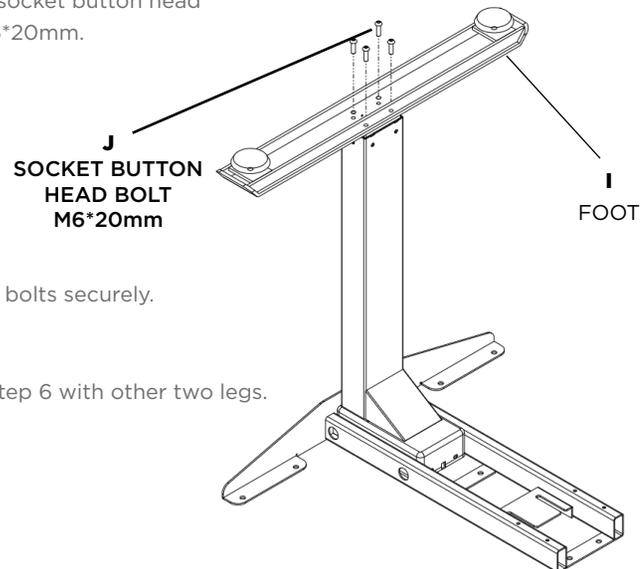


Step 6b: Tighten bolts securely.

Step 7: Repeat step 6 with other two legs.

IMPORTANT:

MAKE SURE COLUMN LEGS ARE SITTING PERFECTLY FLAT AGAINST THE WORKSURFACE

Step 8: Place all 3 leg assemblies on worksurface and insert **D** center rails into **C** crossbeams as shown. Hole on center rails should be centered between crossbeams. Center leg assemblies on the worksurface. Make sure your overhang is even on all three sides.

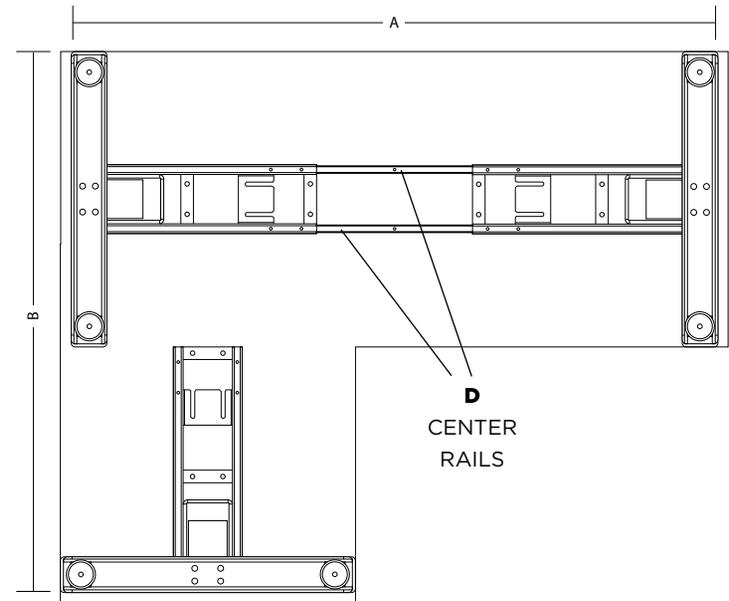

Base is: **A** - 40"-68"


B - 36"-54"

Maximum recommended top: 54"x78"


Minimum recommended top: 36"x40"

Installation Steps

Step 9: Secure **D** center rails to **C** crossbeams with **K** 8 socket button head bolt M6*12mm.

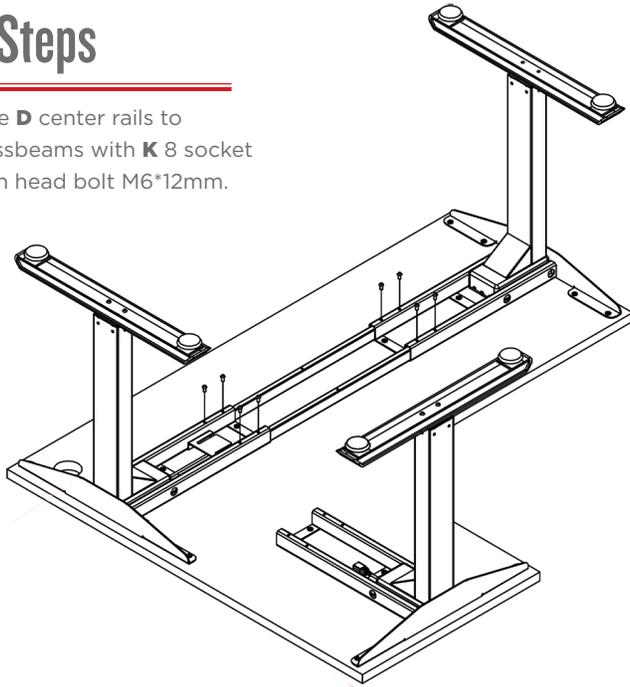


Step 10: Ensure the leg assembly is still centered, both side-to-side and front-to-back. Secure the leg assembly to the worksurface with **M** 12 truss head screws M5*20mm.

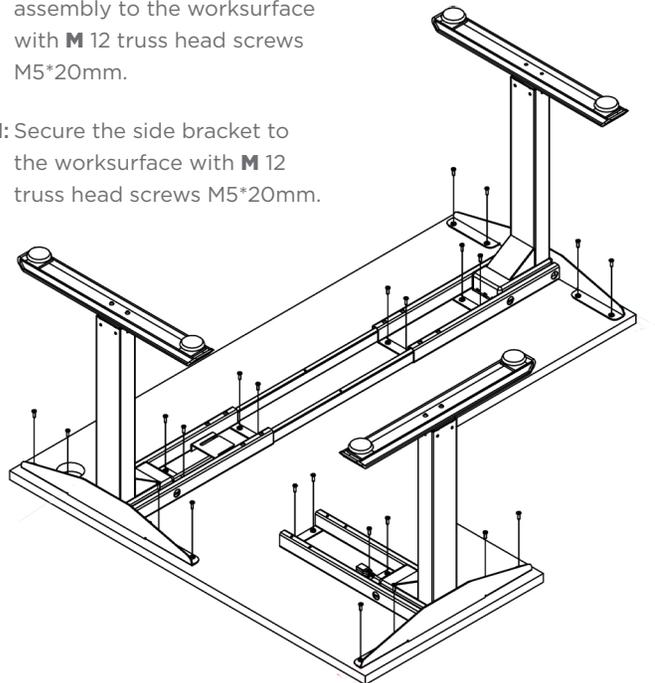

Step 11: Secure the side bracket to the worksurface with **M** 12 truss head screws M5*20mm.


Step 12: Secure the **E** control panel in the desired location with **M** 2 truss head screws M5*20mm.

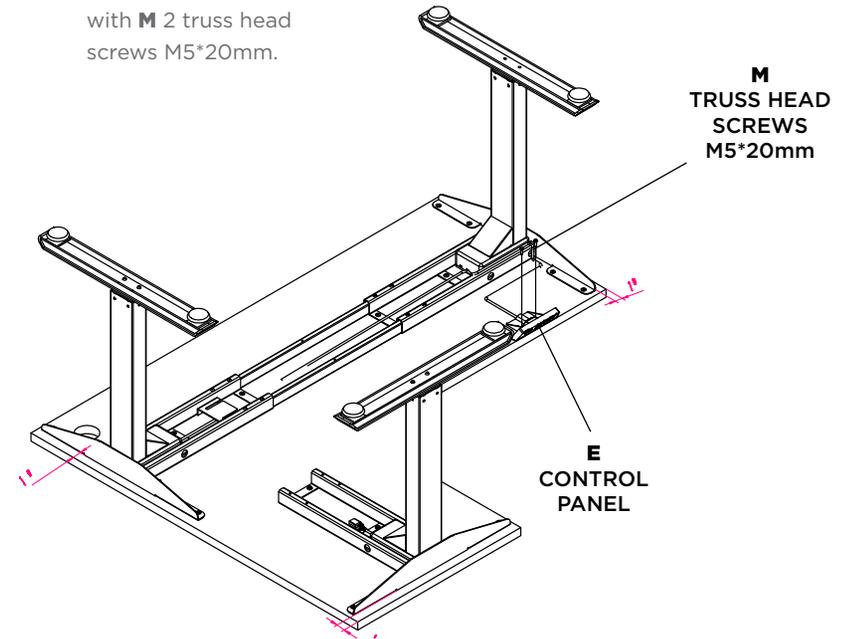


Installation Steps

Step 13: Insert the **F** control box in-between crossbeams.


Step 14: Connect **E** control panel to **F** control box with **H** connector wires. Use **L** wire manager to secure **H** connector wires to underside of worksurface.

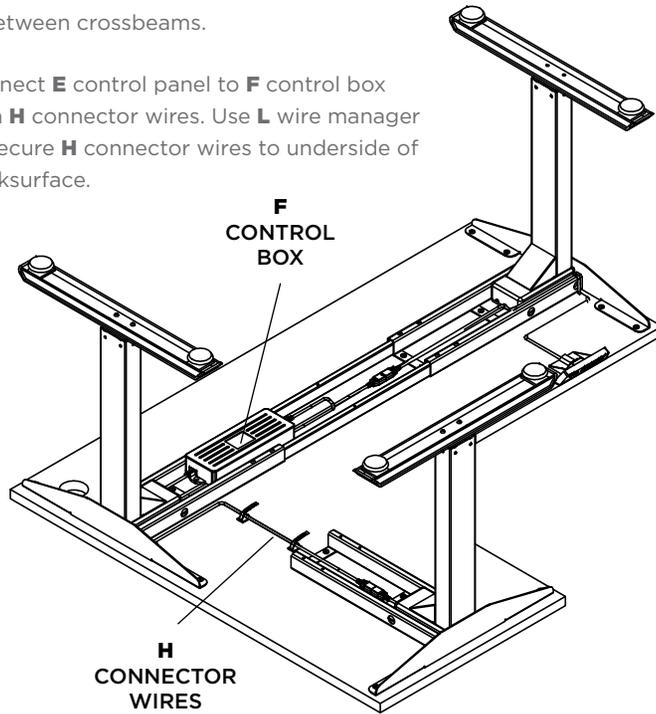

Schematic view of the My-Hite wiring:

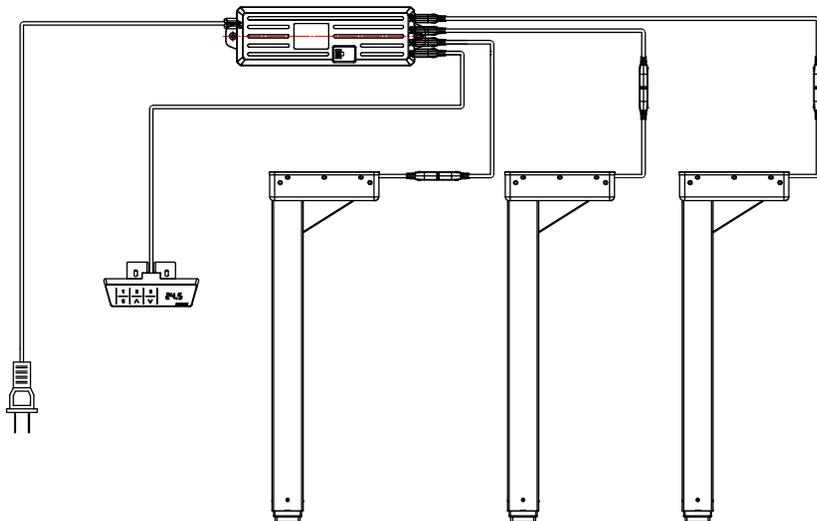


Step 15: Install the **G** telescopic cover plates, leaving exit space for the electrical power cords, and secure to worksurface with **M** 8 truss head screws M5*20mm

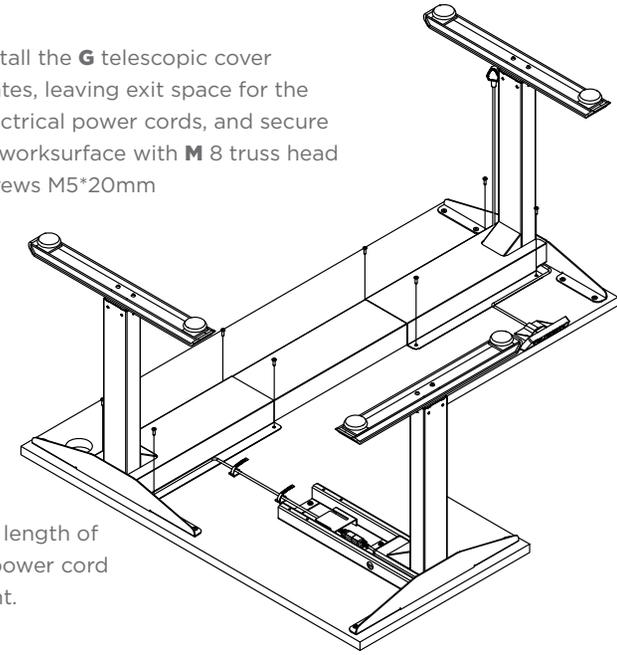


Insure the length of exposed power cord is sufficient.

Step 16: Turn table right side up, adjust the glides as necessary, and plug the power cord into a 110v outlet.

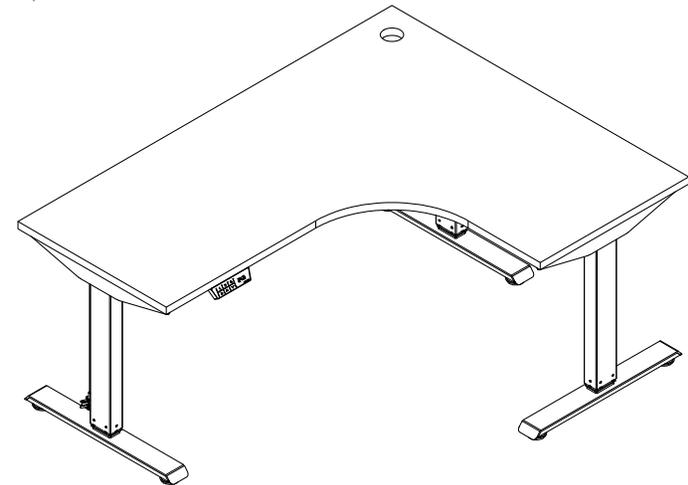

Make sure the length of the plug-in cord is appropriate to both reach the outlet, AND for the distance the table will travel up and down. Range: 24.5" at lowest to 50" highest.

FIRST TIME USE:

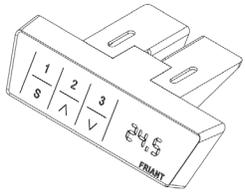

Step 17: It is important to perform the reset operation below before you use your My-Hite table for the first time.

RESET OPERATION

1. Lower the table to 24.5" by holding arrow down (V) button. Release button.
2. Press the arrow down (V) button again and hold til ASR shows on the display.
3. Release the button and the ASR will flash on the display
4. Hold the arrow down button again. Table will shift up and down slightly as it resets to 24.5".

NOTE: If you cannot lower the table to the 24.5" height to perform reset operation, you may need to clear out the maximum and minimum height (See instructions below). Once completed, please return to the Reset Operation instructions.

TROUBLESHOOTING MY-HITE

Error code	Explanation	Cause	Solution
H01	Motor has overheated	Overuse	<ol style="list-style-type: none"> 1. Let motor rest of 10 minutes 2. Perform reset operation 3. if problem persists contact Friant customer service
ASR or RST (solid or flashing)	System is locked	Various Reasons	<ol style="list-style-type: none"> 1. Remove plug from electrical outlet for 15 seconds, then plug unit back in 2. Perform reset operation 3. if problem persists contact Friant customer service to replace control panel
No display	Control Panel has lost power	Disruption in power supply to base	<ol style="list-style-type: none"> 1. Remove plug from electrical outlet for 15 seconds, then plug unit back in 2. Perform reset operation 3. if problem persists contact Friant customer service to replace control panel
E01, E02, or E03	Excessive weight distribution	Too much weight (limit exceeded) or Other problem	<ol style="list-style-type: none"> 1. Check that weight on table does not exceed limit 2. Perform reset operation 3. if problem persists contact Friant customer service to replace control panel
E07, E08, or E09	Signal Interruption	Signal is interrupted between leg and computer	<ol style="list-style-type: none"> 1. Perform reset operation 2. if problem persists contact Friant customer service

GENERAL TIPS

Follow assembly instructions closely

Do not overload the tables (220 lbs maximum straight, 330 lbs maximum corner)

The input voltage should be within 108-132V

Use the glides to properly level the table before use

When moving the table, do not tilt the table on one leg or misalignment may occur

Before first use, perform reset operation

If, after trouble shooting the problem persists, contact Customer Service for further assistance.