

SIDE VIEW

Adjust the Back

Two buttons easily release the back from its inward position. The ratchetback mechanism gives you the choice of a normal back position for sitting fully on the seat or the far forward position for sitting midway on the chair.

Adjust the Lumbar Support

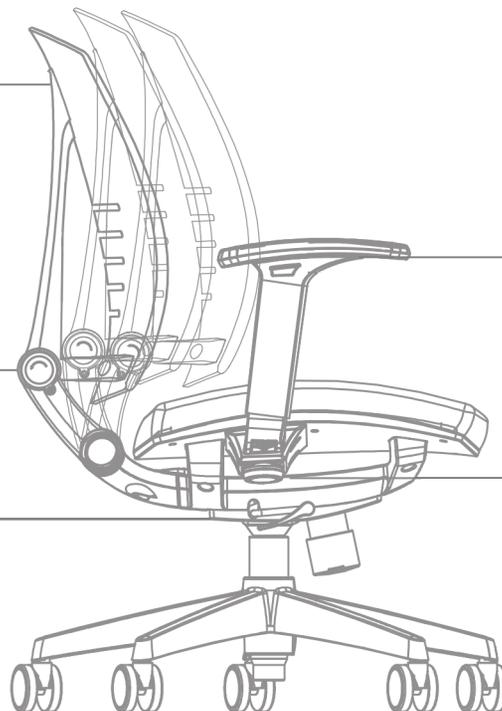
There are three gears to adjust the lumbar support in the direction of the arrows.

Adjust the Seat

Seat Height/Tilt Lock lever raises or lowers the seat to desired height and locks seat into starting position in one convenient mechanism.

To raise, simply pull upward on lever until the seat reaches a comfortable height. To lower, lift upward on the lever while seated and release to lock seat into desired position. To lock chair, tilt into starting position and push lever inward.

To release tilt lock mechanism and free-float, simply pull lever outward.

**Adjust the Armrest Height**

To increase or decrease arm height, press on the button.

Adjust the Armrest Width

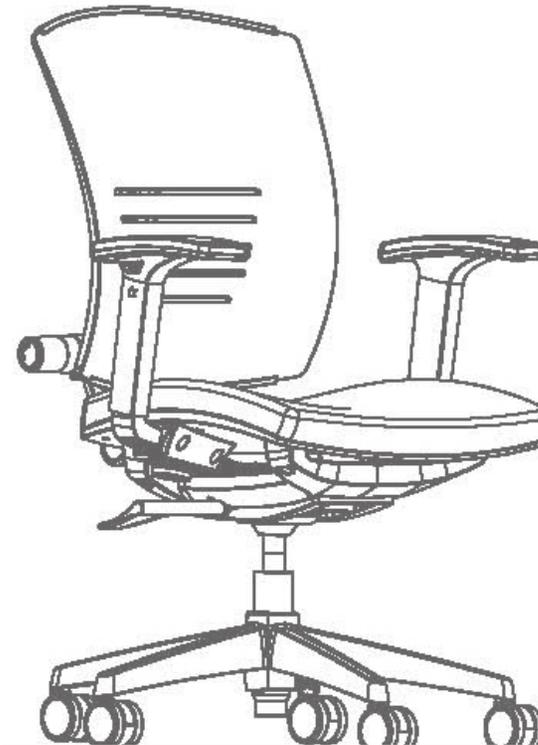
Push down on the lever located under the seat to unlock width adjustment. Move the arm to the desired width and pull up on the lever to lock the arm in place.



NOTE: Carefully check all parts according to the instructions before assembling. Please assemble carefully to avoid scratching surfaces, especially powder-coated surfaces.

Parts & Hardware

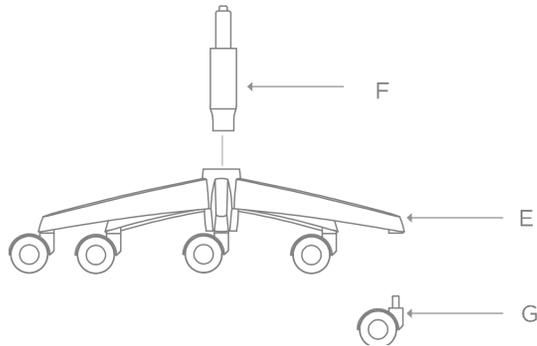
Item	Parts	Qty.
A	 Back Support	1
B	 Seat Plate	1
C	 Armrest L/R	1 ea
D	 Width Button (207 adjusted armrest)	2
E	 Base	1
F	 Gas Lift	1
G	 PU Caster	5
H	 Allen Screws	4
I	 Allen Wrench	1



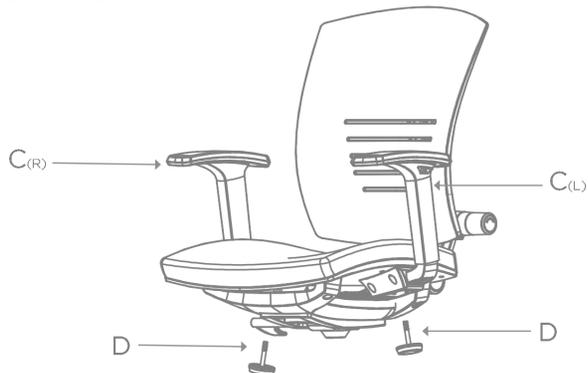
ASSEMBLY GUIDE

1. Assemble the Base, Casters & Gas Lift

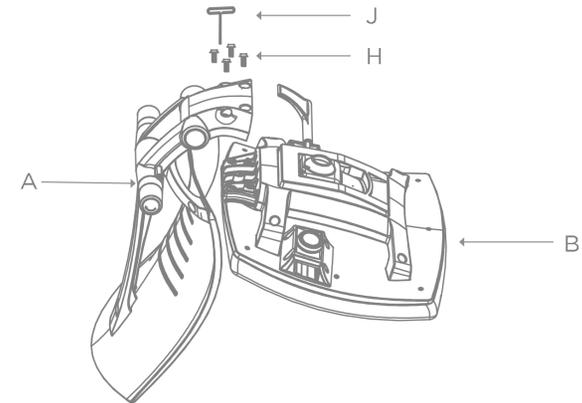
Insert 5 casters [G] into the base [E]. Push hard until you feel or hear the casters snap into place. With the base upright and casters on the floor, insert the gas lift [F] into the base. Place the assembled seat on top of the gas lift and apply downward pressure.

**3. Assemble the Armrest & Seat Cushion**

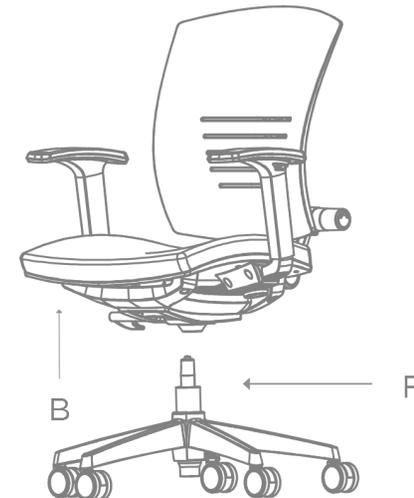
Attach armrests [C] to the seat cushion [B] with the arrow pointing towards the width button [D] of the 207 armrest, locking the armrest to the seat cushion.

**2. Assemble the Seat Plate & Back Support**

Attach the back support [A] into the seat place [B] using four allen screws [H]. Fully tighten screws using the allen wrench [I].

**4. Assemble the Seat Plate & Back Support**

With the base [E] upright and casters [G] on the floor, insert the gas lift [F] into the base. Place the assembled seat on top of the gas lift and apply downward pressure.



PRODUCT DIMENSIONS

