


## FRONT VIEW

Backrest can be pulled up and down. Raise the backrest to the top position when you would like to adjust it to the initial position

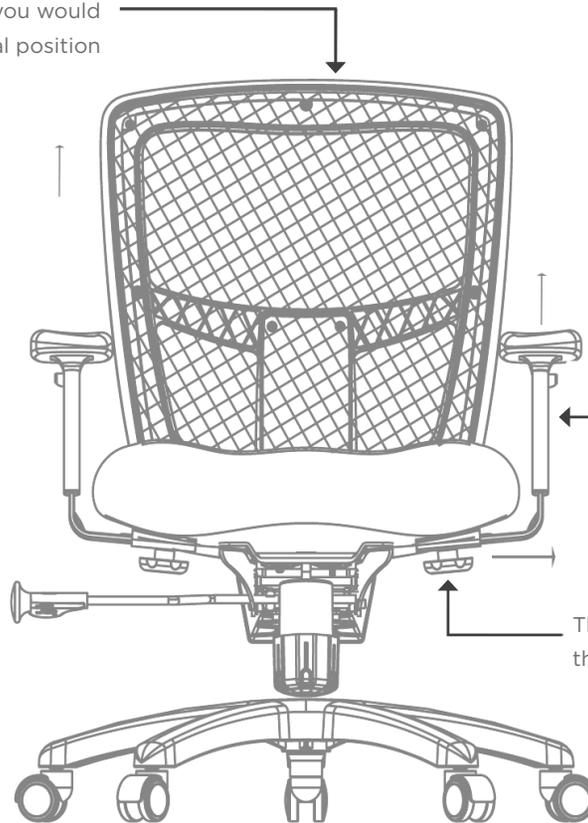

Press this button to adjust the up and down of the armrest

Turn this button to adjust the up and down of the seat. Pull the handle to release the back tilting lock or unlock function

The lock button can adjust the armrest width



**NOTE:** Carefully check all parts according to the instructions before assembling. Please assemble carefully to avoid scratching surfaces, especially powder-coated surfaces.


## Parts & Hardware

Item	Parts	Qty.	Item	Parts	Qty.
A 	Back Assembly	1	I 	Inner Hexagon Screw 5/16" x 3/4"	3
B 	Seat Assembly	1	J 	Flat-head Inner Hexagon Screw 1/4" x 7/8"	4
C 	Mechanism	1	K 	Flat Pad 16 x 8.3 x 2.0mm	7
D 	Armrest L/R	1	L 	Wrench M5 - 25 x 64	1
E 	Gas Lift	1	M 	Dust Cover	1
F 	Base	1			
G 	Caster	5			
H 	Adjusted Width Button	2			

# ASSEMBLY GUIDE


## 1. Assembling the Caster & Base

Insert five casters [G] into the base [F]. Push hard until you feel or heard the cast-er snap into place.

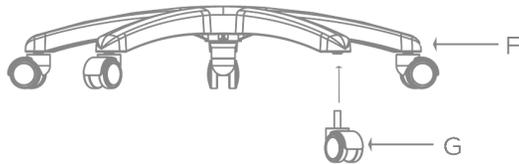


## 2. Assembling the Base, Gas Lift & Dust Cover

Insert the gas lift [E] into the base [F], then put the dust cover [M] on the gas lift.

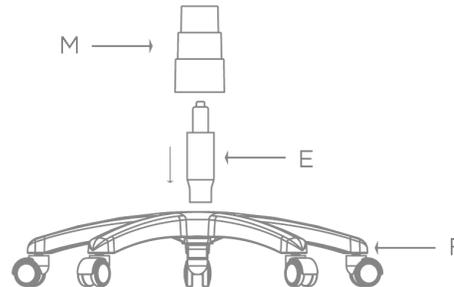


## 3. Assembling the Seat Assembly & Mechanism

Keep the seat assembly [B] on a table plane first. Then insert the mechanism [C] into the seat assembly. Be sure all four holes are in the right place, then fix the flat-head inner hexagon screw [J] and flat pad [K] into the seat assembly by wrench [L].

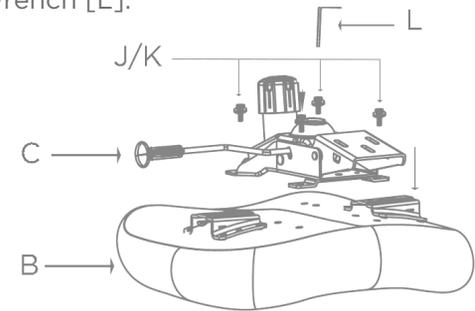


## 4. Assembling the Seat & Back

Keep the seat assembly [B] on a table plane first, then insert the back assembly [A] into the seat assembly. Be sure all three holes are in the right place, then fix the seat assembly with inner hexagon screw [I] and flat pad [K] by wrench [L].

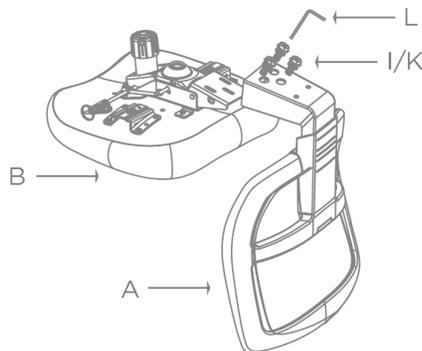


## 5. Assembling the Armrest & Seat

Insert the lower part of the armrest [D] into the seat assembly [B] then lock it with the adjusted width button [H].

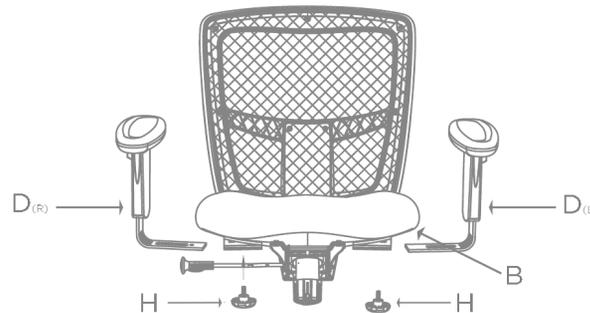

## 5. Assembling the Seat & Gas Lift

Insert the seat assembly [B] into the gas lift [E].

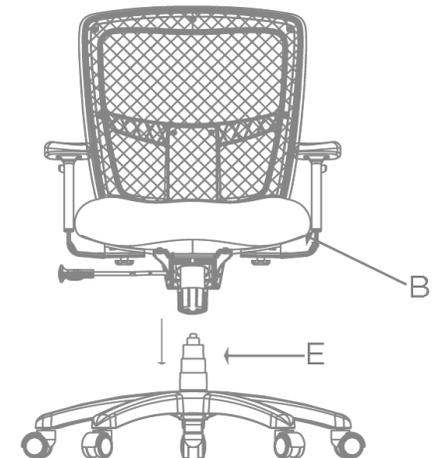

# PRODUCT DIMENSIONS

