
 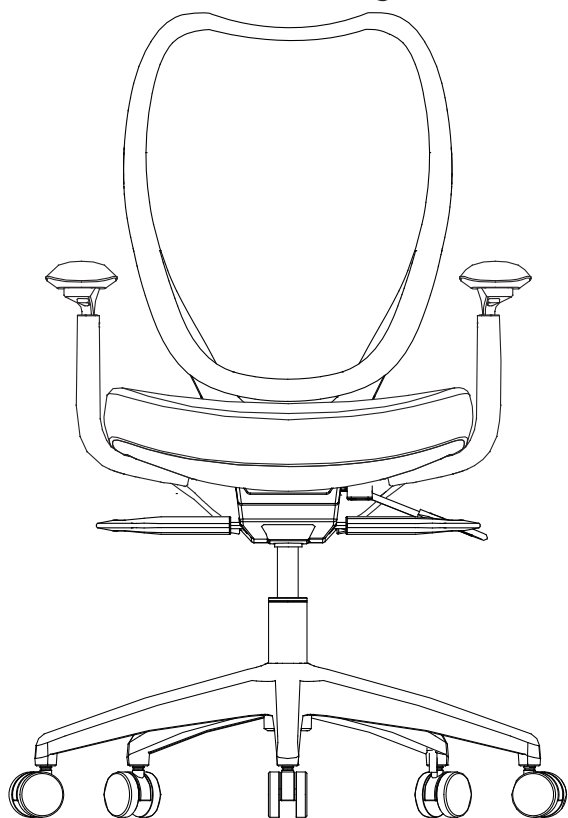
 


Zenith Assembly Instructions




CAUTION:


- Handle unassembled parts carefully.
- Hand tighten before fully securing the bolts

Parts List		QTY
A		1
B		1
C		1
D		5
E		1
F		1
G		1
H	M6*45mm 	4
I	M6*50mm 	6
J	M8*20mm 	3
K	M8*ø17 	13
L	M8*φ14*2mm 	3
M	M6 	1


Step 1: Assemble base

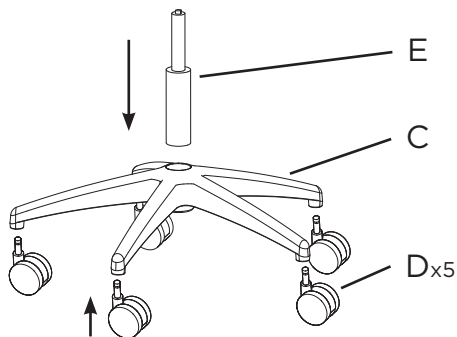


Step 2: Attach arms to seat

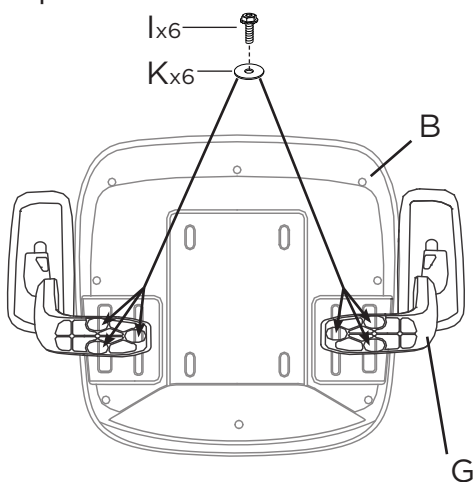


Step 3: Attach mechanism

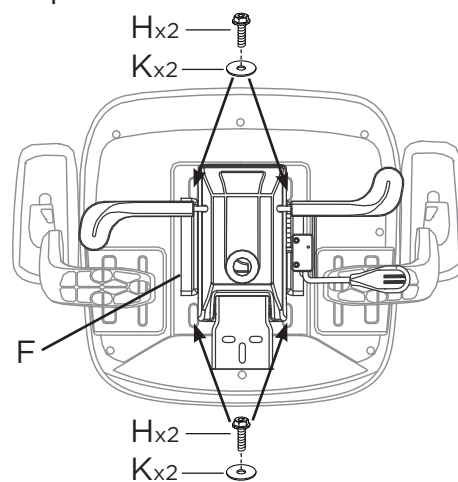

Step 4: Attach back

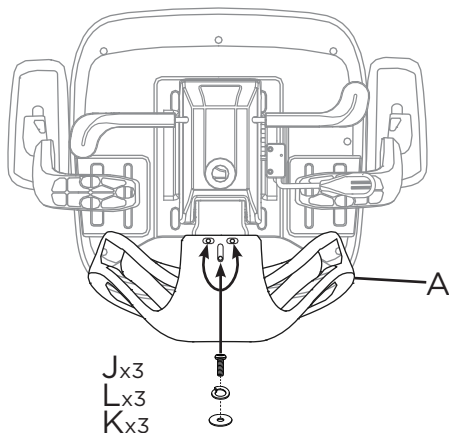


Step 5: Attach chair to base

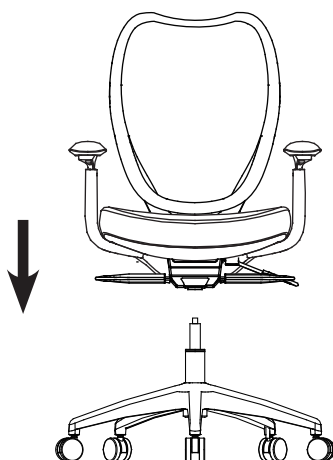

Step 6: Complete



Zenith Features

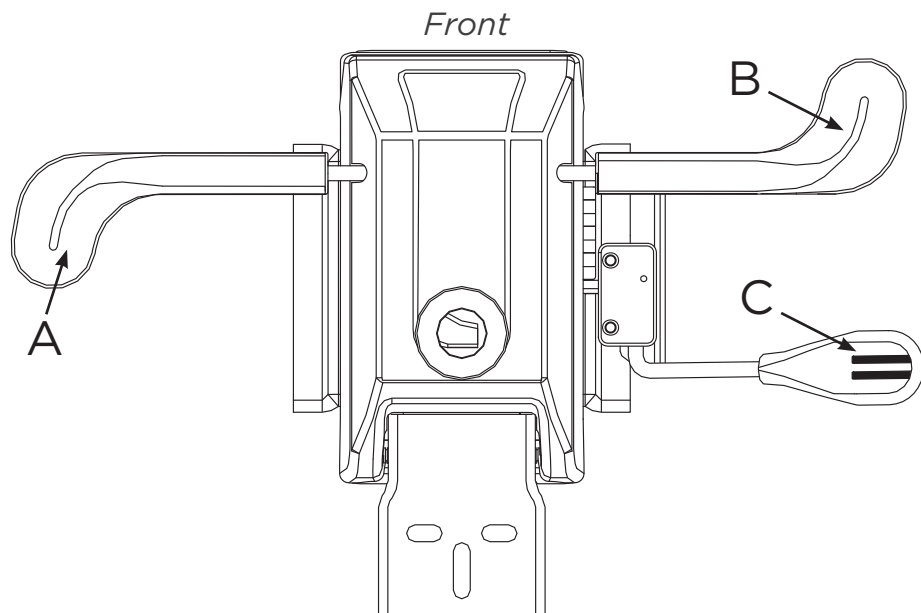

- Handle **A** adjusts the height of the chair.
- Handle **B** allows for adjusting and locking the seat and backrest angles.
 - The adjustment angle for the seat ranges from 2° to 7°
 - The adjustment angle for the backrest ranges from 90° to 125°
- Handle **C** adjusts the seat sliding plate.
 - The slide plate has a distance of 58mm and 5 locking positions.

Armrest adjustments

