


FPWR.DM-1: DESK MOUNT POWER UNIT INSTALLATION

CLAMP INSTALLATION

Tighten the screws to secure the power unit clamp arms.



NOTE: Do not remove the adhesive backing on the bottom of the power unit when installing the clamp

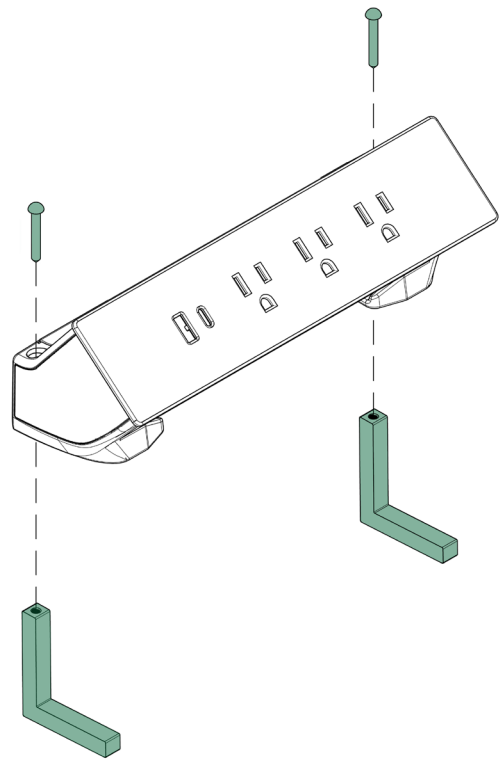


ADHESIVE INSTALLATION

Remove the adhesive backing and firmly press the power unit down onto the desk.



NOTE: Make sure the power unit is properly aligned on the desk before firmly securing the adhesive.

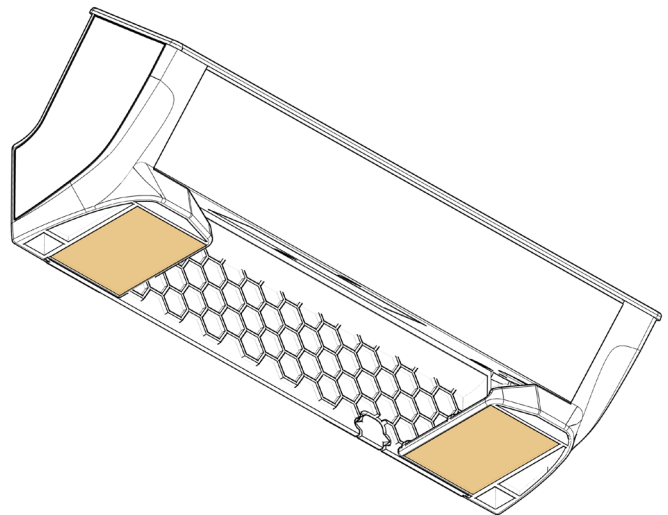

Underside view