



Worksurface Mounted Privacy Screen with Flush Brackets INSTALLATION INSTRUCTIONS

STEP 1. Prepare flush brackets by sliding the screen pad inside the bracket and attaching the worksurface pad (use with 1" thick worksurfaces only).

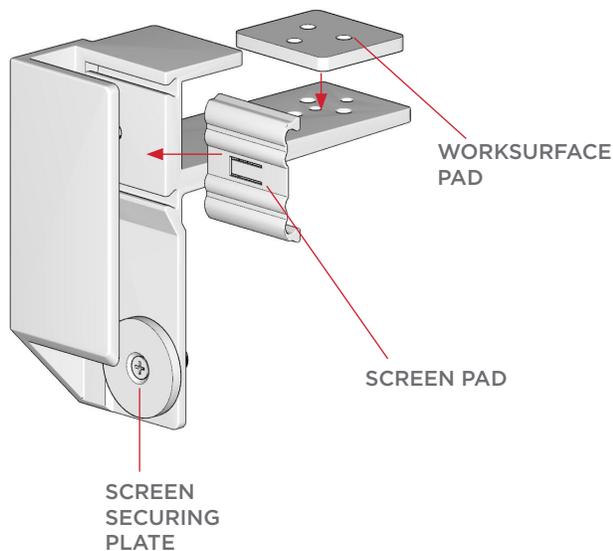


STEP 2. Pair of brackets are provided, for each privacy screen.


NOTE: Worksurface pads insert applicable for installation onto 1" thick worksurfaces only. Remove insert for installations onto 1¹/₈" thick worksurfaces.

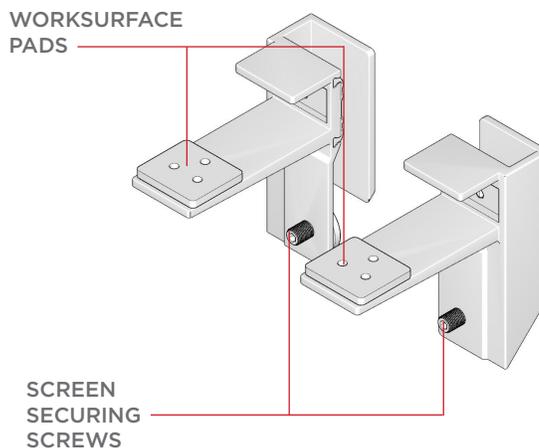

STEP 3A. Align the flush brackets on each side of the privacy screen. Insure that they are leveled.

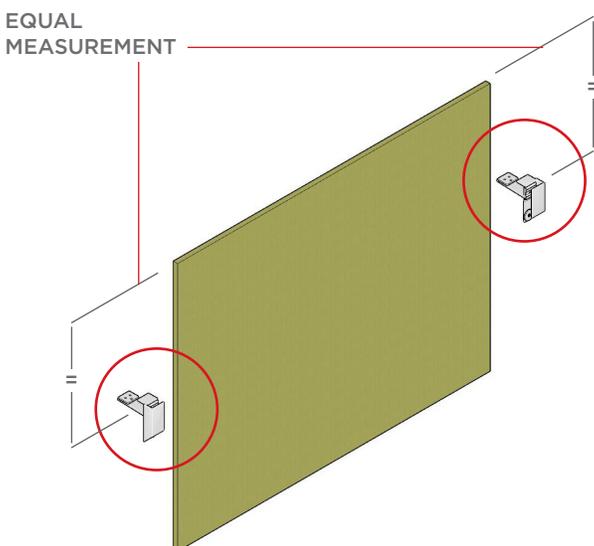


STEP 3B. Slide the flush brackets onto the privacy screen.

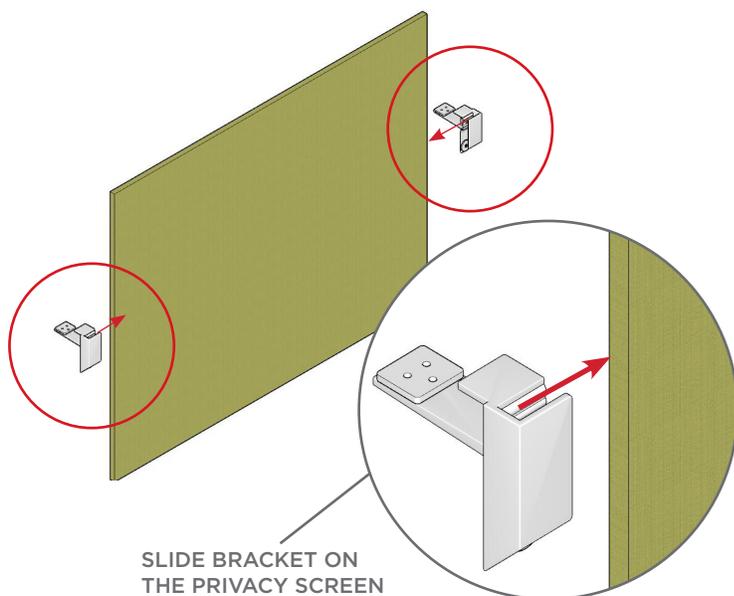


Worksurface Mounted Privacy Screen with Flush Brackets INSTALLATION INSTRUCTIONS


STEP 4. Insure the brackets are leveled. Secure by tightening the screen securing screws.

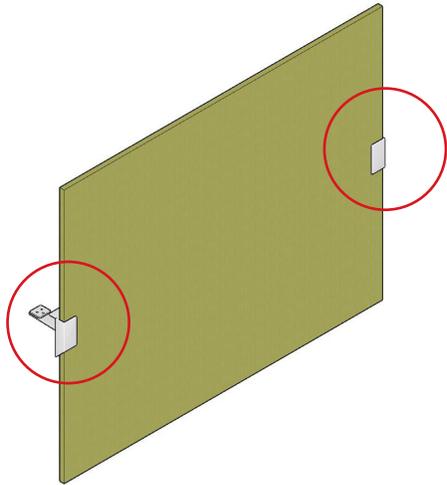

STEP 5. Slide the privacy screen in between the worksurface and legs.

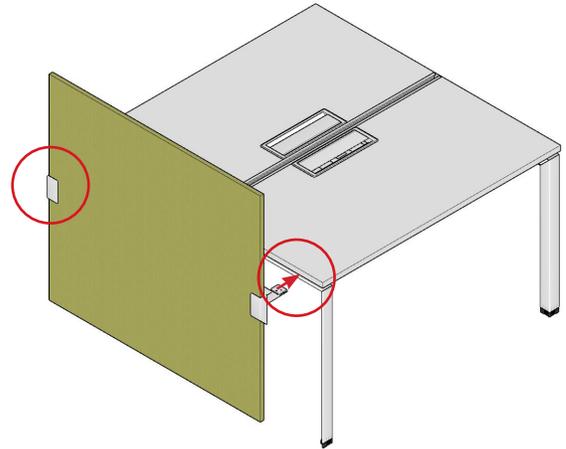

STEP 6. Secure privacy screen with brackets to worksurface with (3) screws on each bracket.

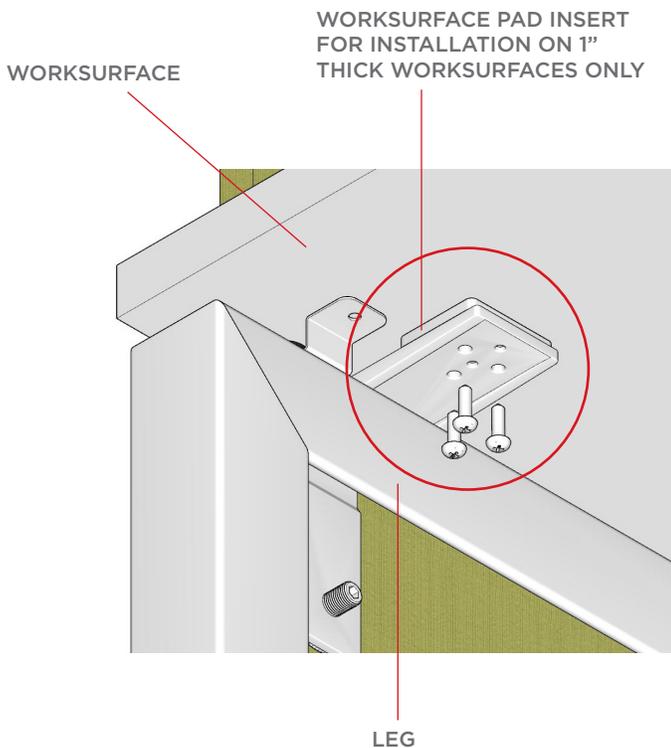

STEP 7. Finsihed installation of the privacy screen with flush brackets to a worksurface.

