

DASH INSTALL FAQ

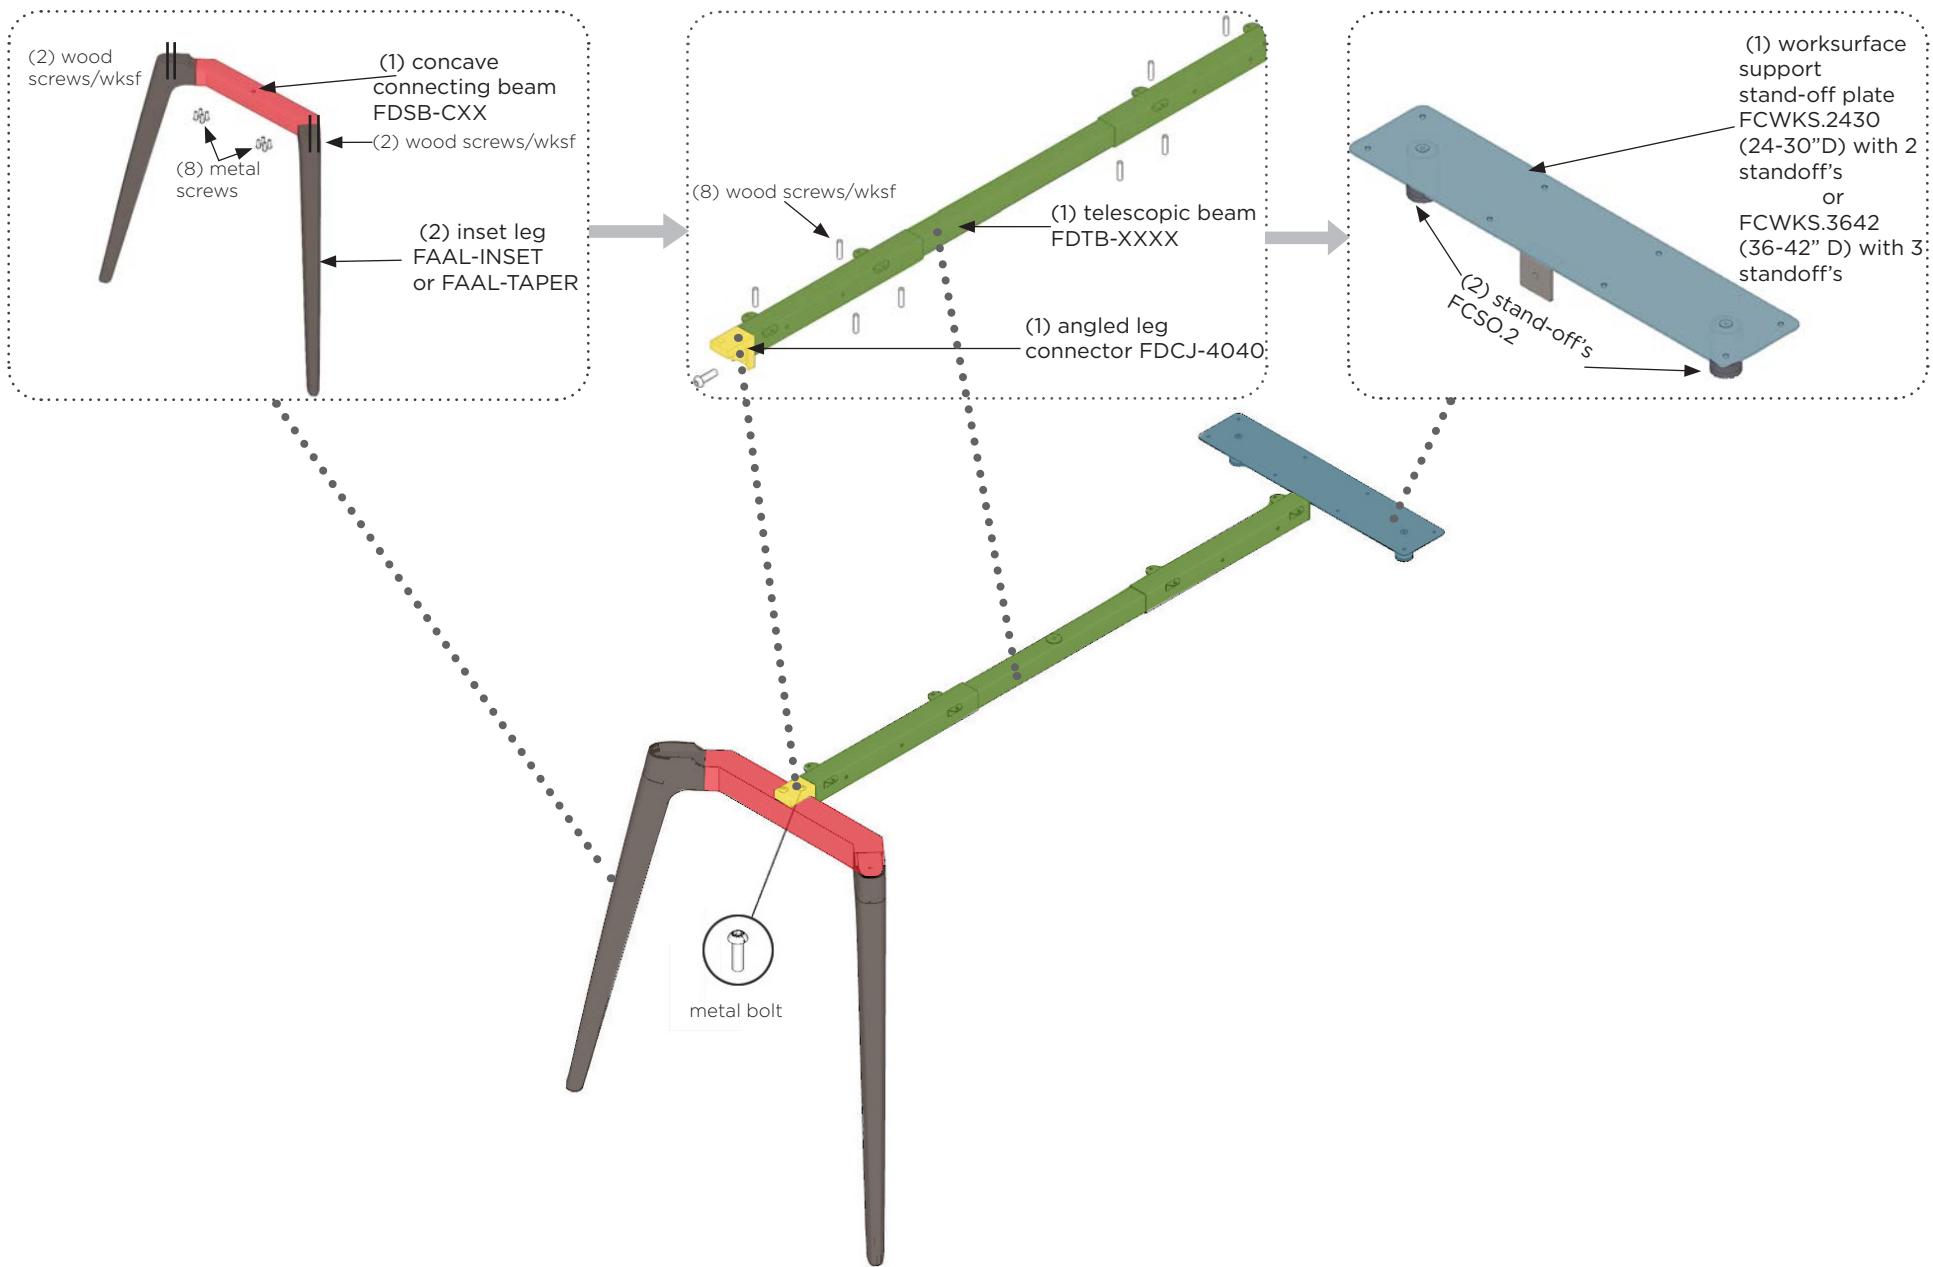


TABLE OF CONTENTS

Resting Tabletops		Dash Casegoods	
Concave Connecting Beam	3	Desk Shell	25
Straight Connecting Beam	4	Return Shell	26
Post Legs	5	Open Bridge	27
		Desk Shell and Return	28
Freestanding Tabletops		Storage	
Concave Connecting Beam	6	Hutch Overhead	29
Straight Connecting Beam	7	Shared Hutch Overhead	30
Post Legs	8	Wall Mounted Overhead	31
		Wall Mounted Tackboard	33
Return Tabletops		Interra Connectors	
Concave Connecting Beam	9	Credenza Brackets	34
Straight Connecting Beam	10	Panel Mount Kit	35
Post Legs	11		
Resting Bridge Tabletop		Components	
Inset/Taper Legs	12	Modesty Panel	36
Post Legs	13	Privacy Screen	37
Freestanding Bridge	14	Credenza Feet Installation	38
Conference Tables		Credenza Feet Matrix	39
Round and Square Tables with Inset/Taper Legs	15		
Round and Square Tables with Post Legs	16	Electrical Distribution	
		Credenza Power: Single Circuit	40
Dash 2 Stage		Credenza Power: Four Circuit	41
Leg Encasement	17	4 Circuit Wire Diagram	42
Fixed Modesty	19	Chicago Power Box	43
23"H Credenza	20		
Corner Encasement	22		
		Image Key	44


Resting Tabletops

Concave Connecting Beam, for use with 26" high credenza




Resting Tabletops

Straight Connecting Beam, for use with 26" high credenza

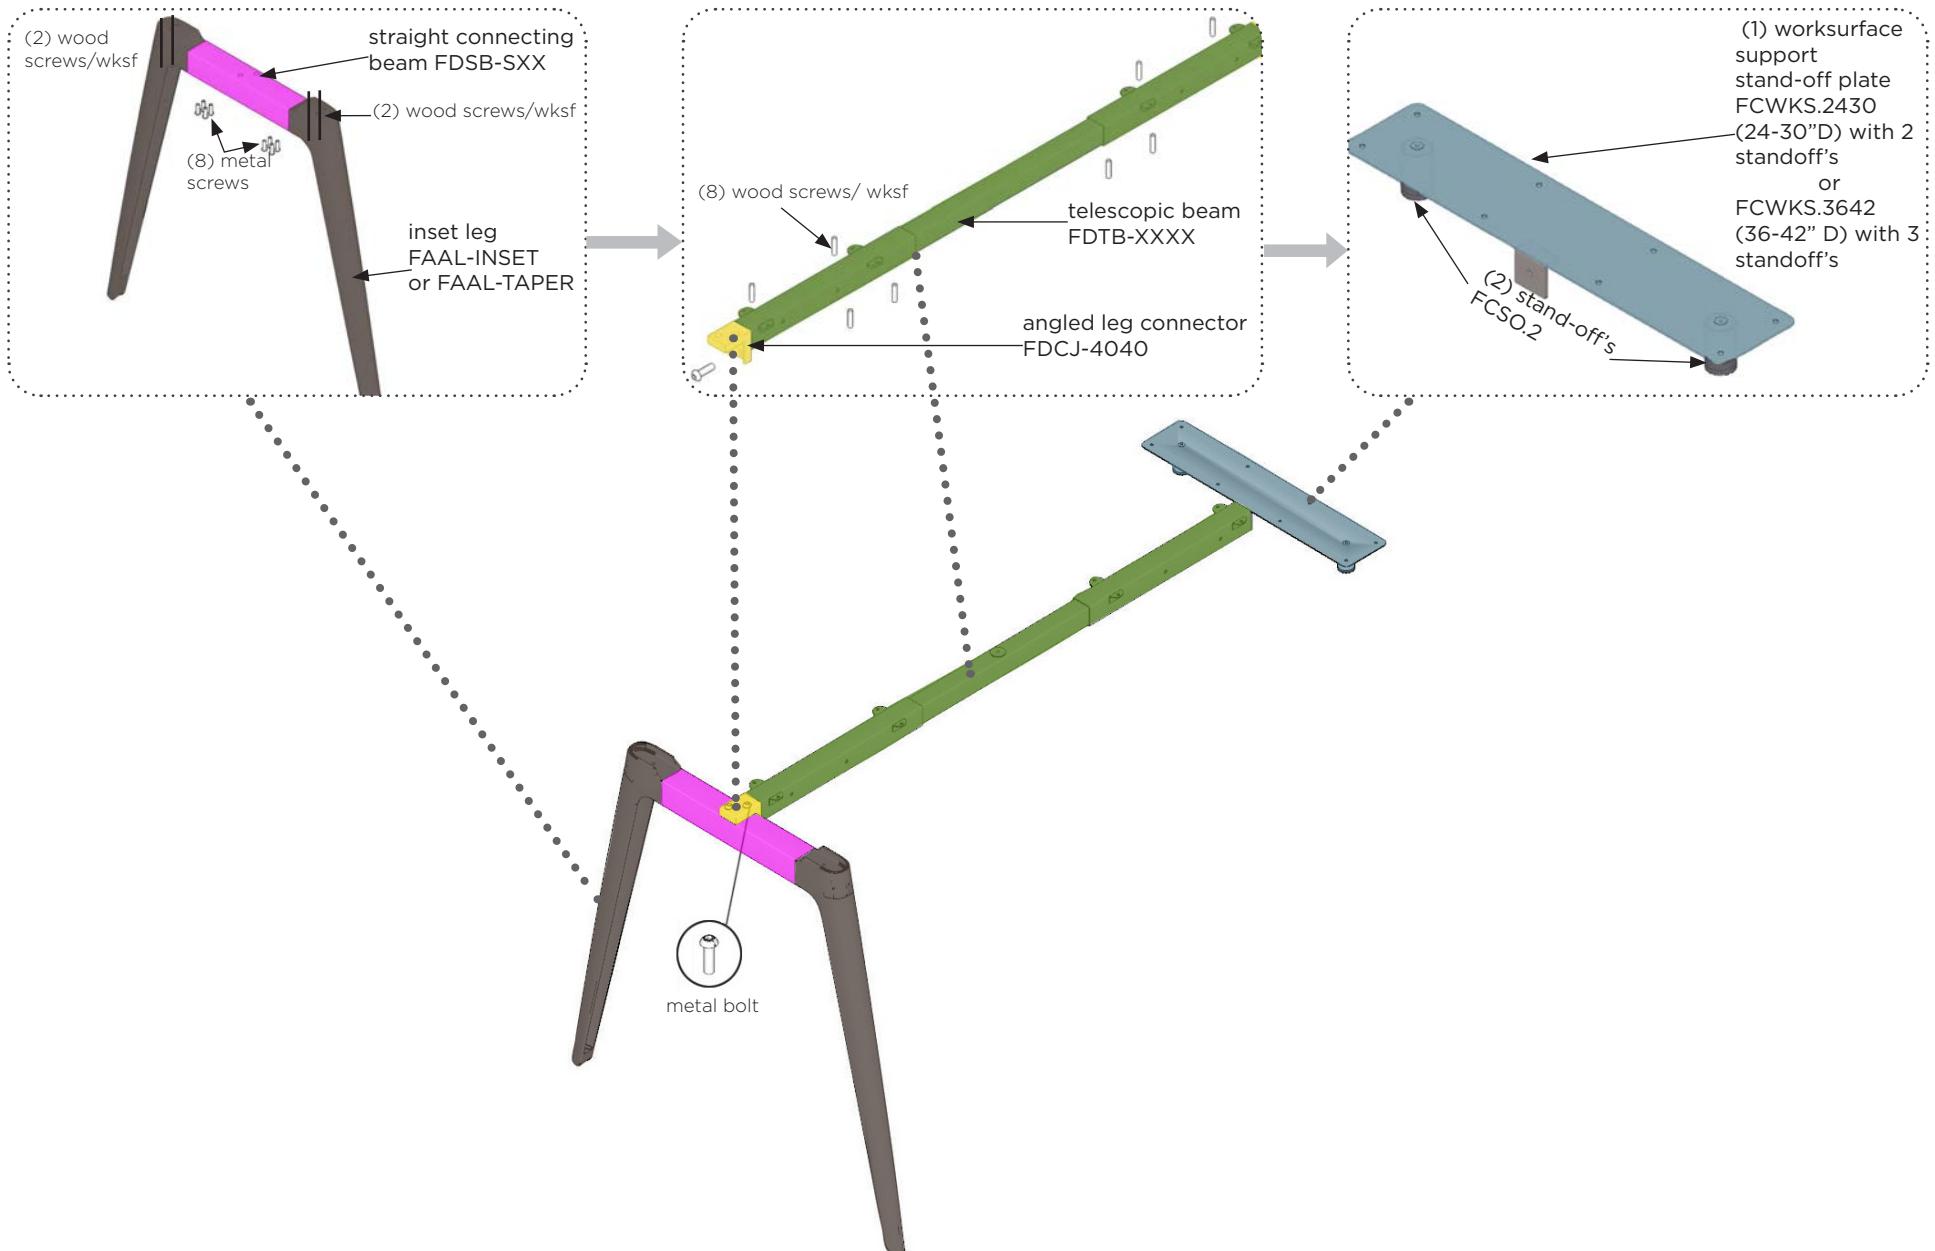


Resting Tabletops

Post Legs, for use with 26" high credenza

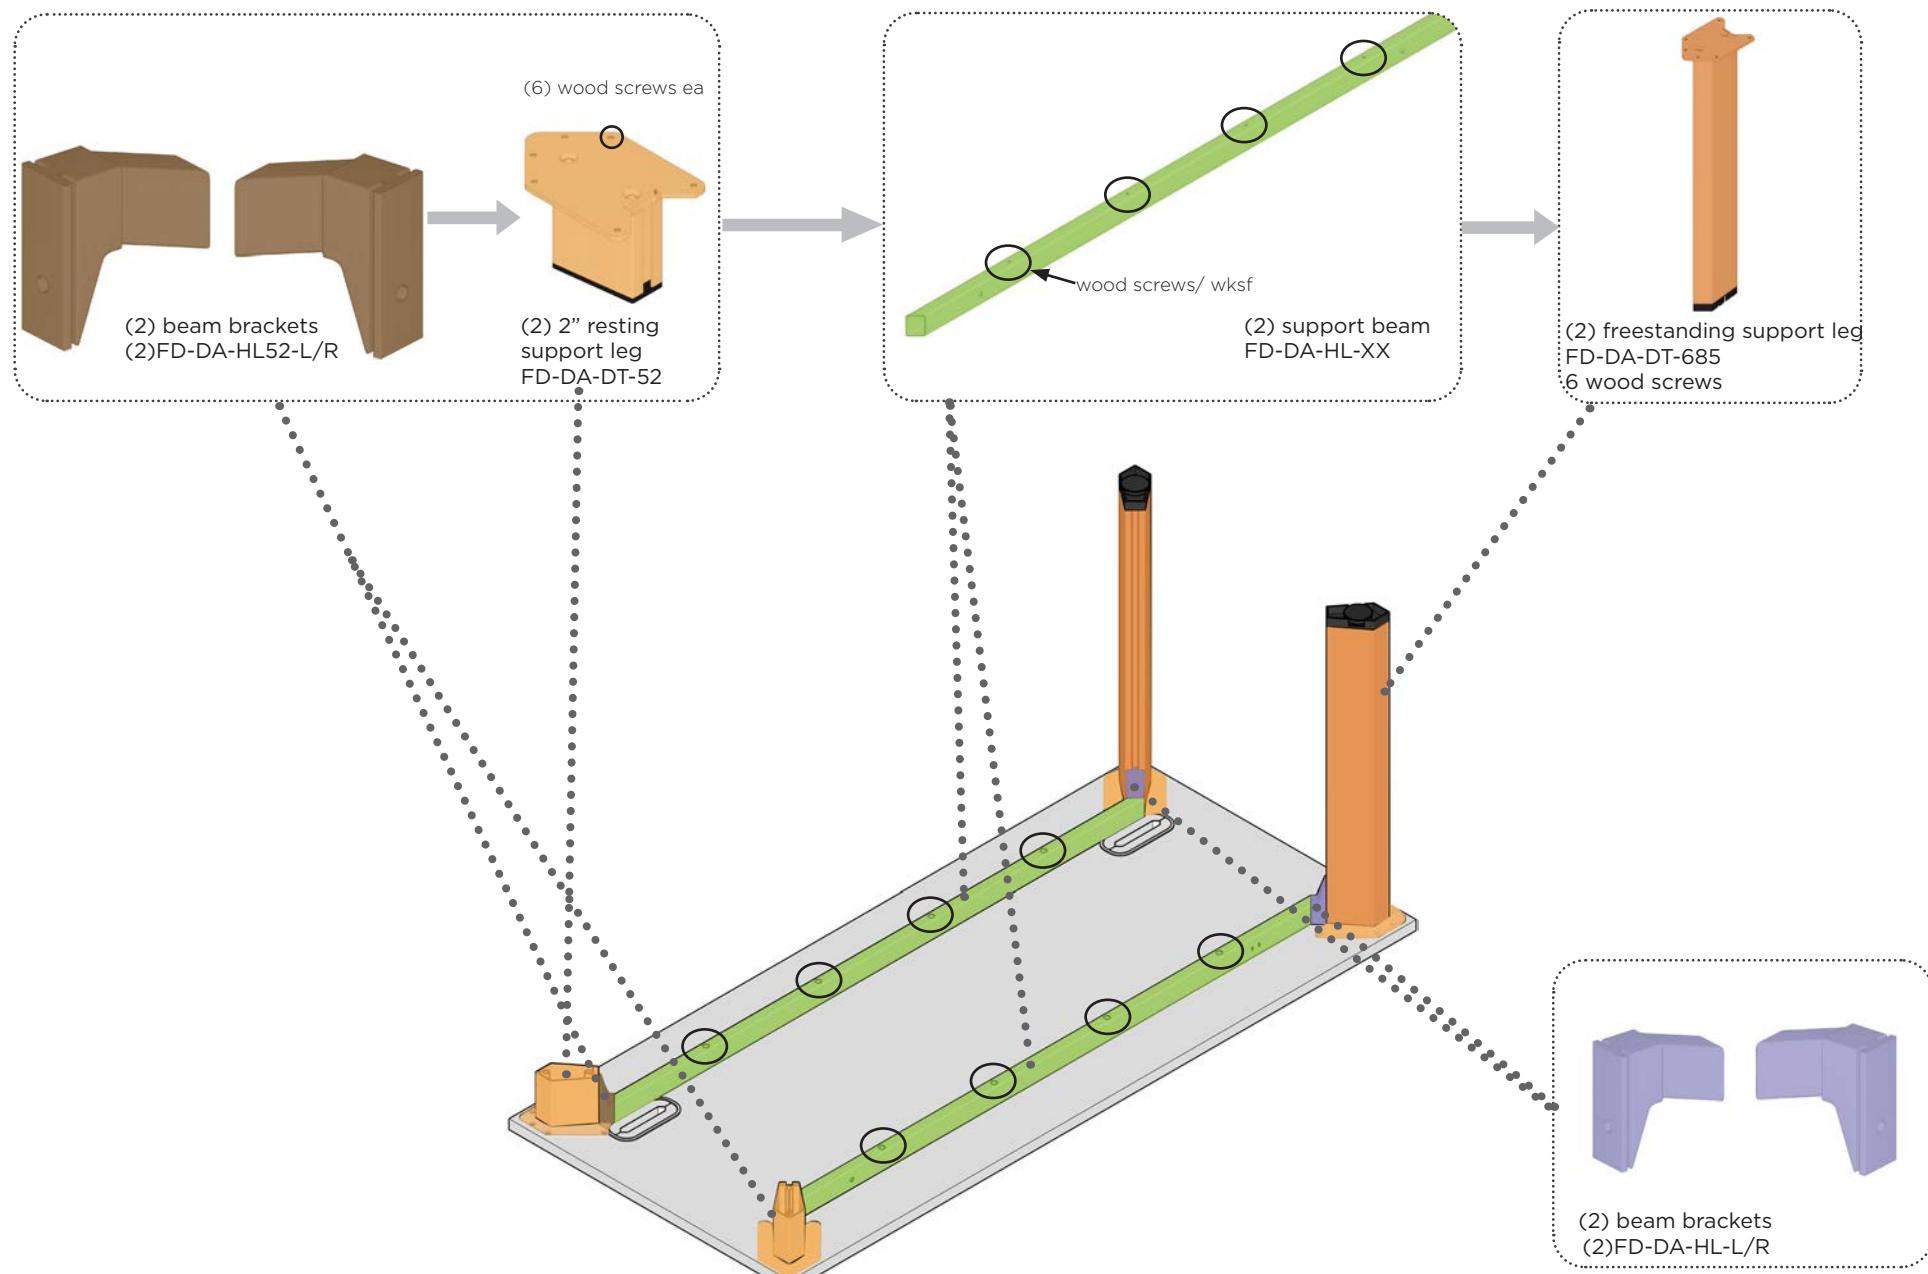


Freestanding Tabletops

Concave Connecting Beam

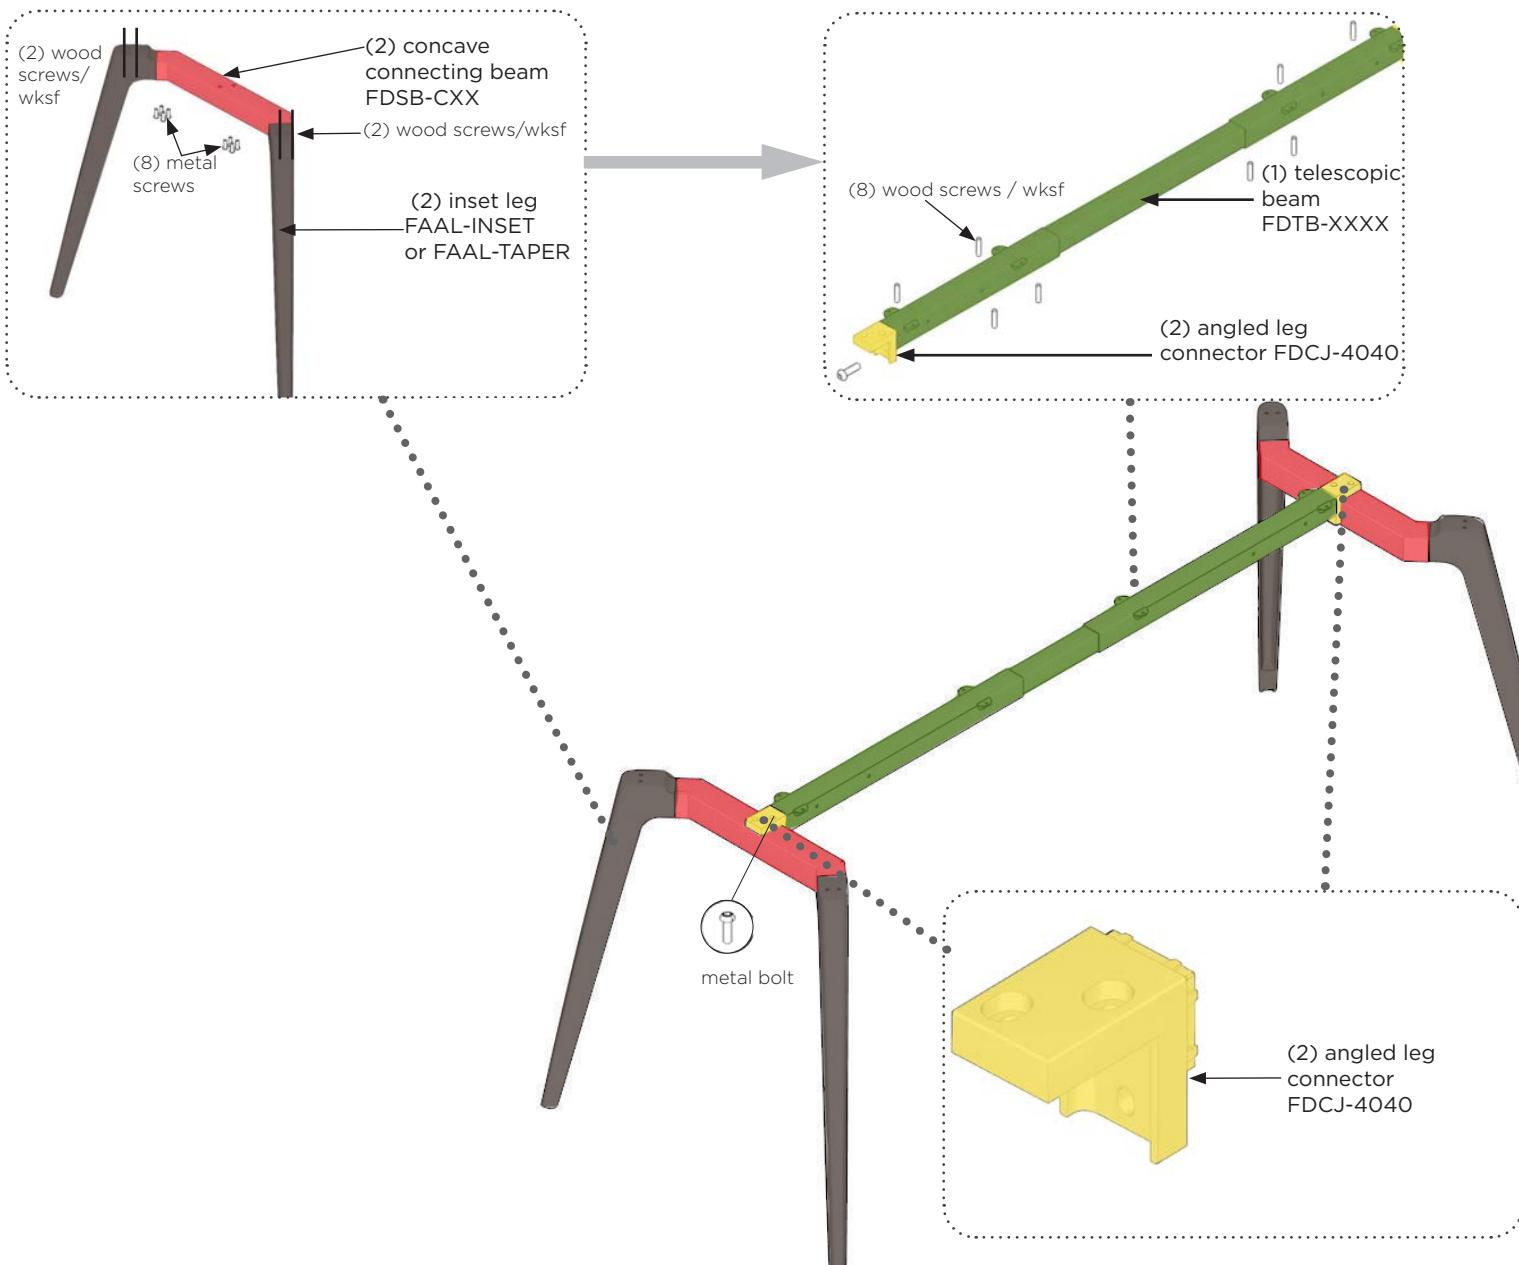


Freestanding Tabletops

Straight Connecting Beam

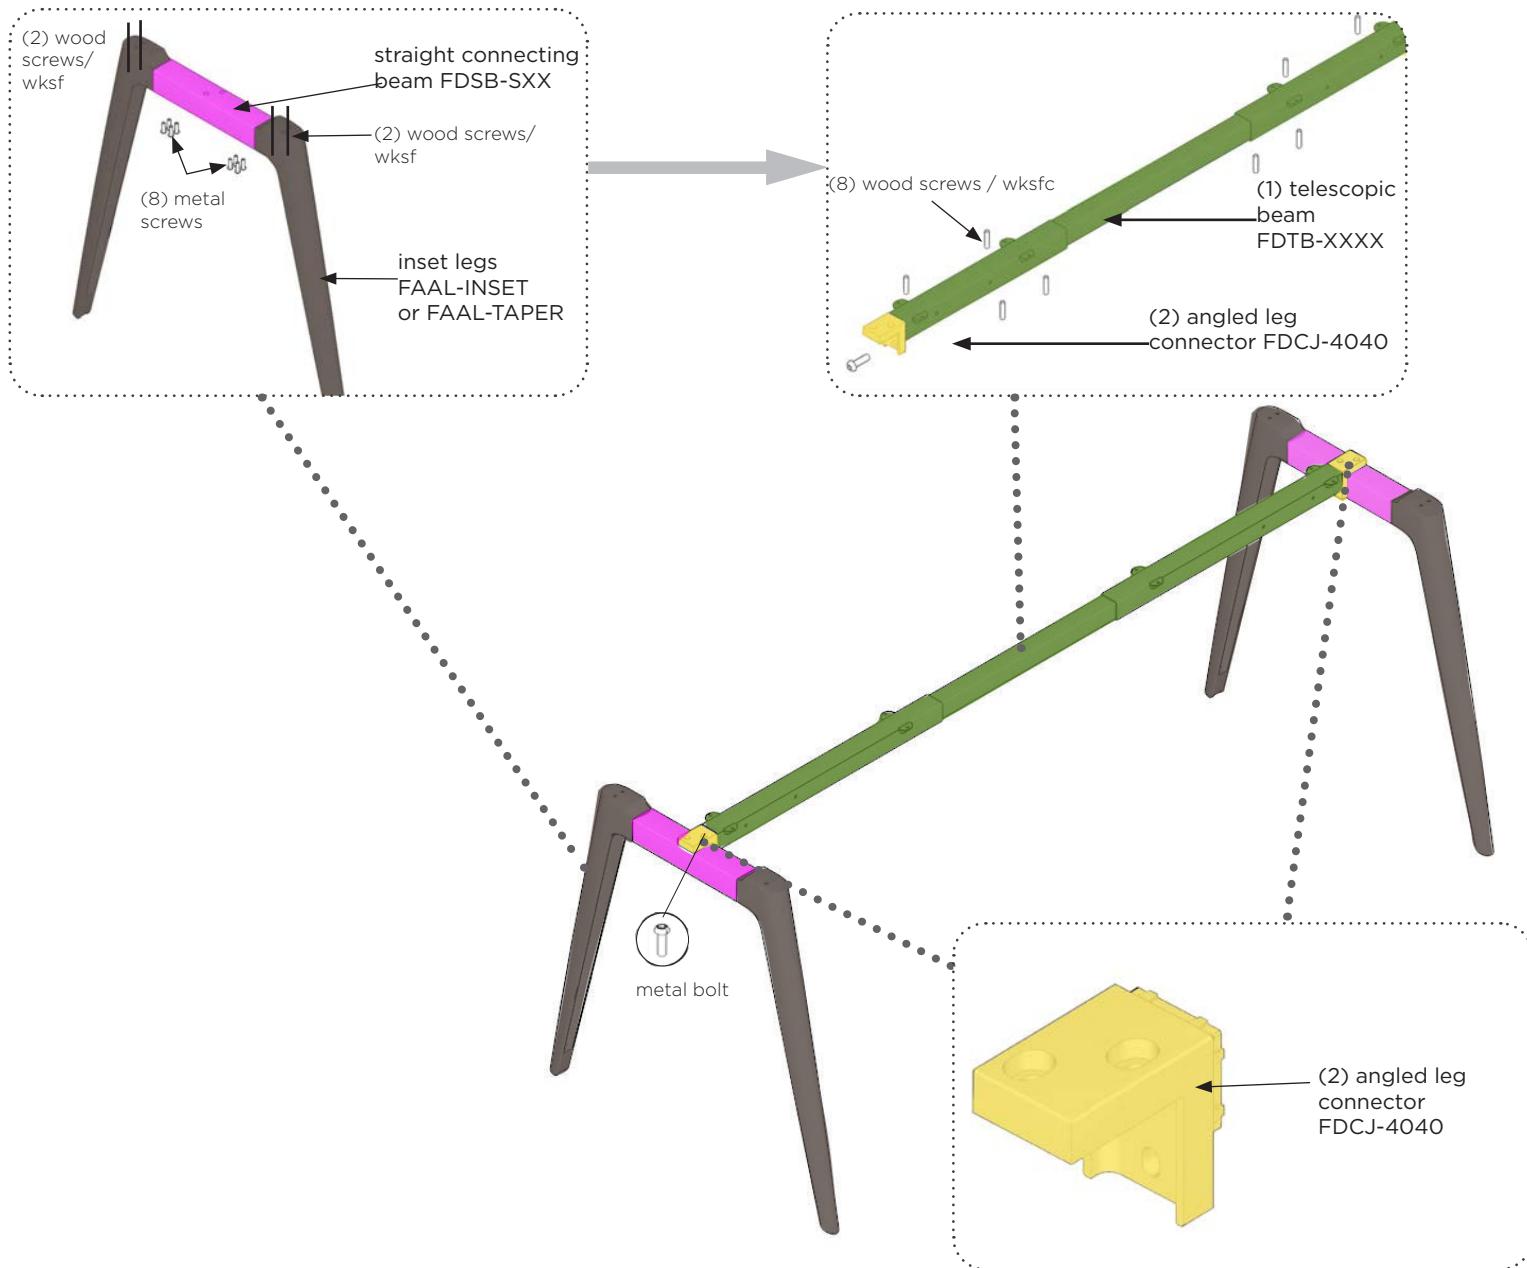


Freestanding Tabletops

Post Legs

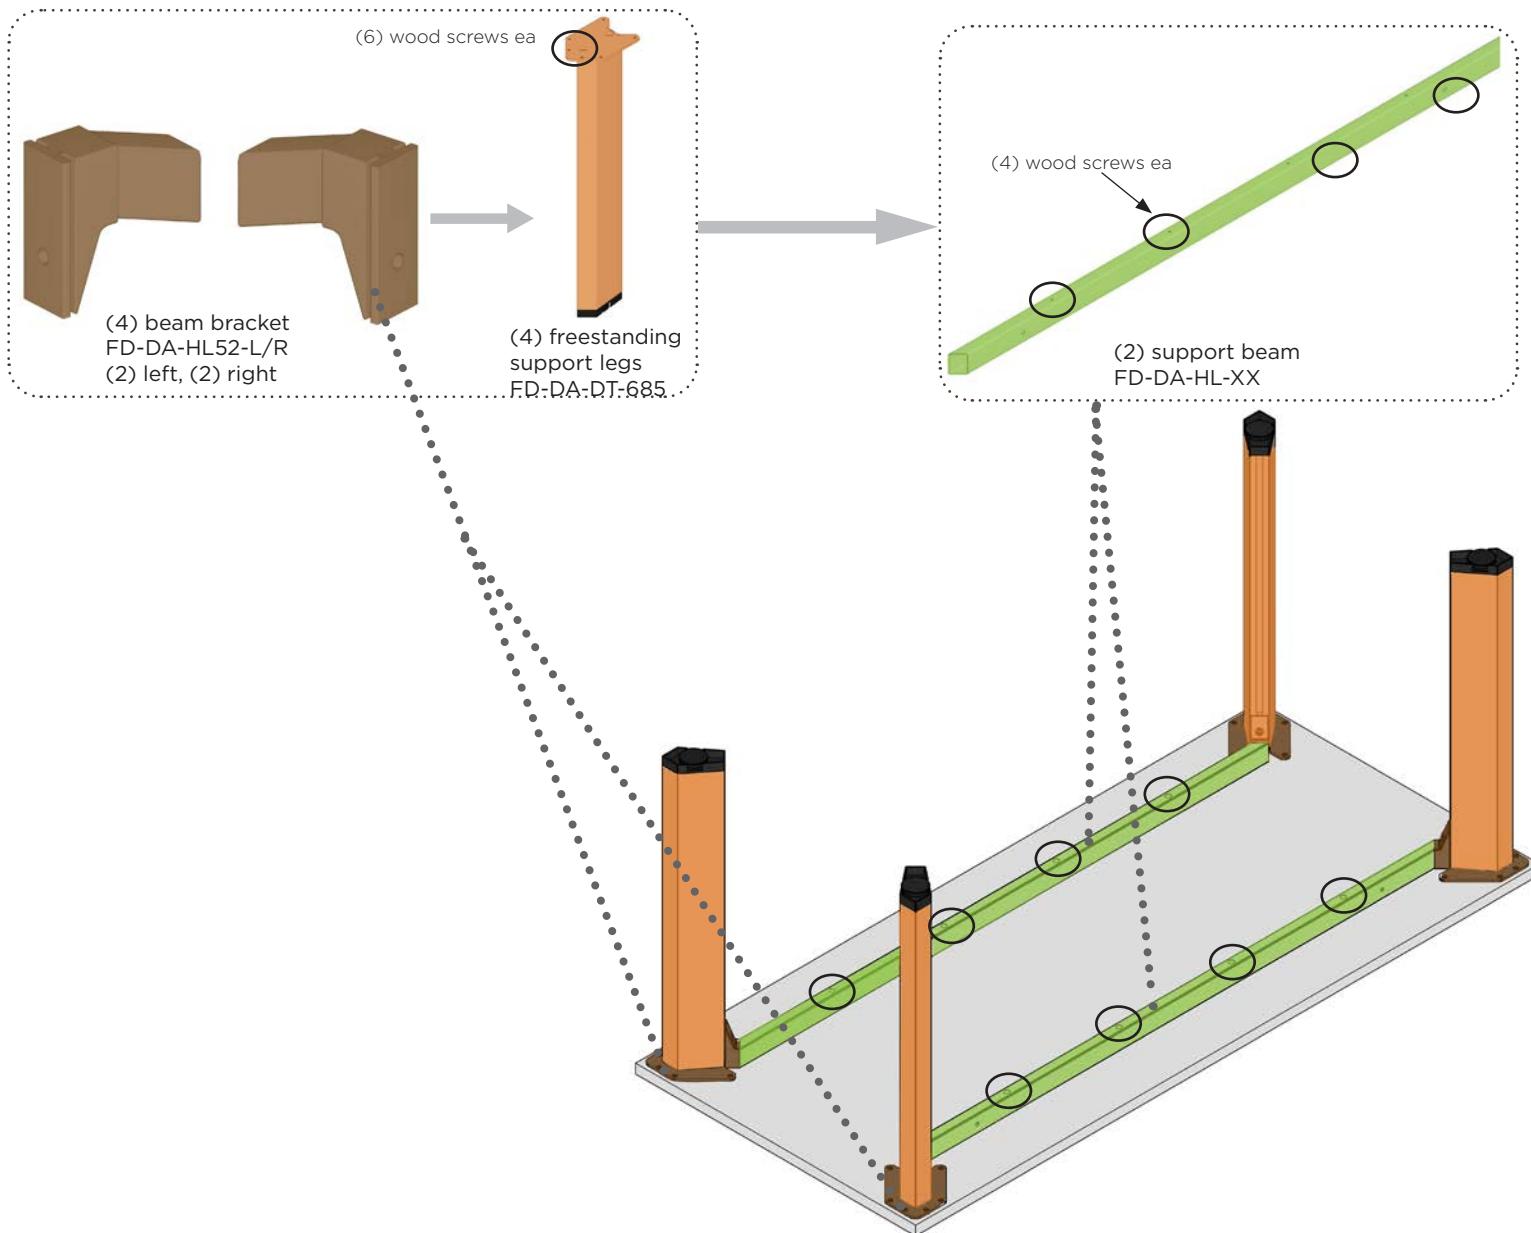


Return Tabletops

Concave Connecting Beam

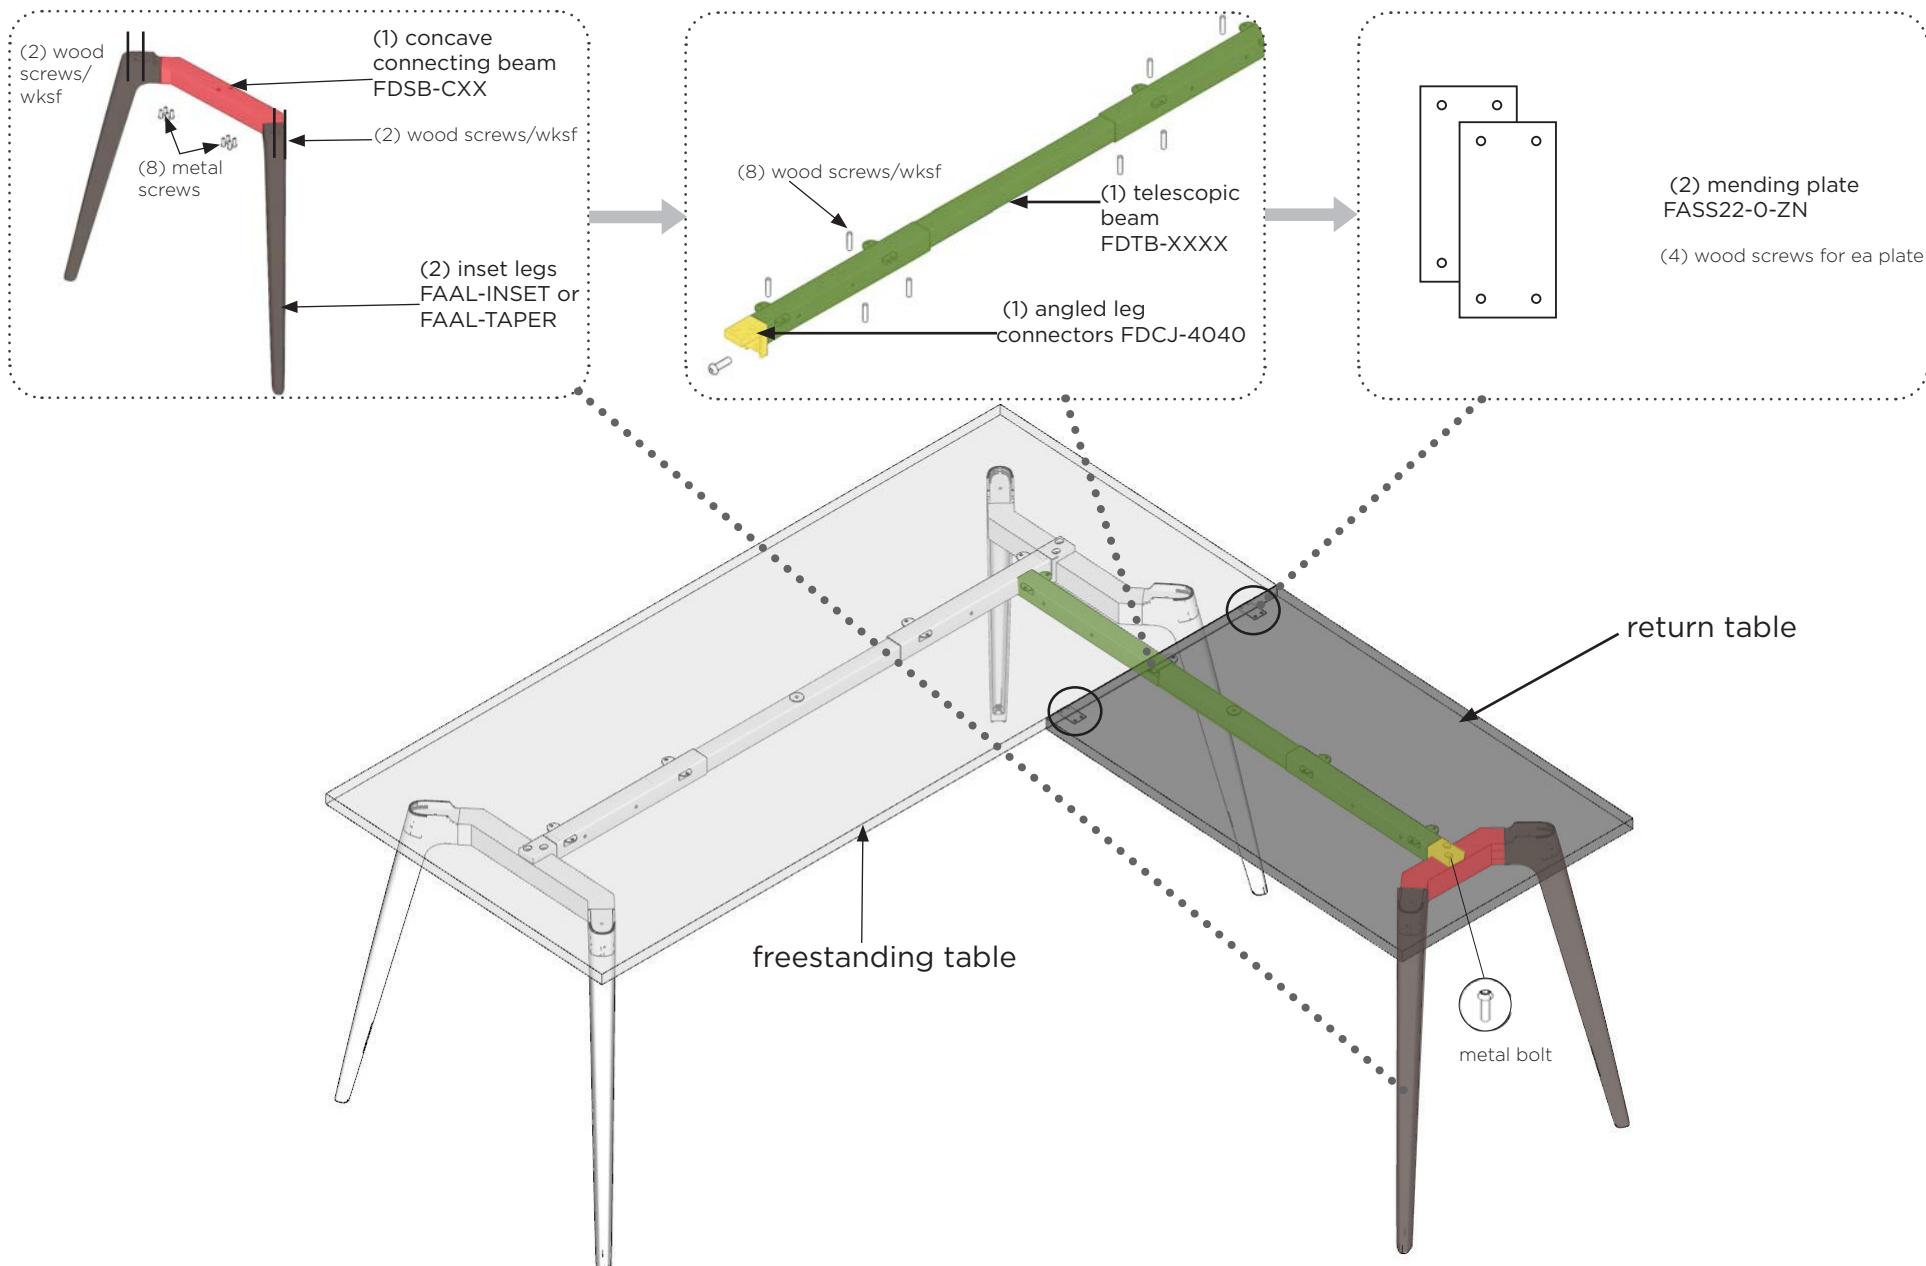


Return Tabletops

Straight Connecting Beam

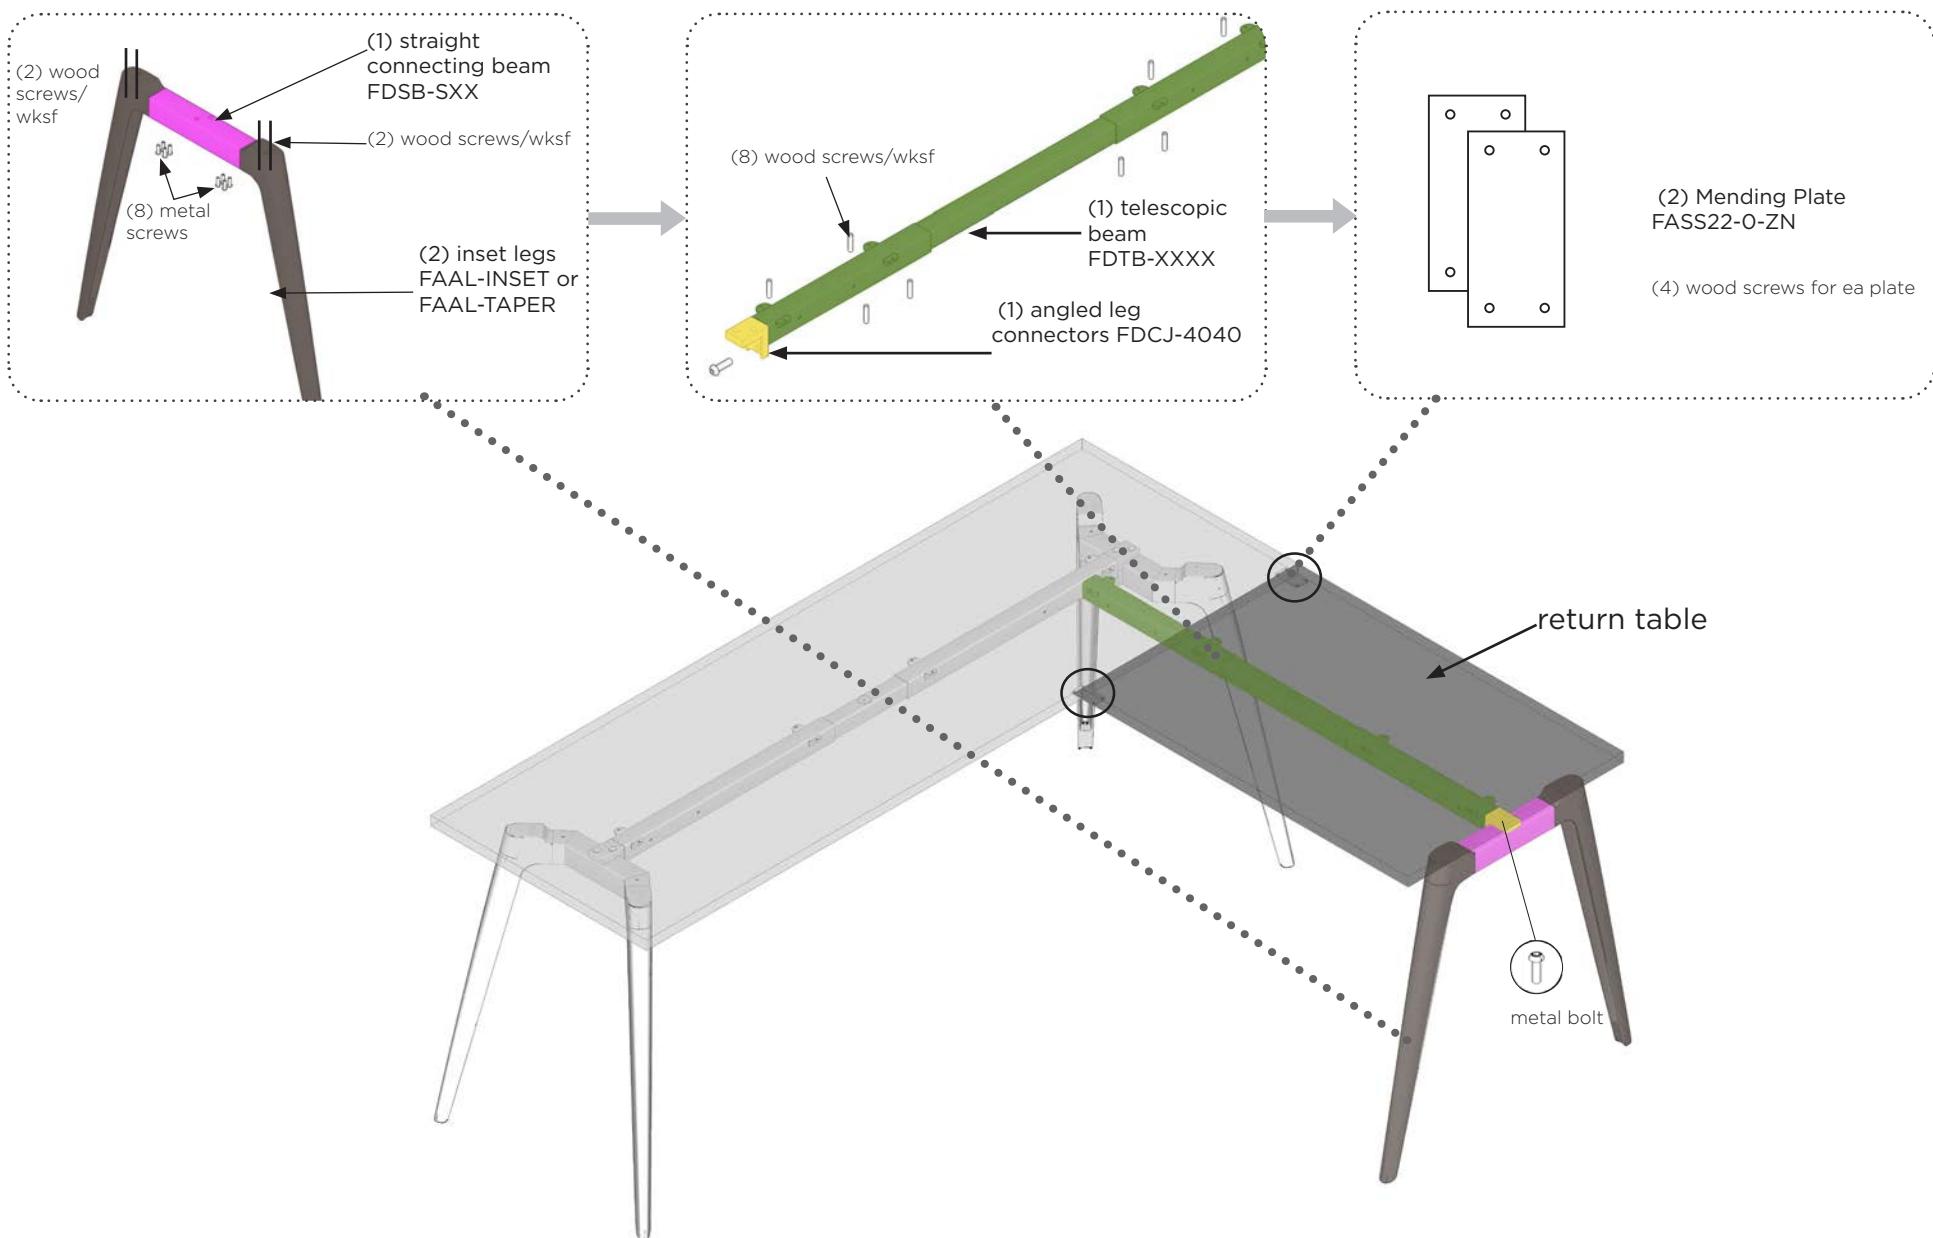


Return Tabletops

Post Legs

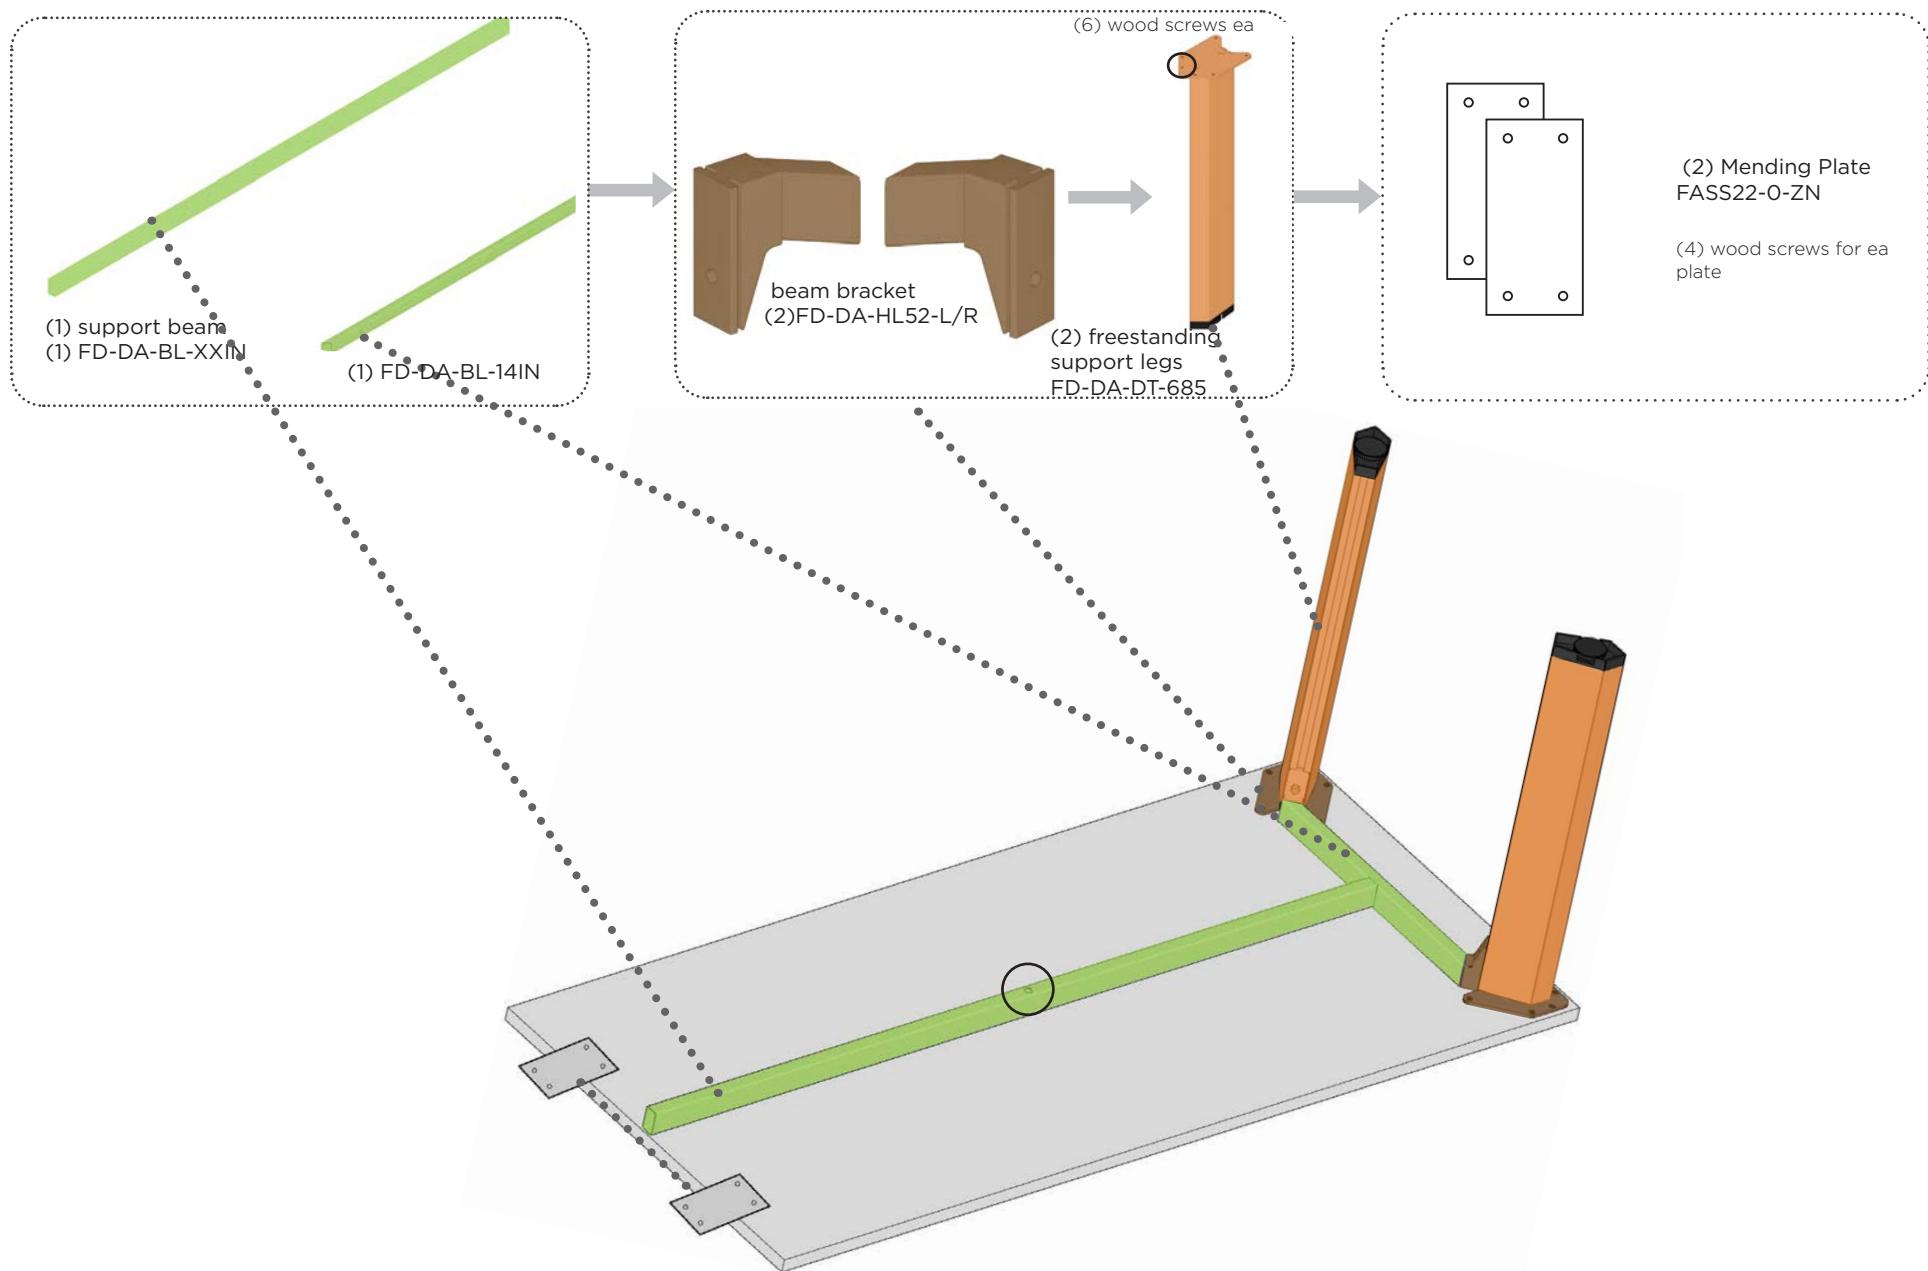


Resting Bridge Tabletops

Inset/Taper legs, for use with 26" high credenza

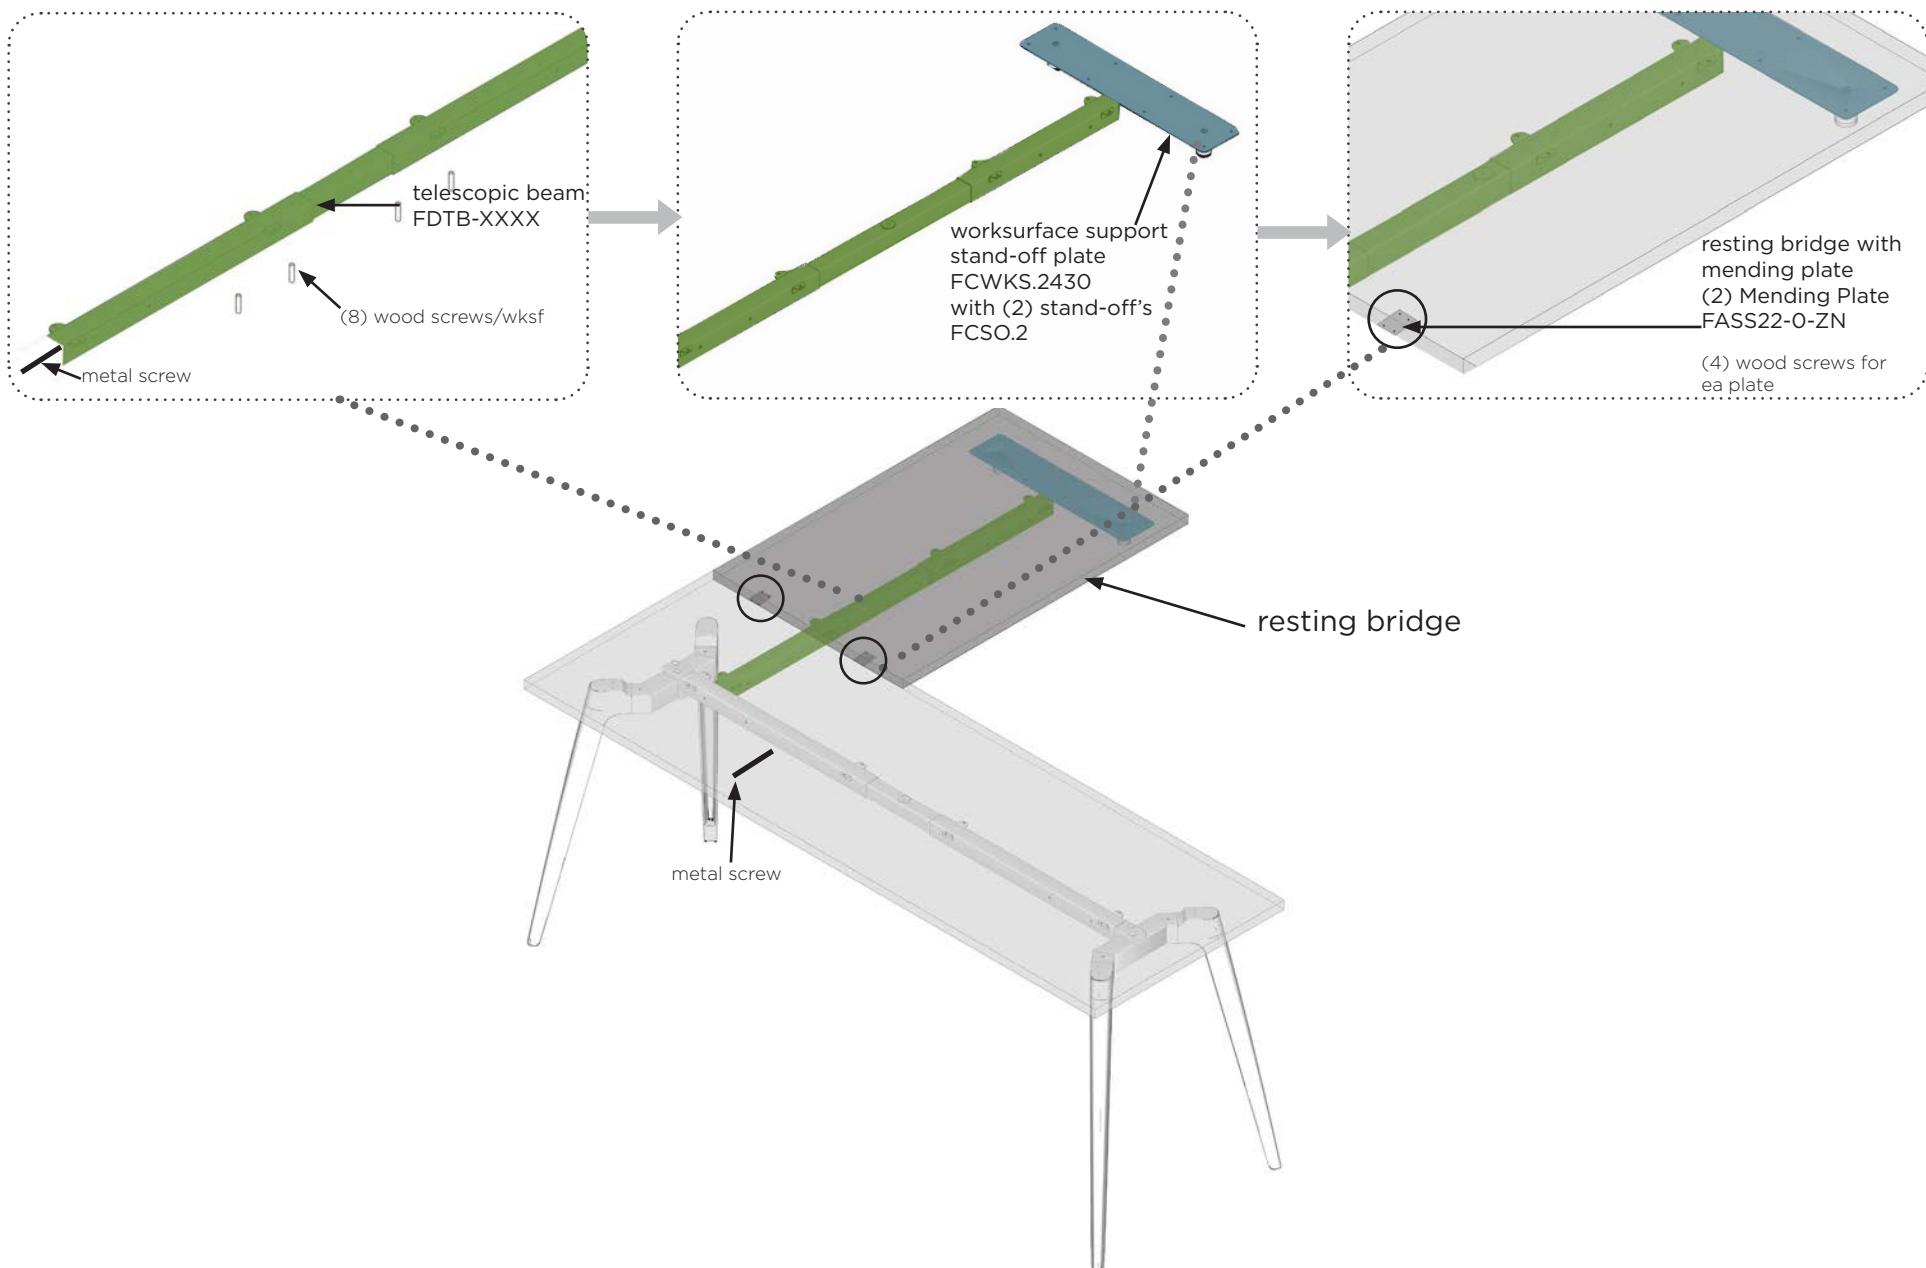


Resting Bridge Tabletops

Post Legs, for use with 26" high credenza

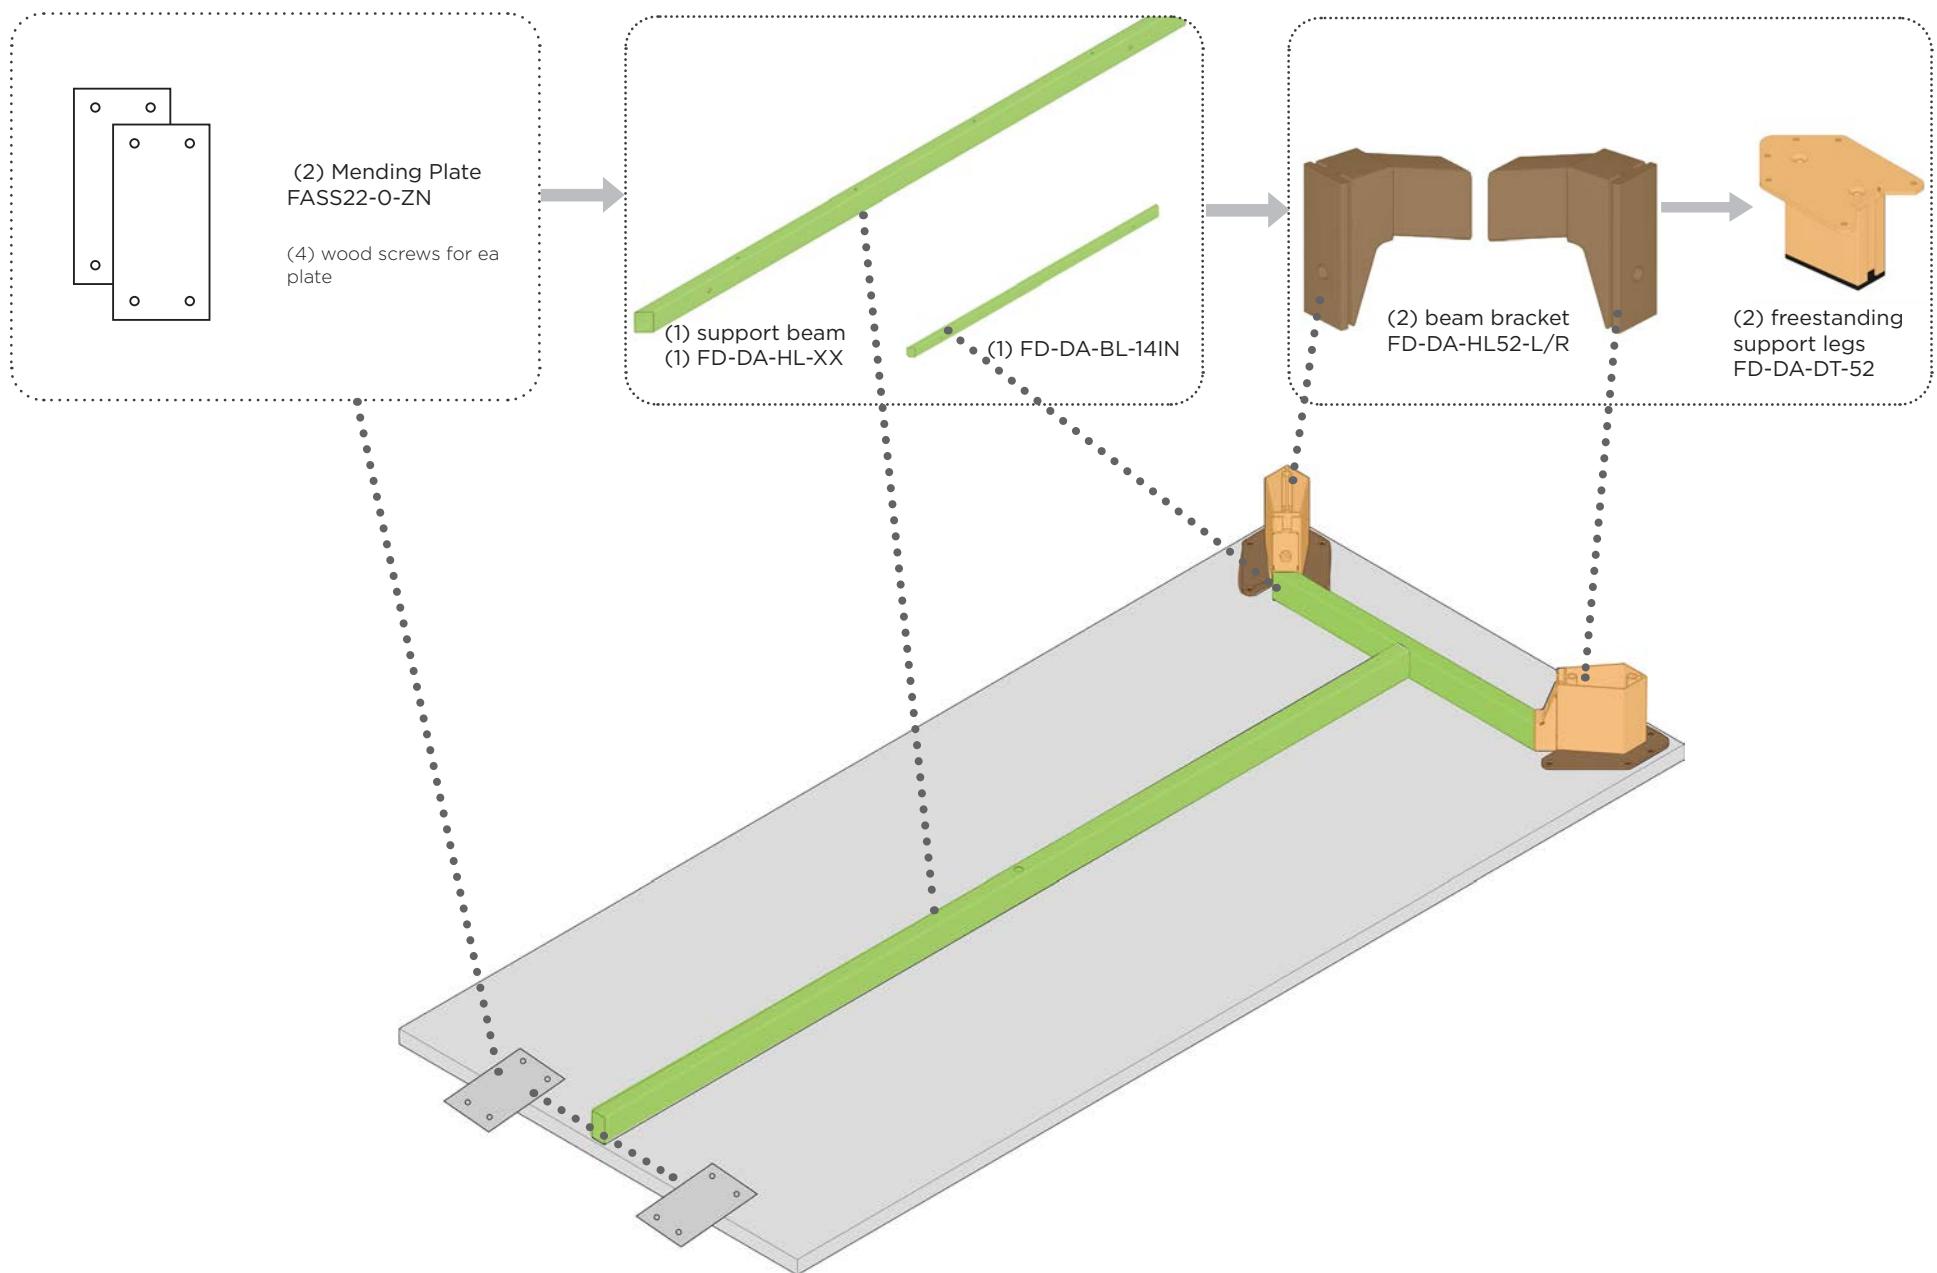


Freestanding Bridge Tabletops

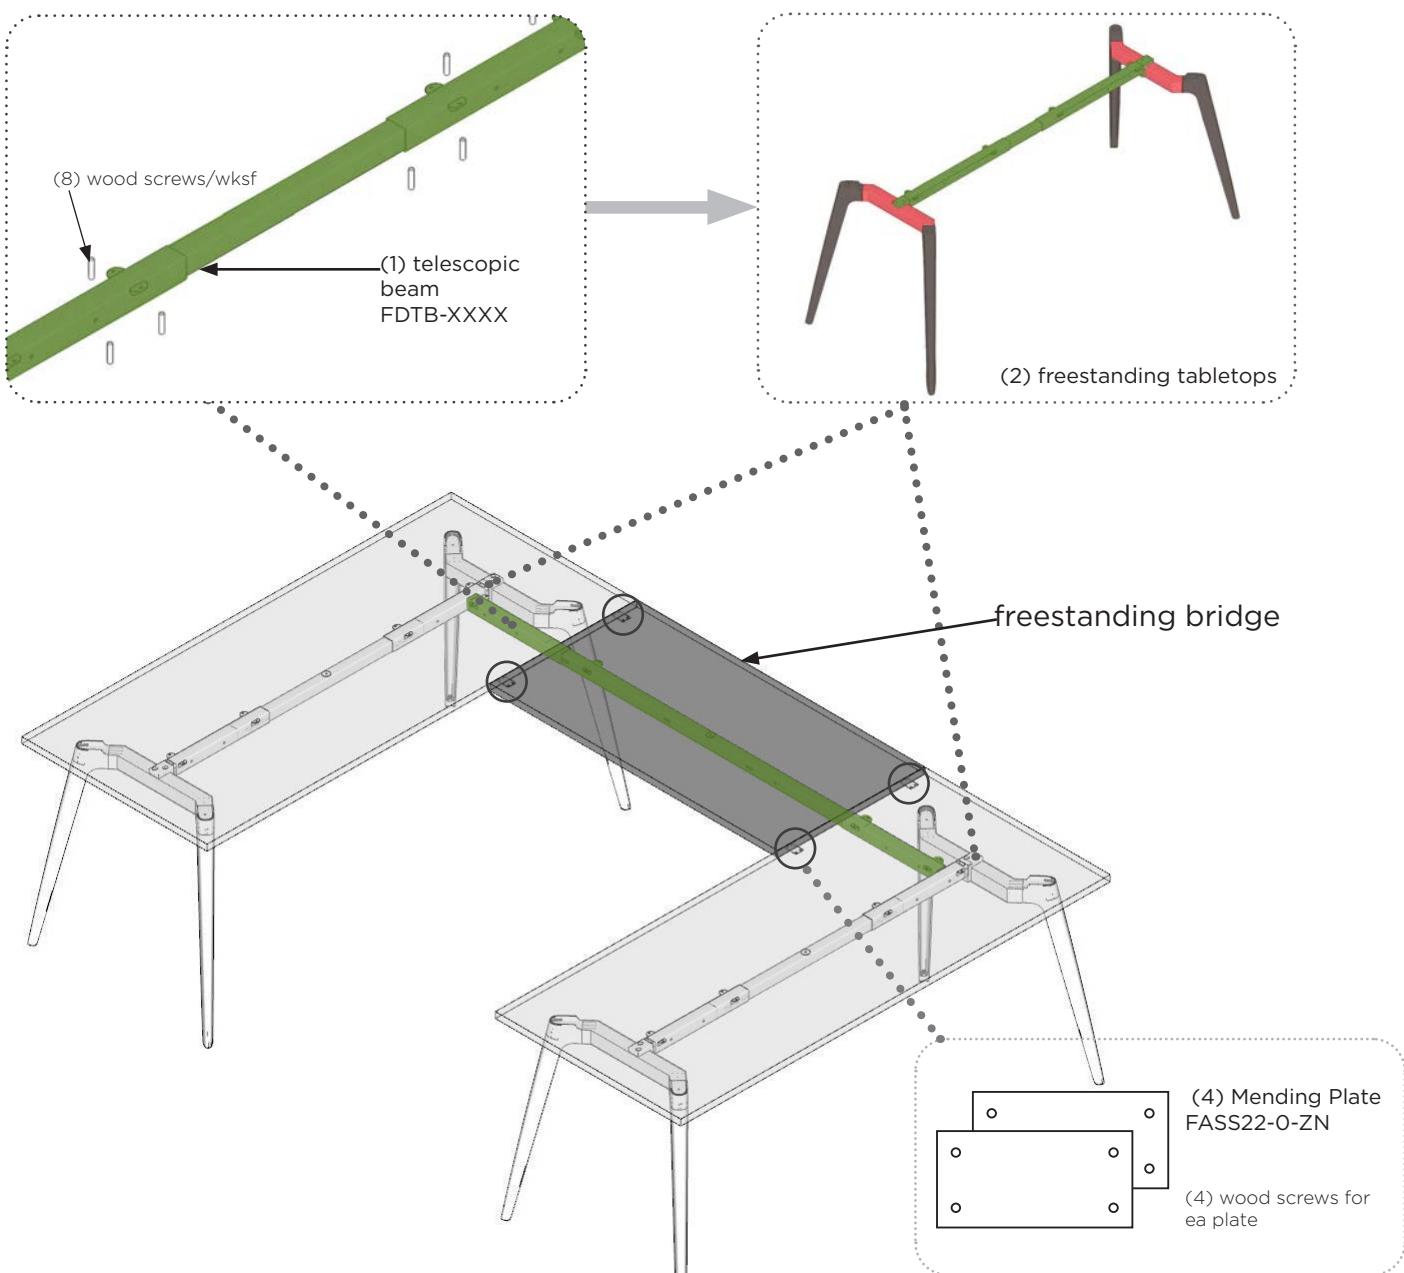



Conference Tables

Round and square Tables with Inset/Taper Legs - taper shown

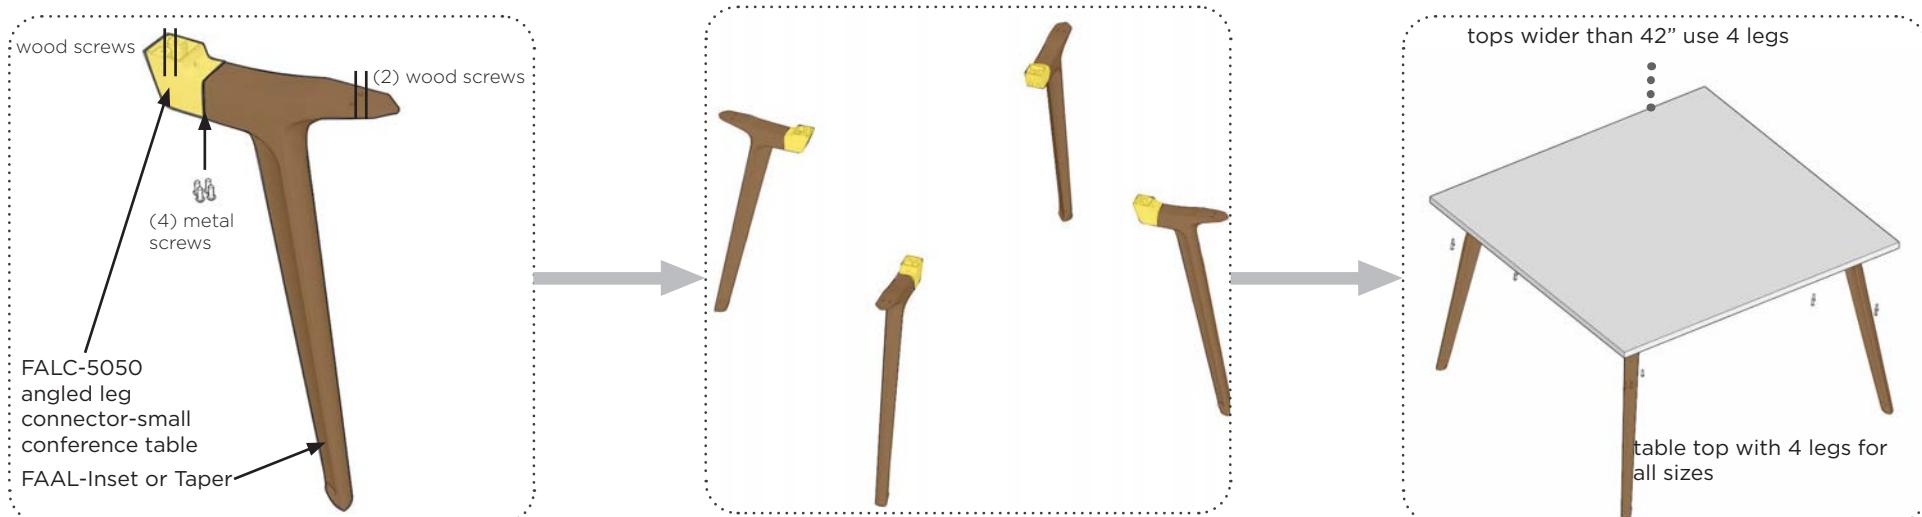


Conference Tables

Round and Square Tables with Post Legs

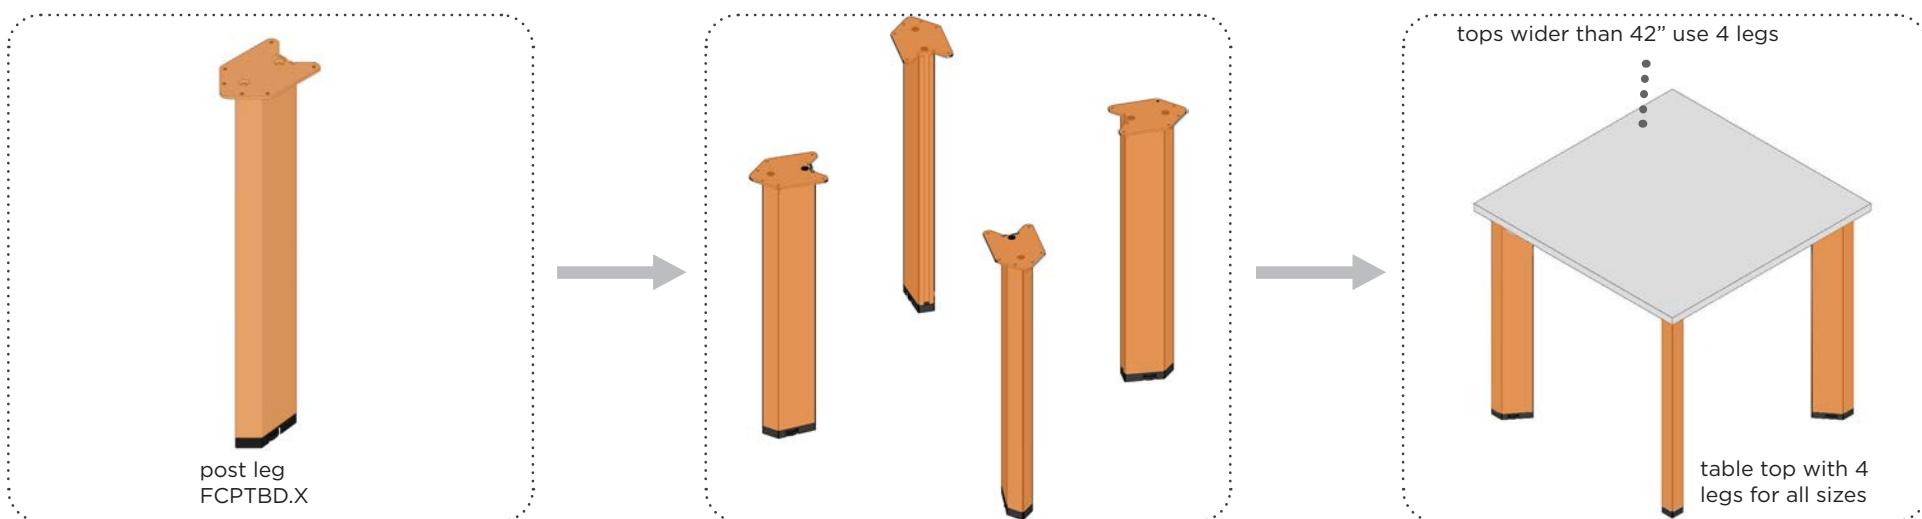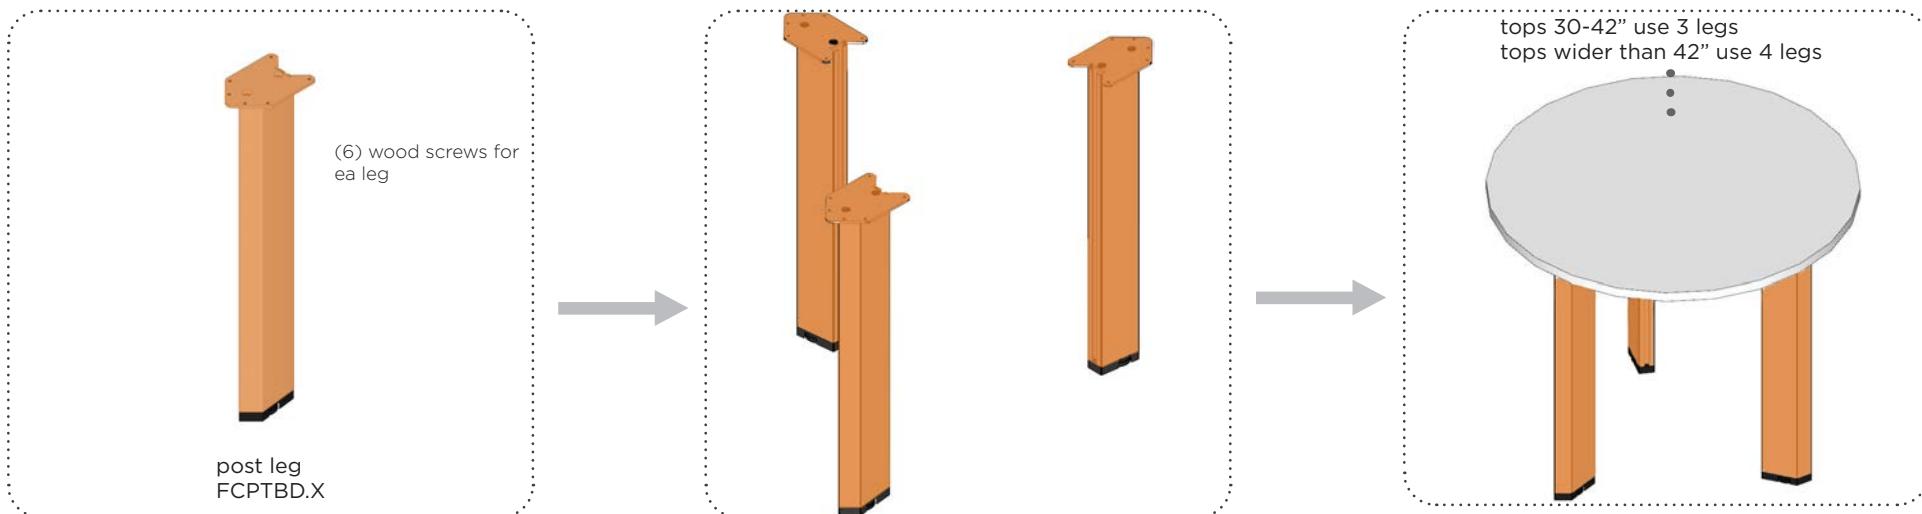

Dash 2 Stage


Leg Encasement

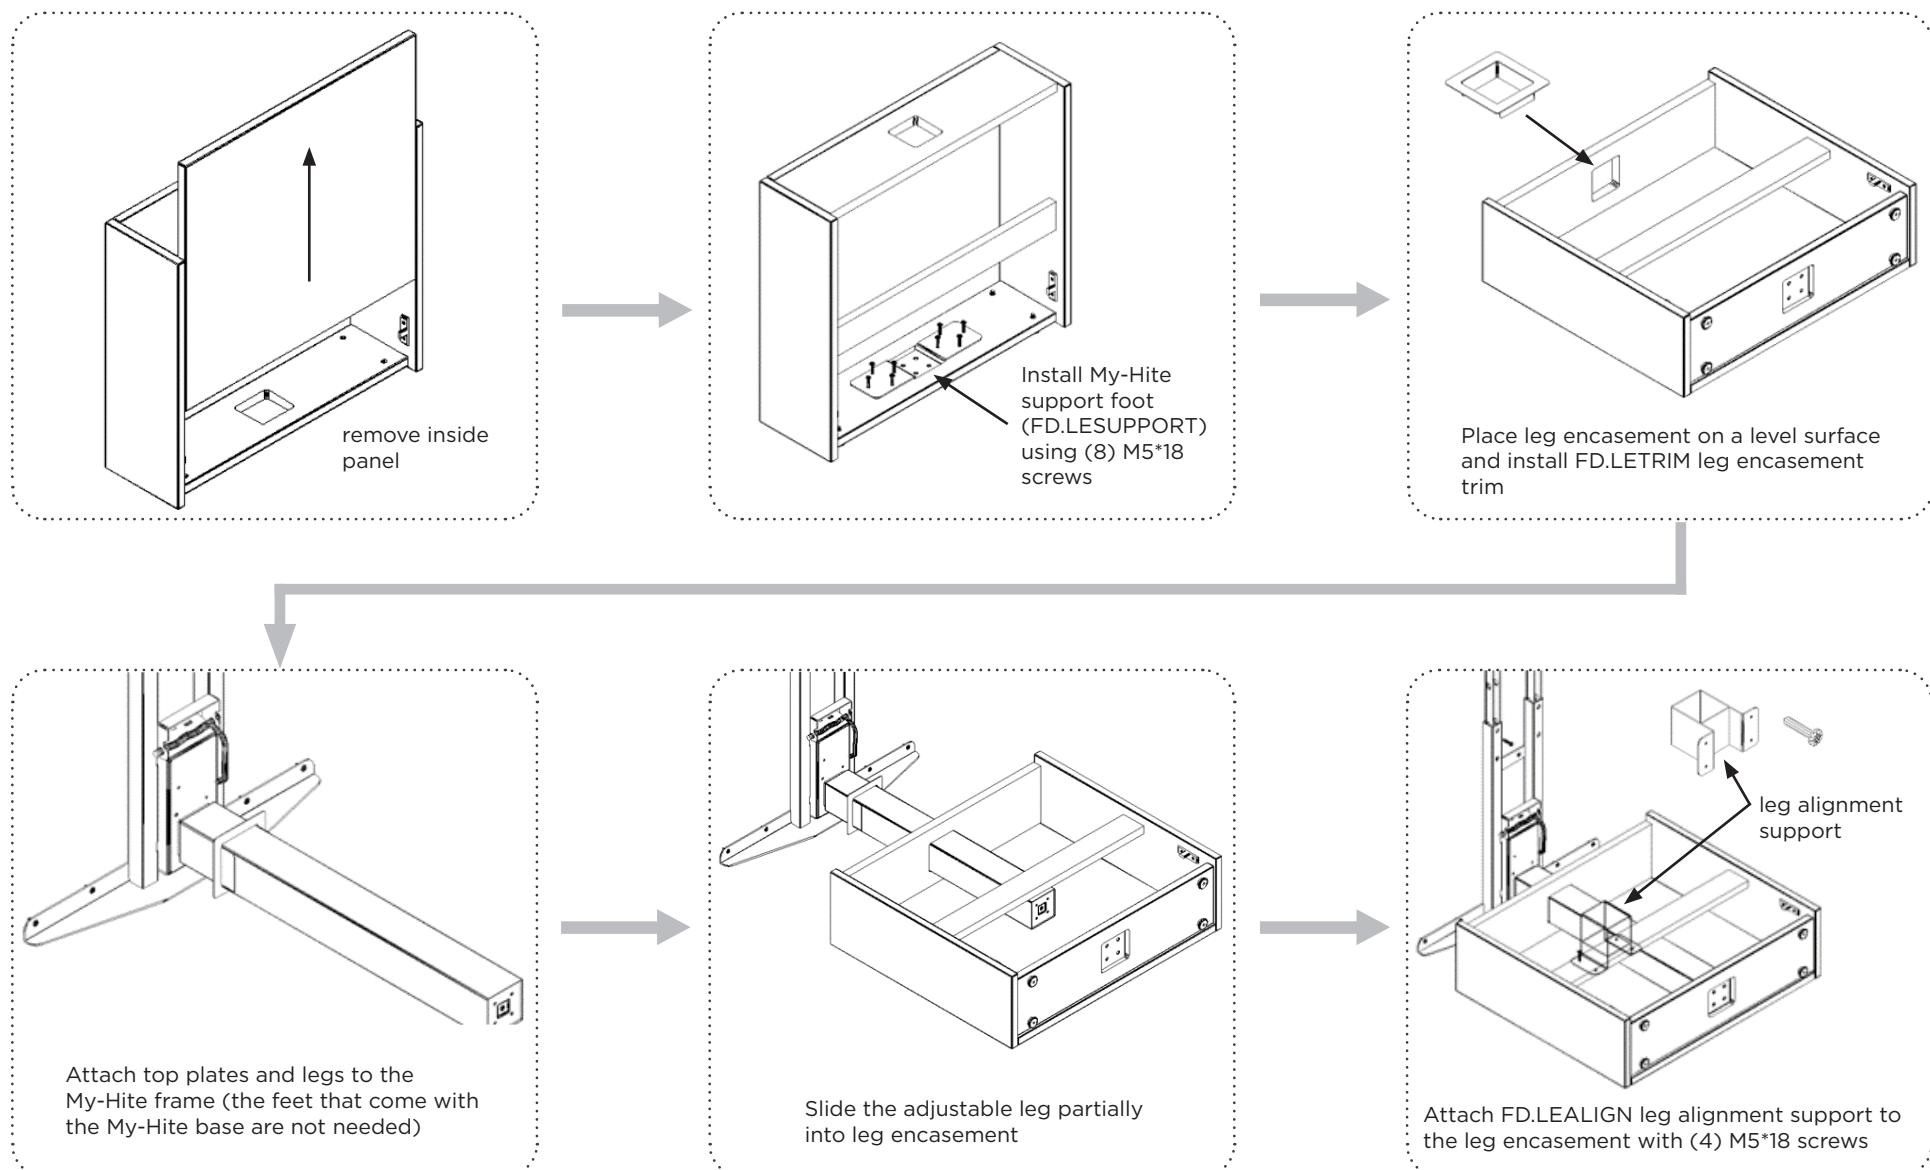


continued...

Dash 2 Stage


Leg Encasement continued

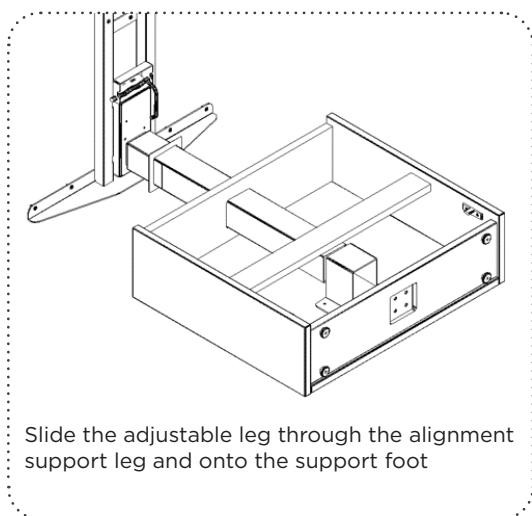


Slide the adjustable leg through the alignment support leg and onto the support foot

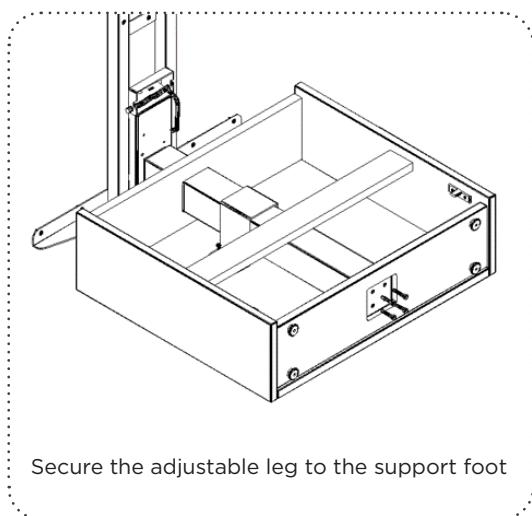

Secure the adjustable leg to the support foot

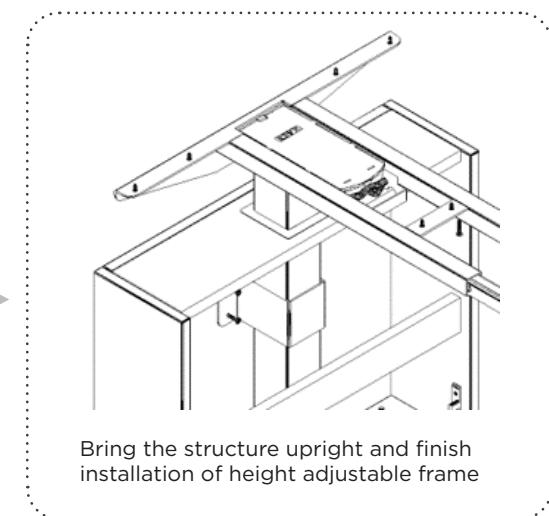


Bring the structure upright and finish installation of height adjustable frame

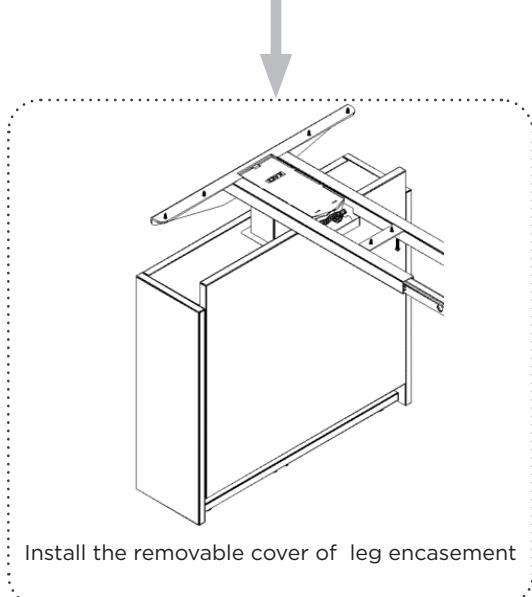


Install the removable cover of leg encasement

To complete installation, follow instructions depending on application:

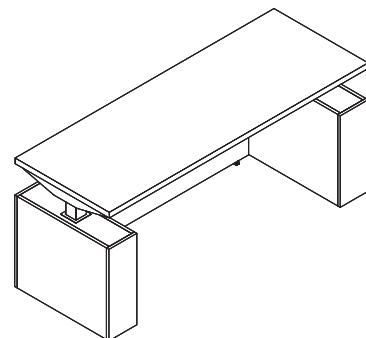


For two leg encasements, continue with fixed modesty installation on page 19

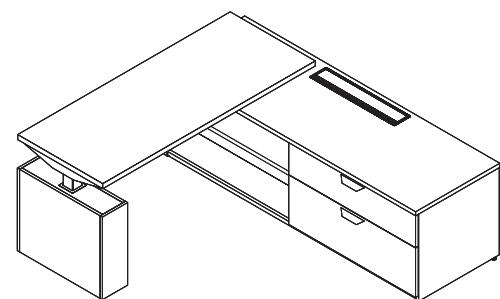


For installation with 23" H credenza continue on page 20

Dash 2 Stage

Fixed Modesty - Double Leg Encasement

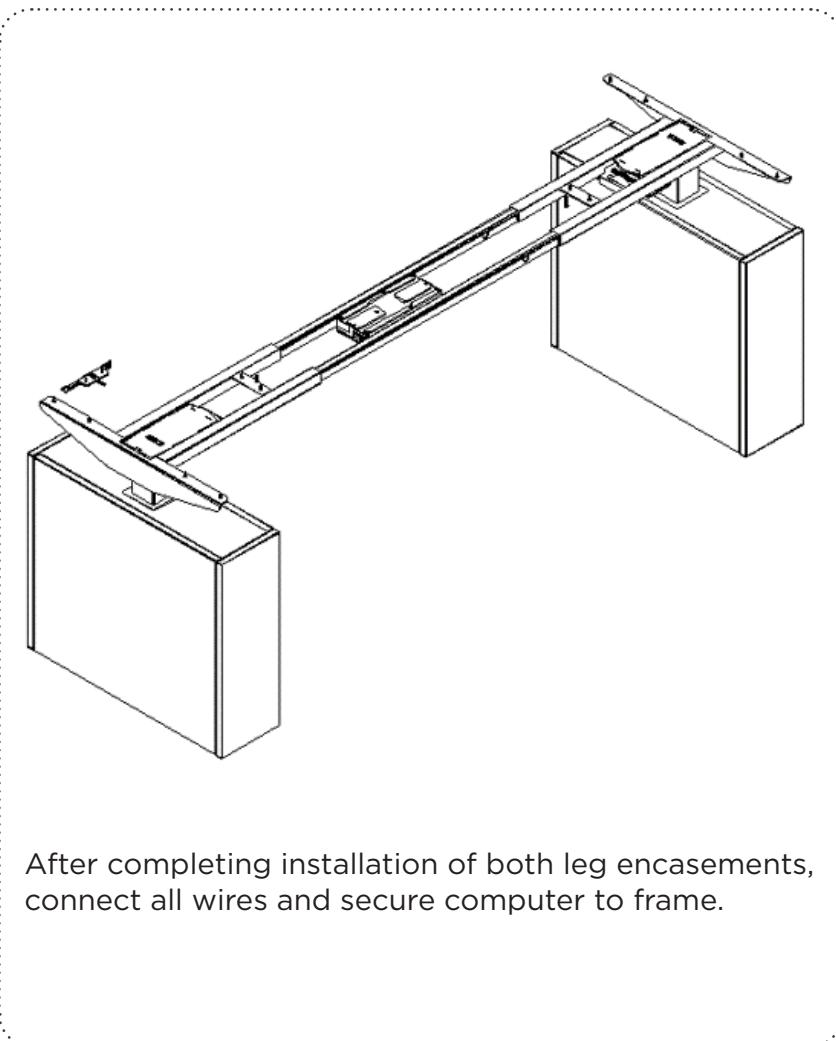


After completing installation of both leg encasements, connect all wires and secure computer to frame.

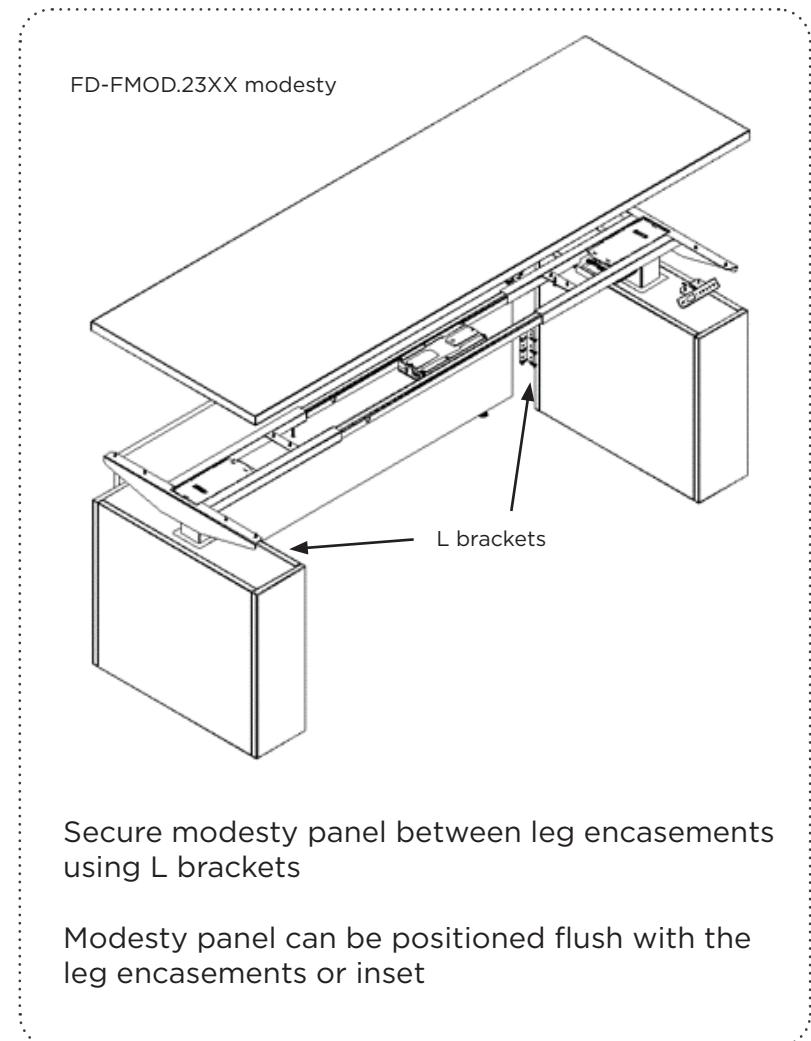

Dash 2 Stage

23"H Credenza

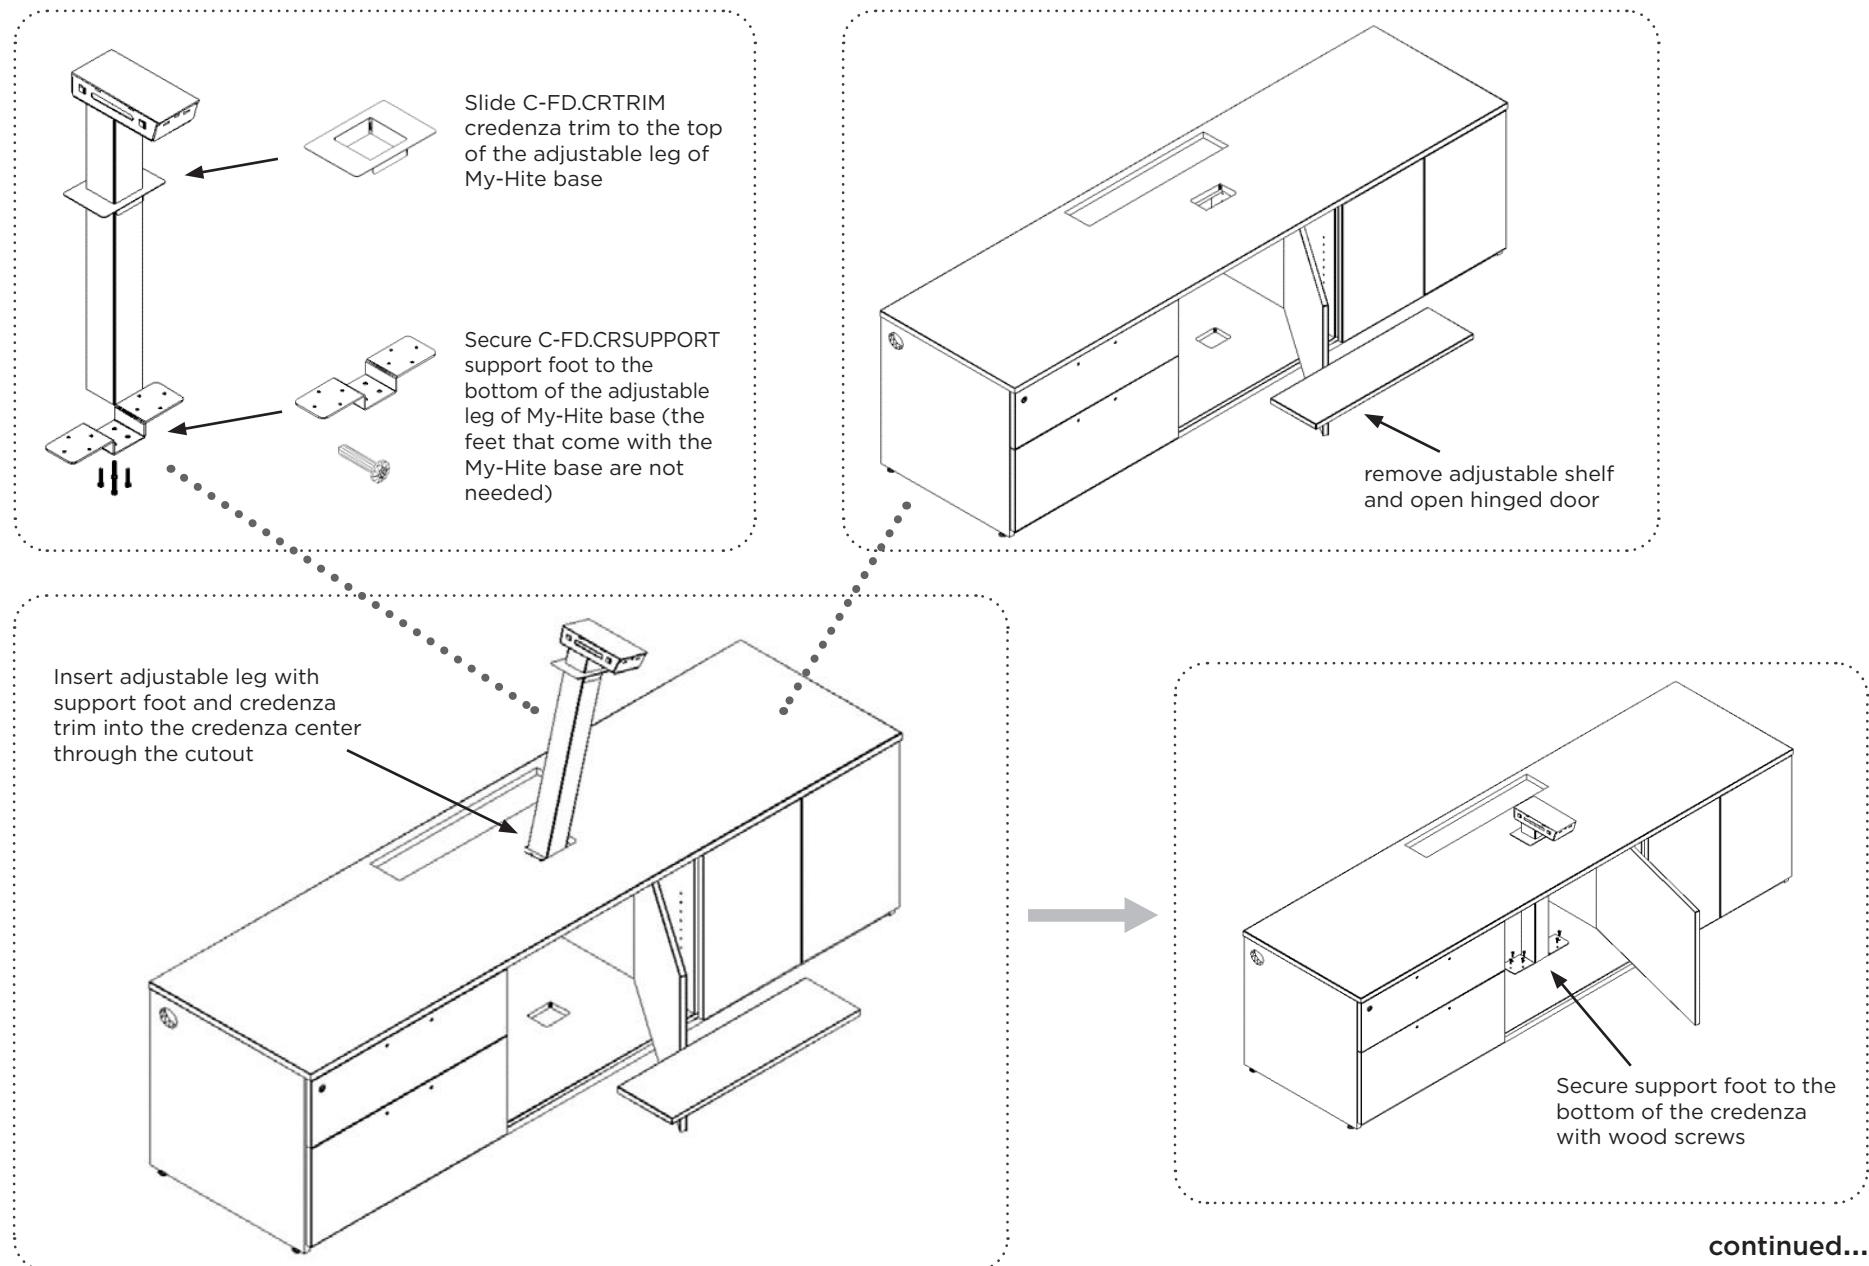


continued...


Dash 2 Stage

23"H Credenza continued


After completing installation of credenza and leg encasement add table frame, connect all wires and secure computer.

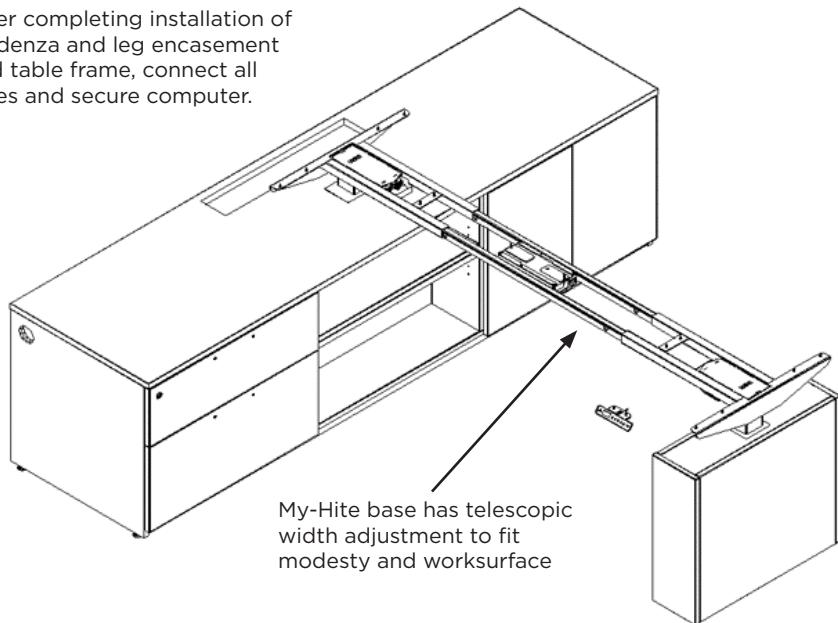

Attach modesty to worksurface with provided L brackets

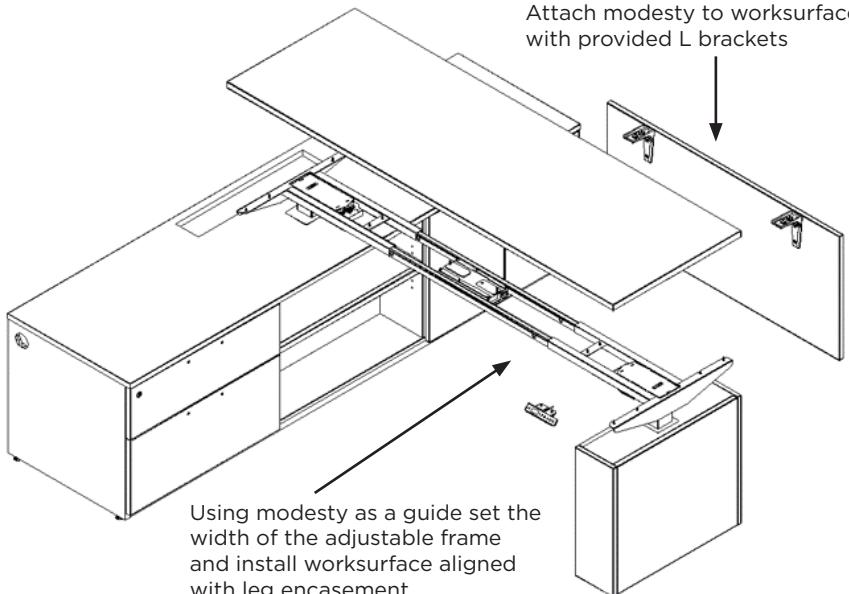


Completed installation

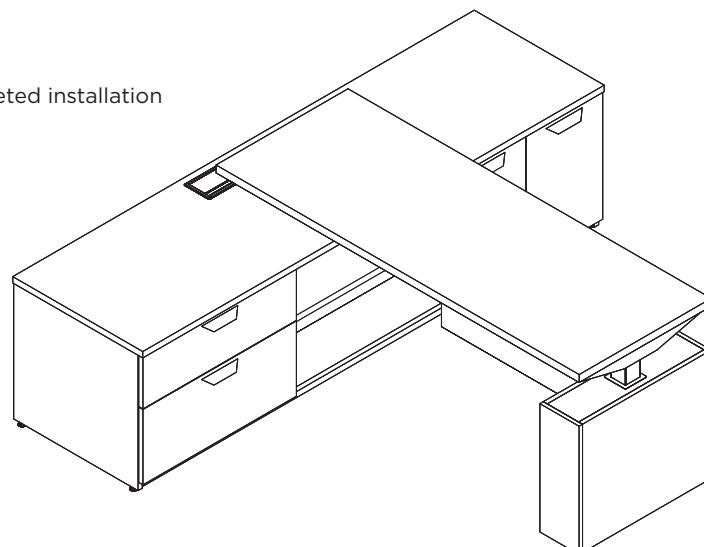

Dash 2 Stage Corner Encasement


Dash 2 Stage 3 Leg encasement installation guide

1. Place the table top on the ground, with the bottom of the worksurfaces facing up.

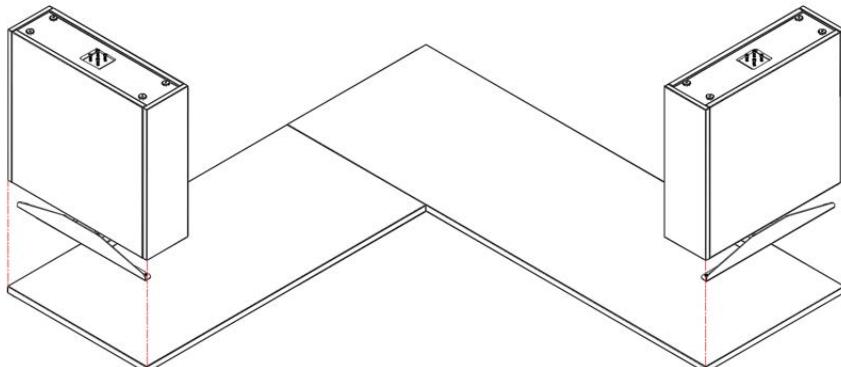

2. Align the leg encasements with the edge of the table top



3. Align and assemble the telescoping frame, but **do not** screw it into the worksurfaces. The worksurfaces are only meant to align the frame at this step.

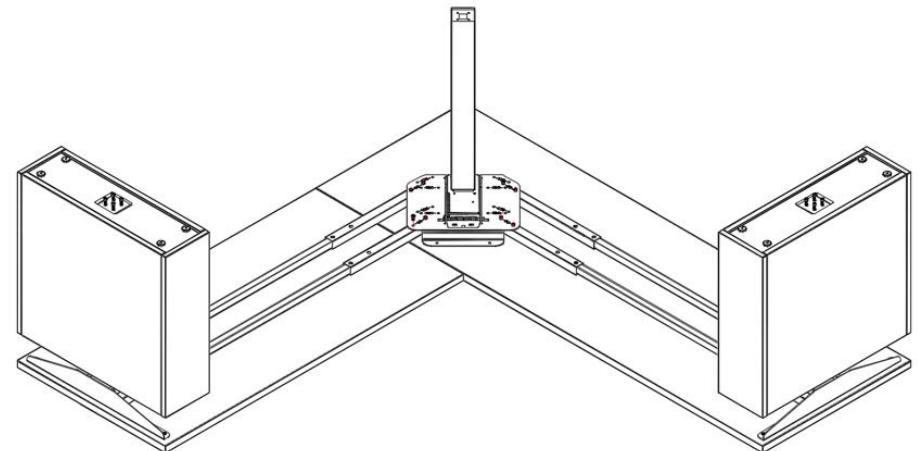

4. Install the metal connector wings (C-FD.LSWB.24/30) using (4pcs) flat pan head hexagon screw (M6x10).

5. Insert the metal connector into the middle leg and use the plastic hexagon screw (M8x15) to attach it from the back.


6. Install the middle leg foot plate.

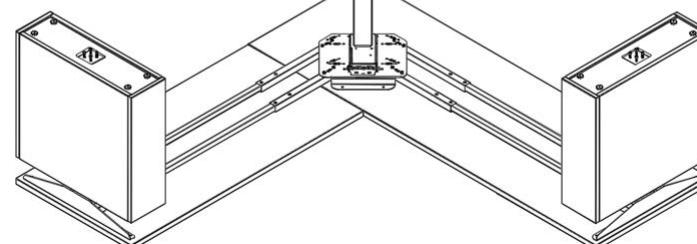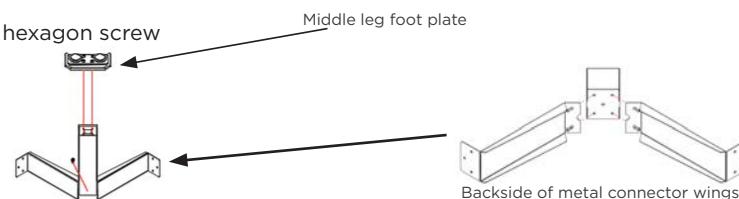

Dash 2 Stage Corner Encasement

Dash 2 Stage 3 Leg encasement installation guide continued

7. Flip the leg encasements and the leg base so they are positioned upright.
8. Install the (2pcs) modesty panels to the leg encasement and the metal connector wings (**C-FD.LSWB.24/30**).
 - The modesty panels are positioned flush with the leg encasement.
 - The modesty panels can be used to help adjust the frame of the 3-leg base.
9. Use M4x16 countersunk self-tapping screws to attach the L-brackets to the encasement and modesty panels.
10. Use M5x16 Pan head self-tapping screws to install the metal connector wings (**C-FD.LSWB.24/30**) to modesty panels.

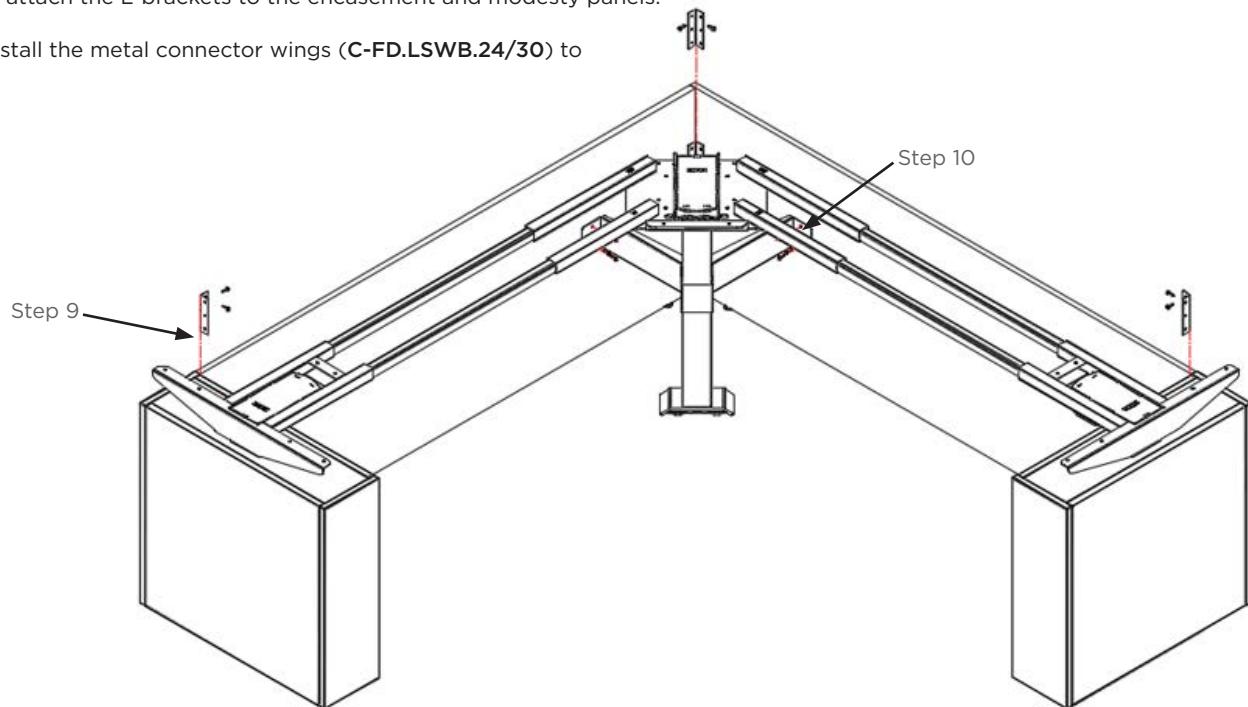


Dash 2 Stage Corner Encasement

Dash 2 Stage 3 Leg encasement installation guide continued

11. Install the worksurfaces onto the 3 leg base.


12. Install the control box, and display.

The table can be hooked up to power and raised in order to allow for more room to install these components.

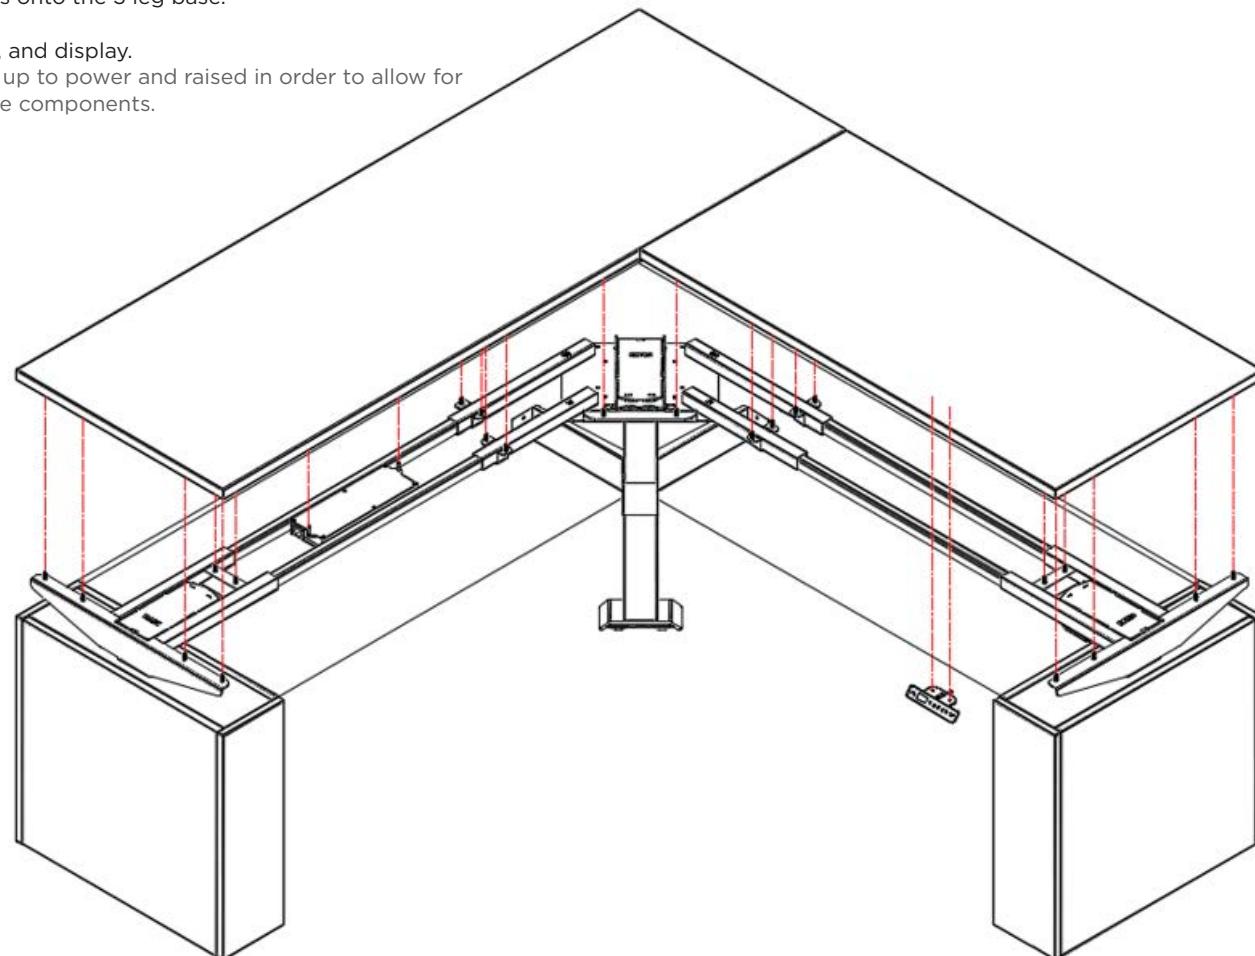


Dash Casegoods

Desk Shell

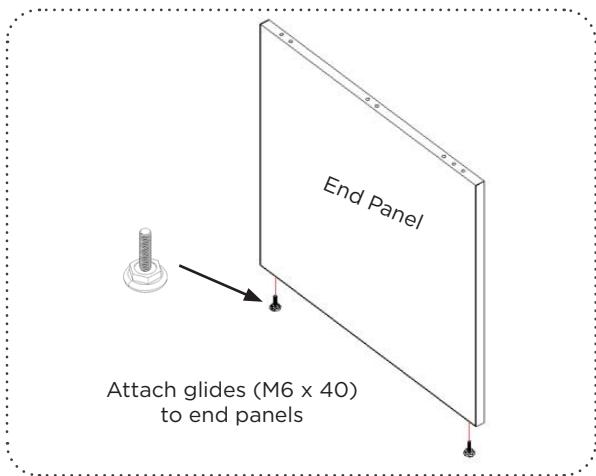


Attach glides (M6 x 40)
to end panels

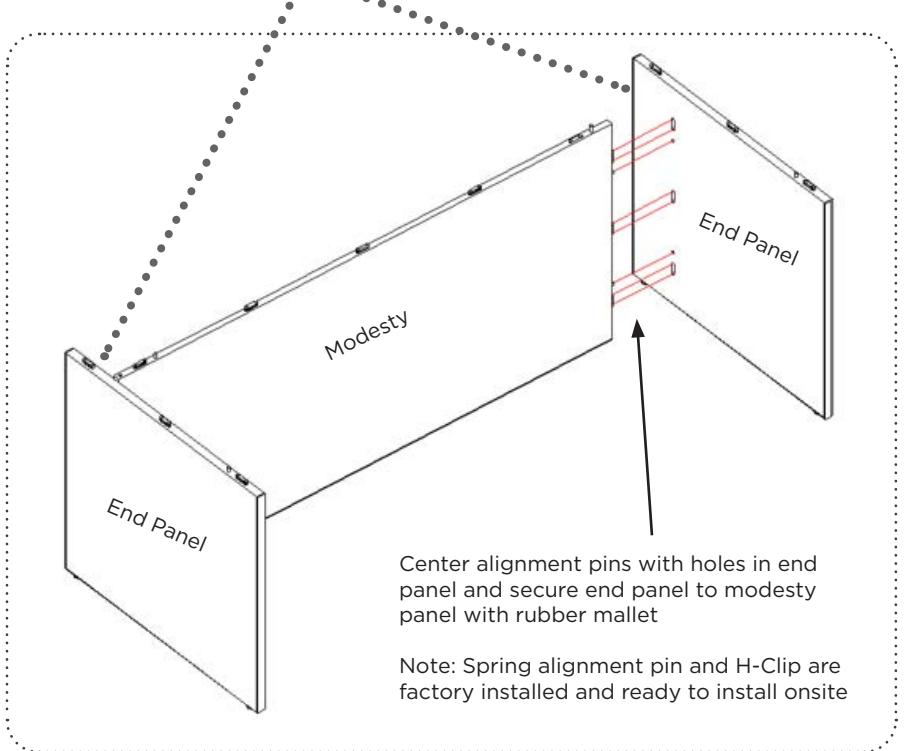


Center alignment pins with holes in end panel and secure end panel to modesty panel with rubber mallet

Note: Spring alignment pin and H-Clip are factory installed and ready to install onsite

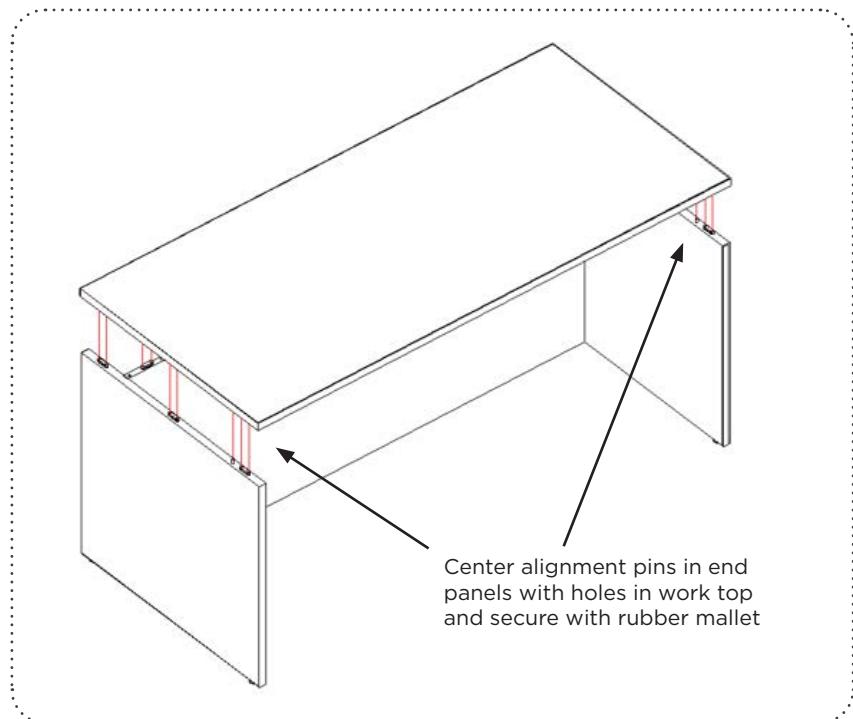



Center alignment pins in end panels with holes in work top and secure with rubber mallet

Completed installation

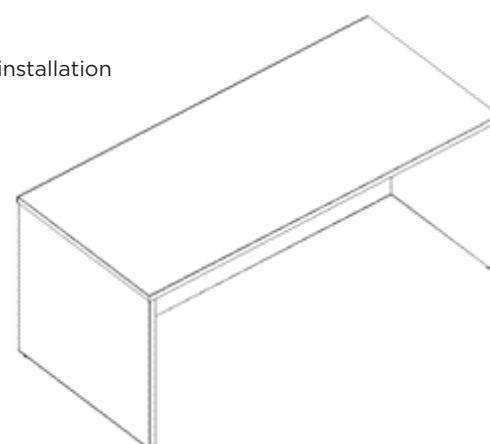


Dash Casegoods

Return Shell

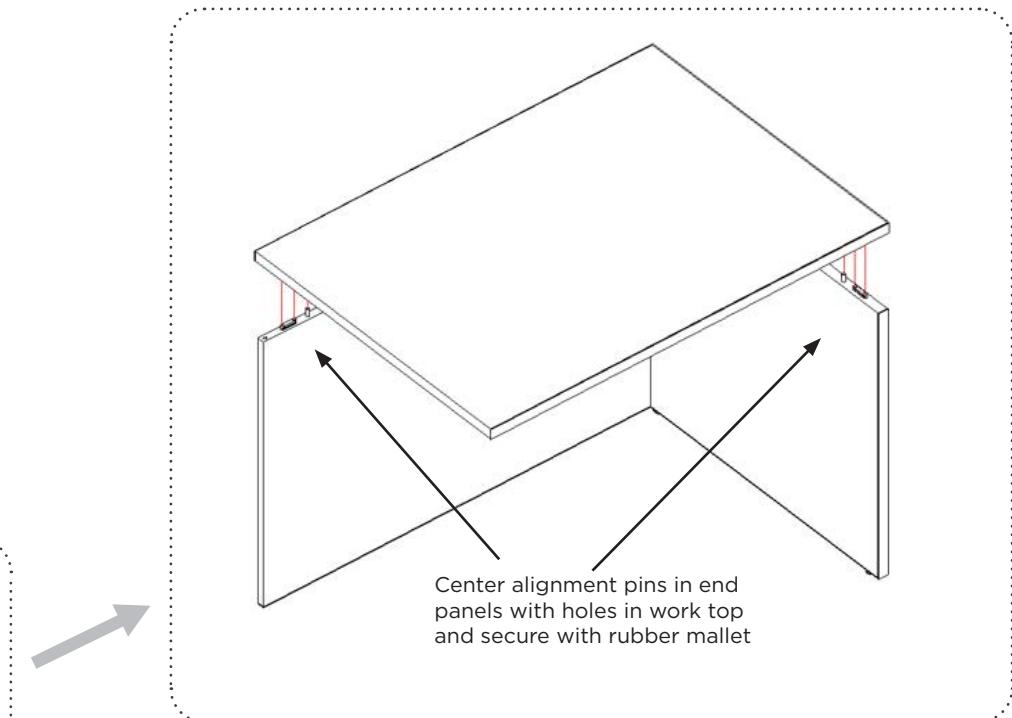
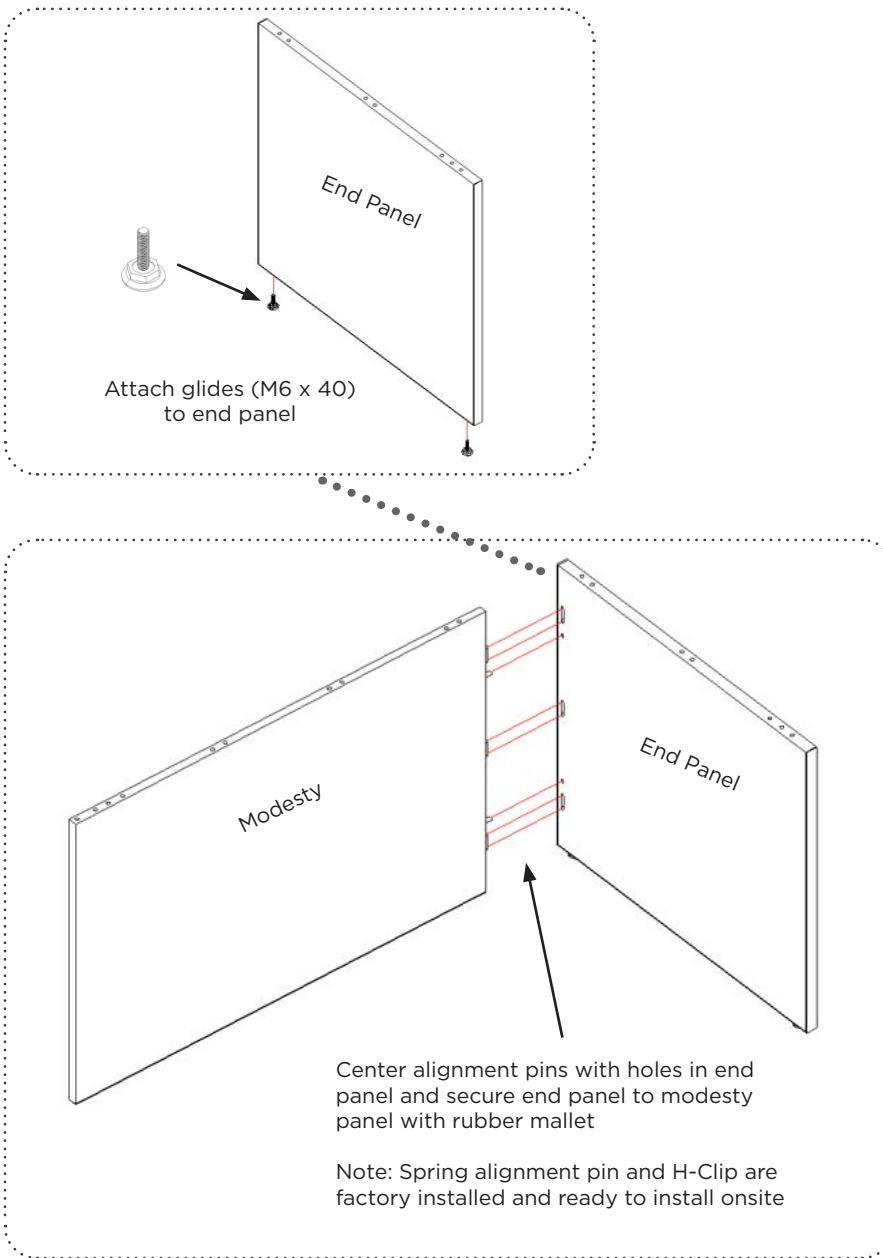


Completed installation

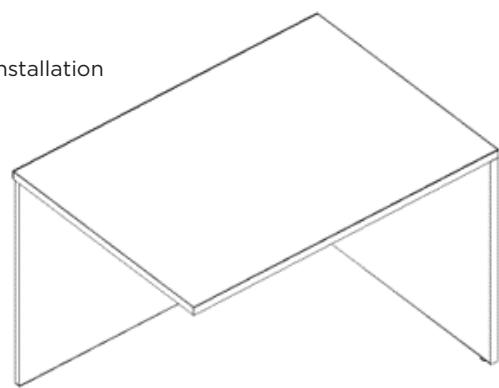


Dash Casegoods

Open Bridge

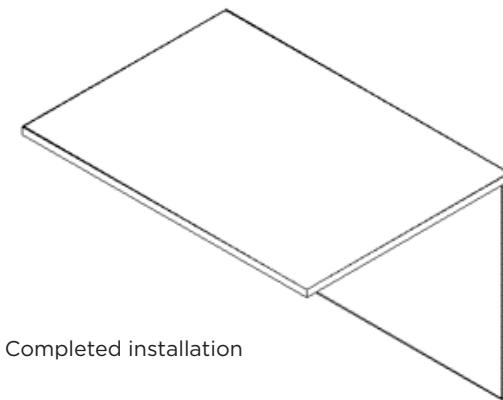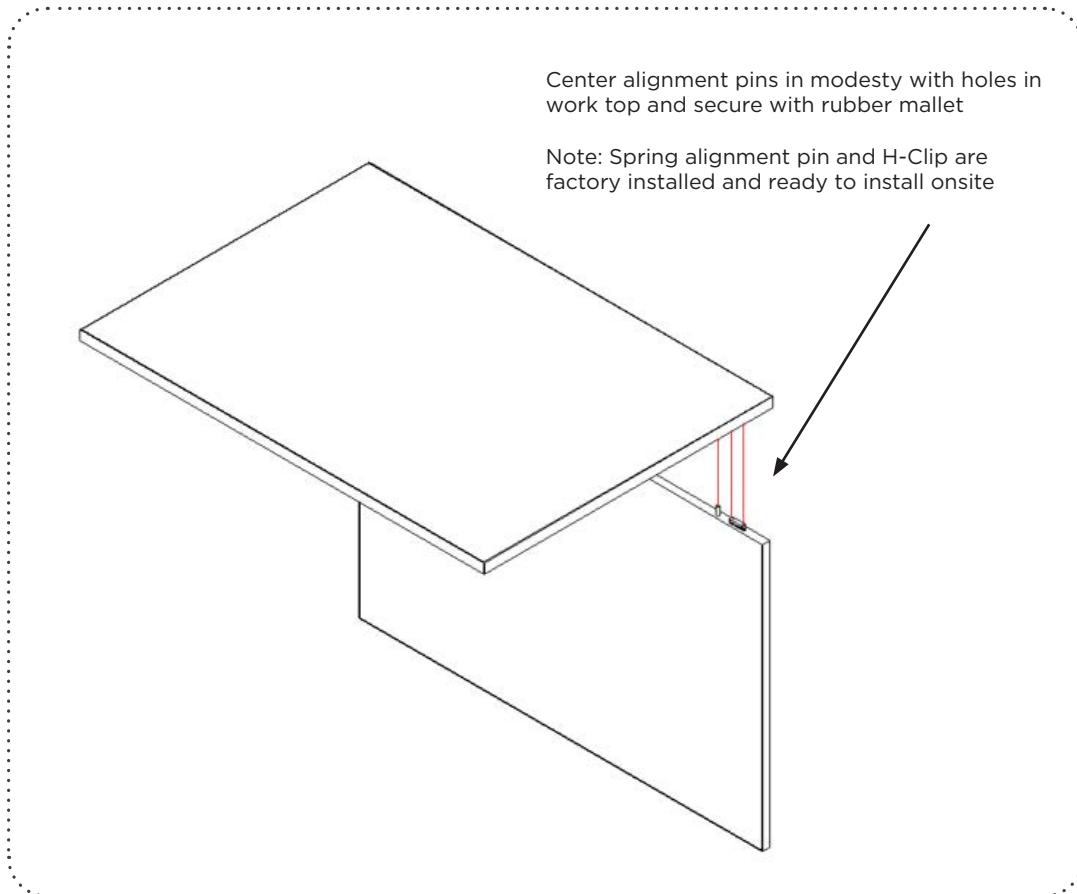

Dash Casegoods


Desk Shell and Return

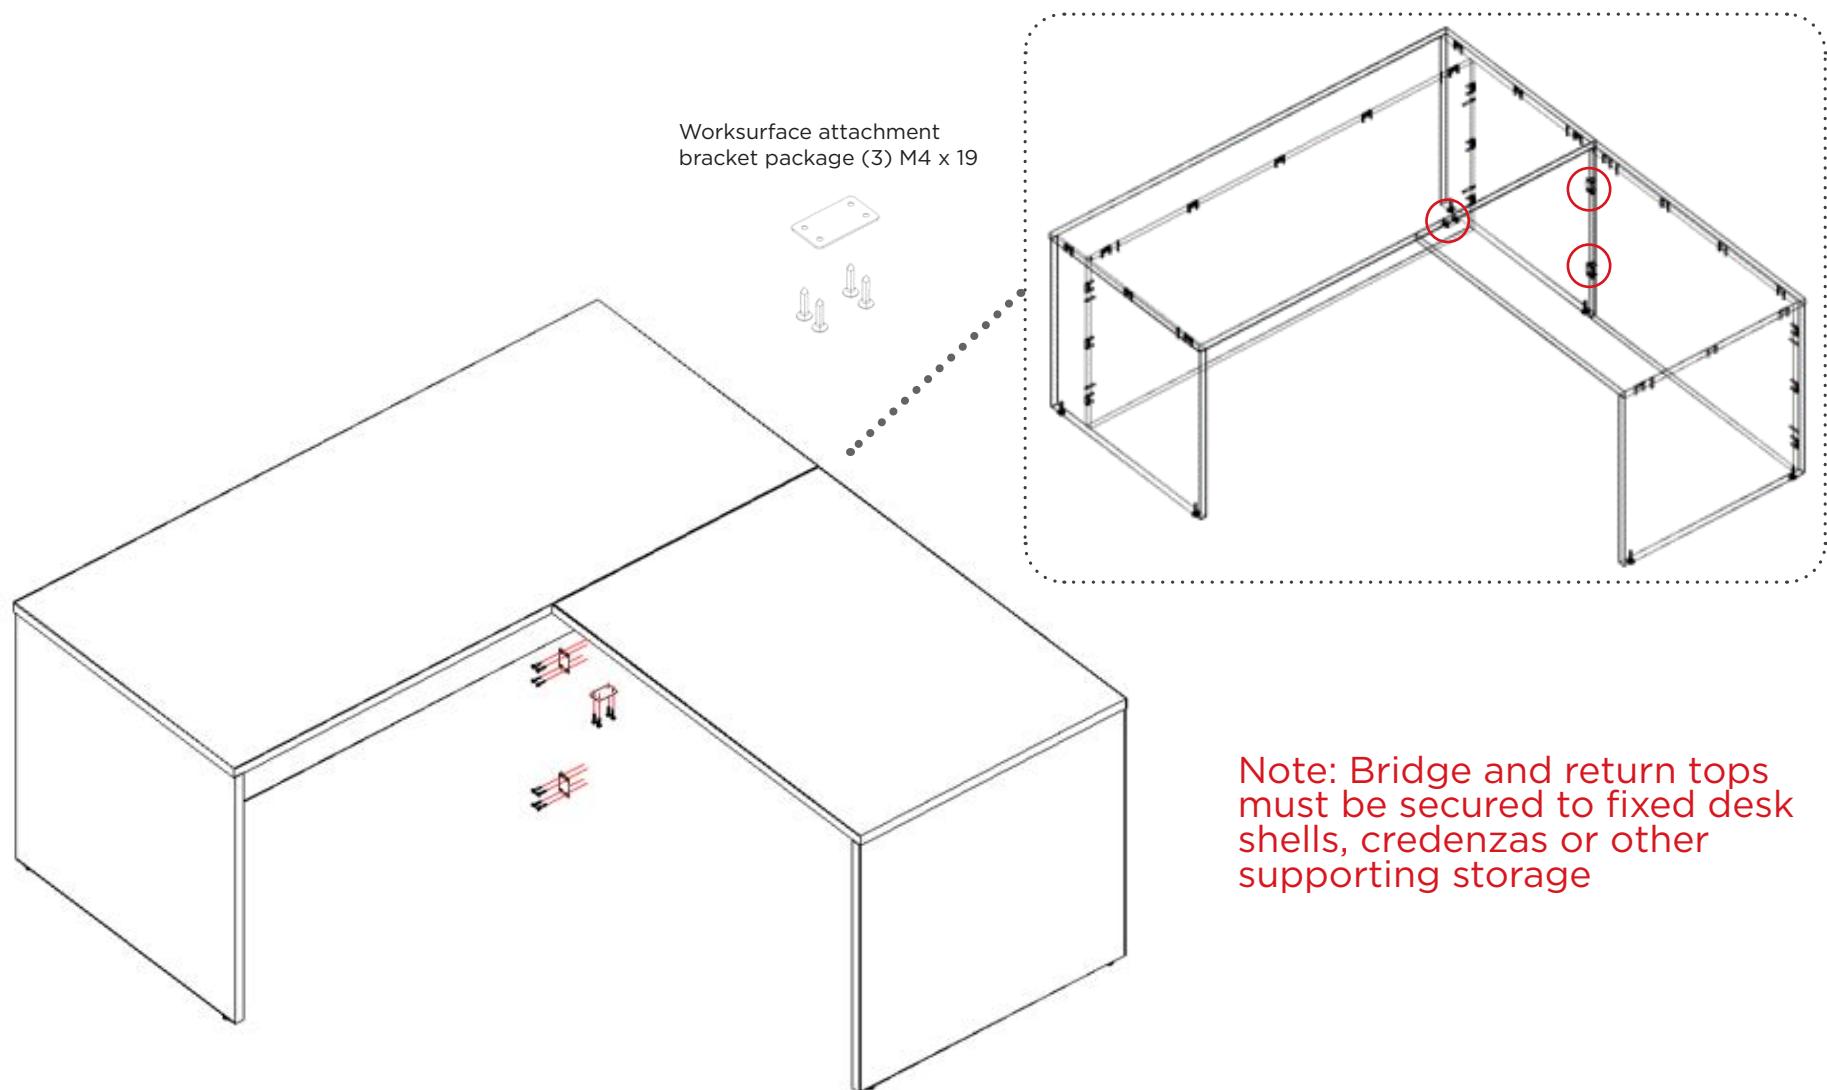

Storage


Shared Hutch Overhead with Hutch Supports

mounted on worksurface or credenza

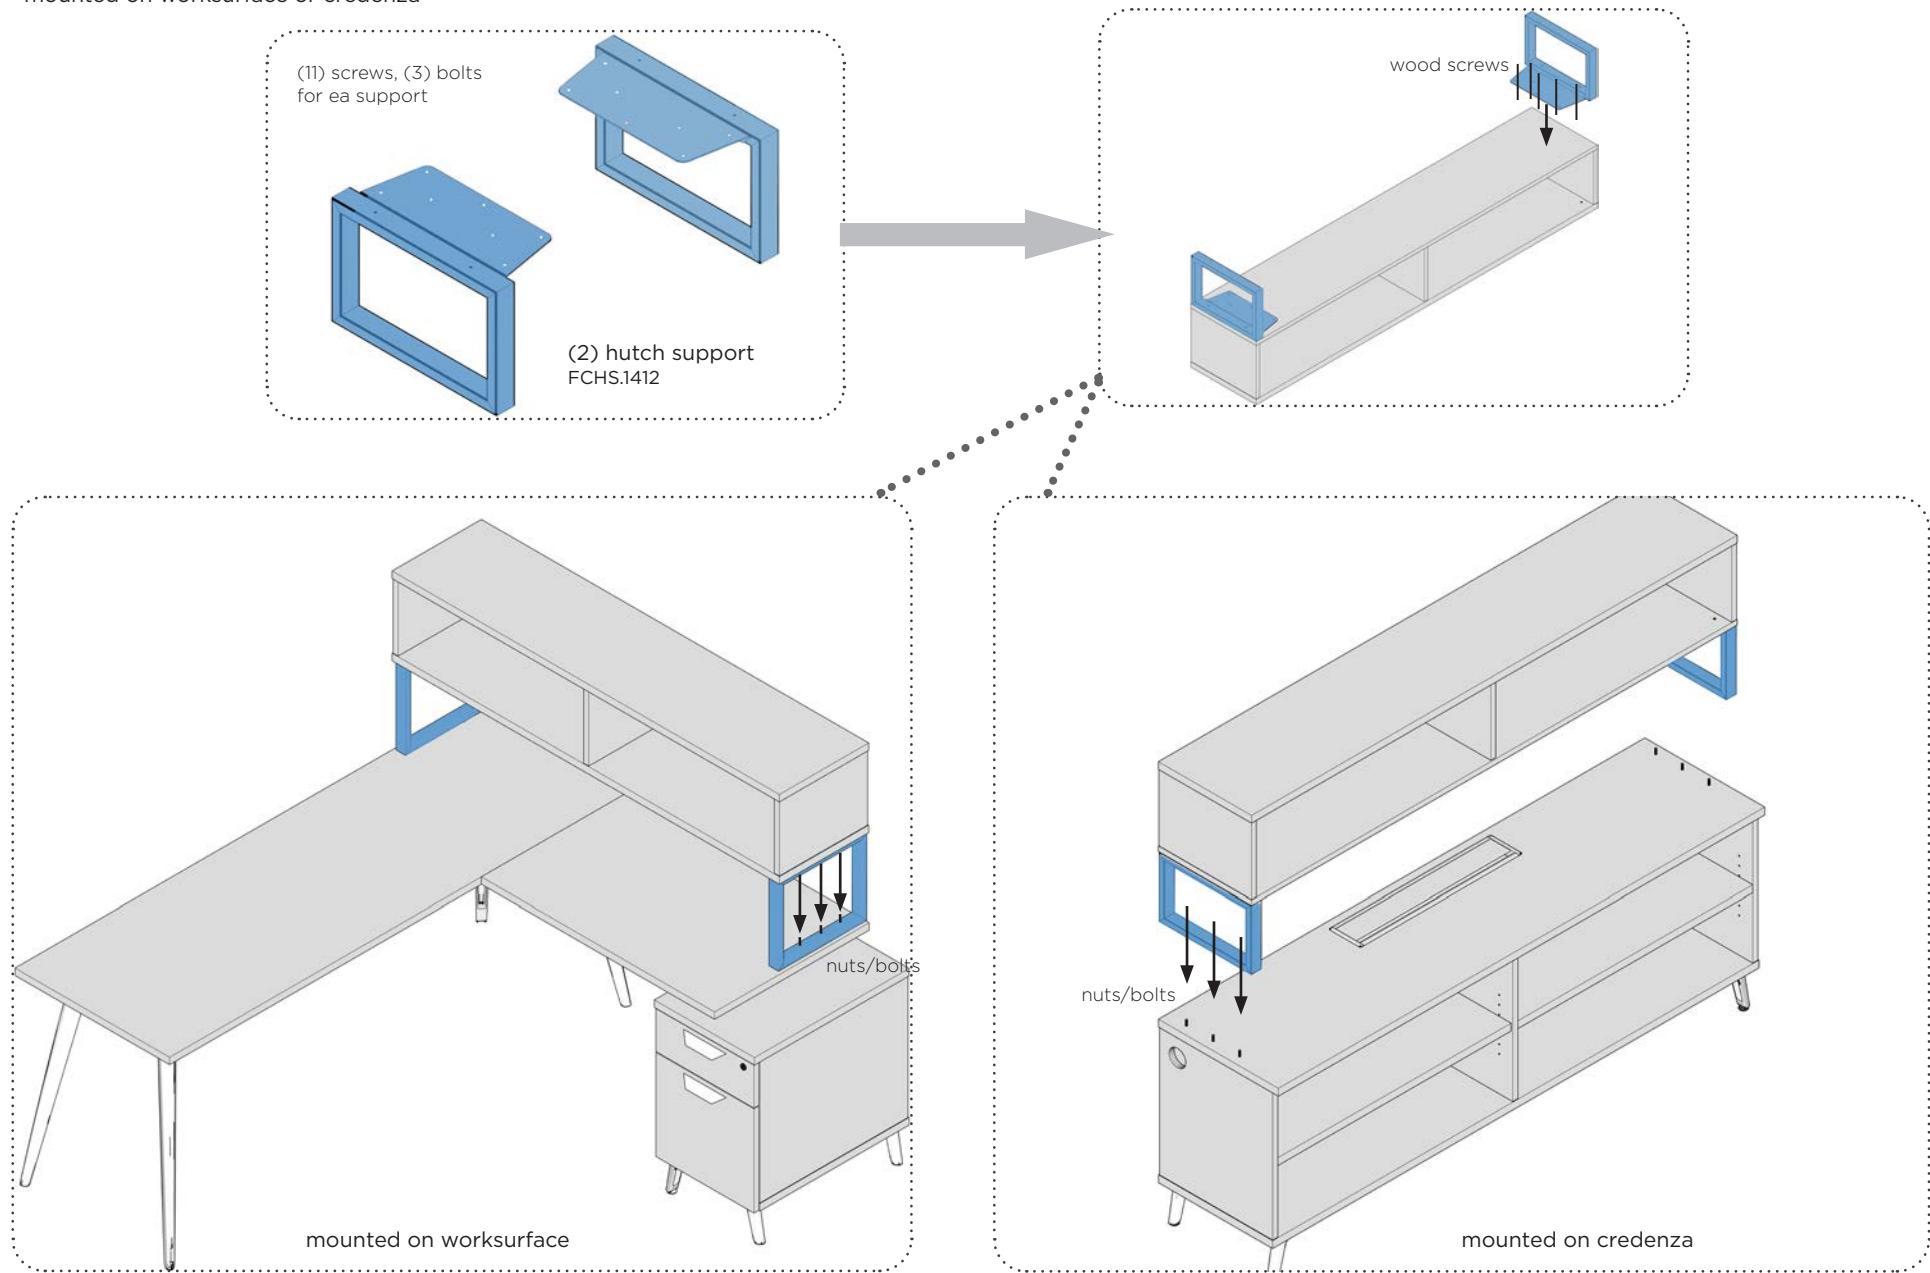

Storage

Shared Hutch Overhead with support column

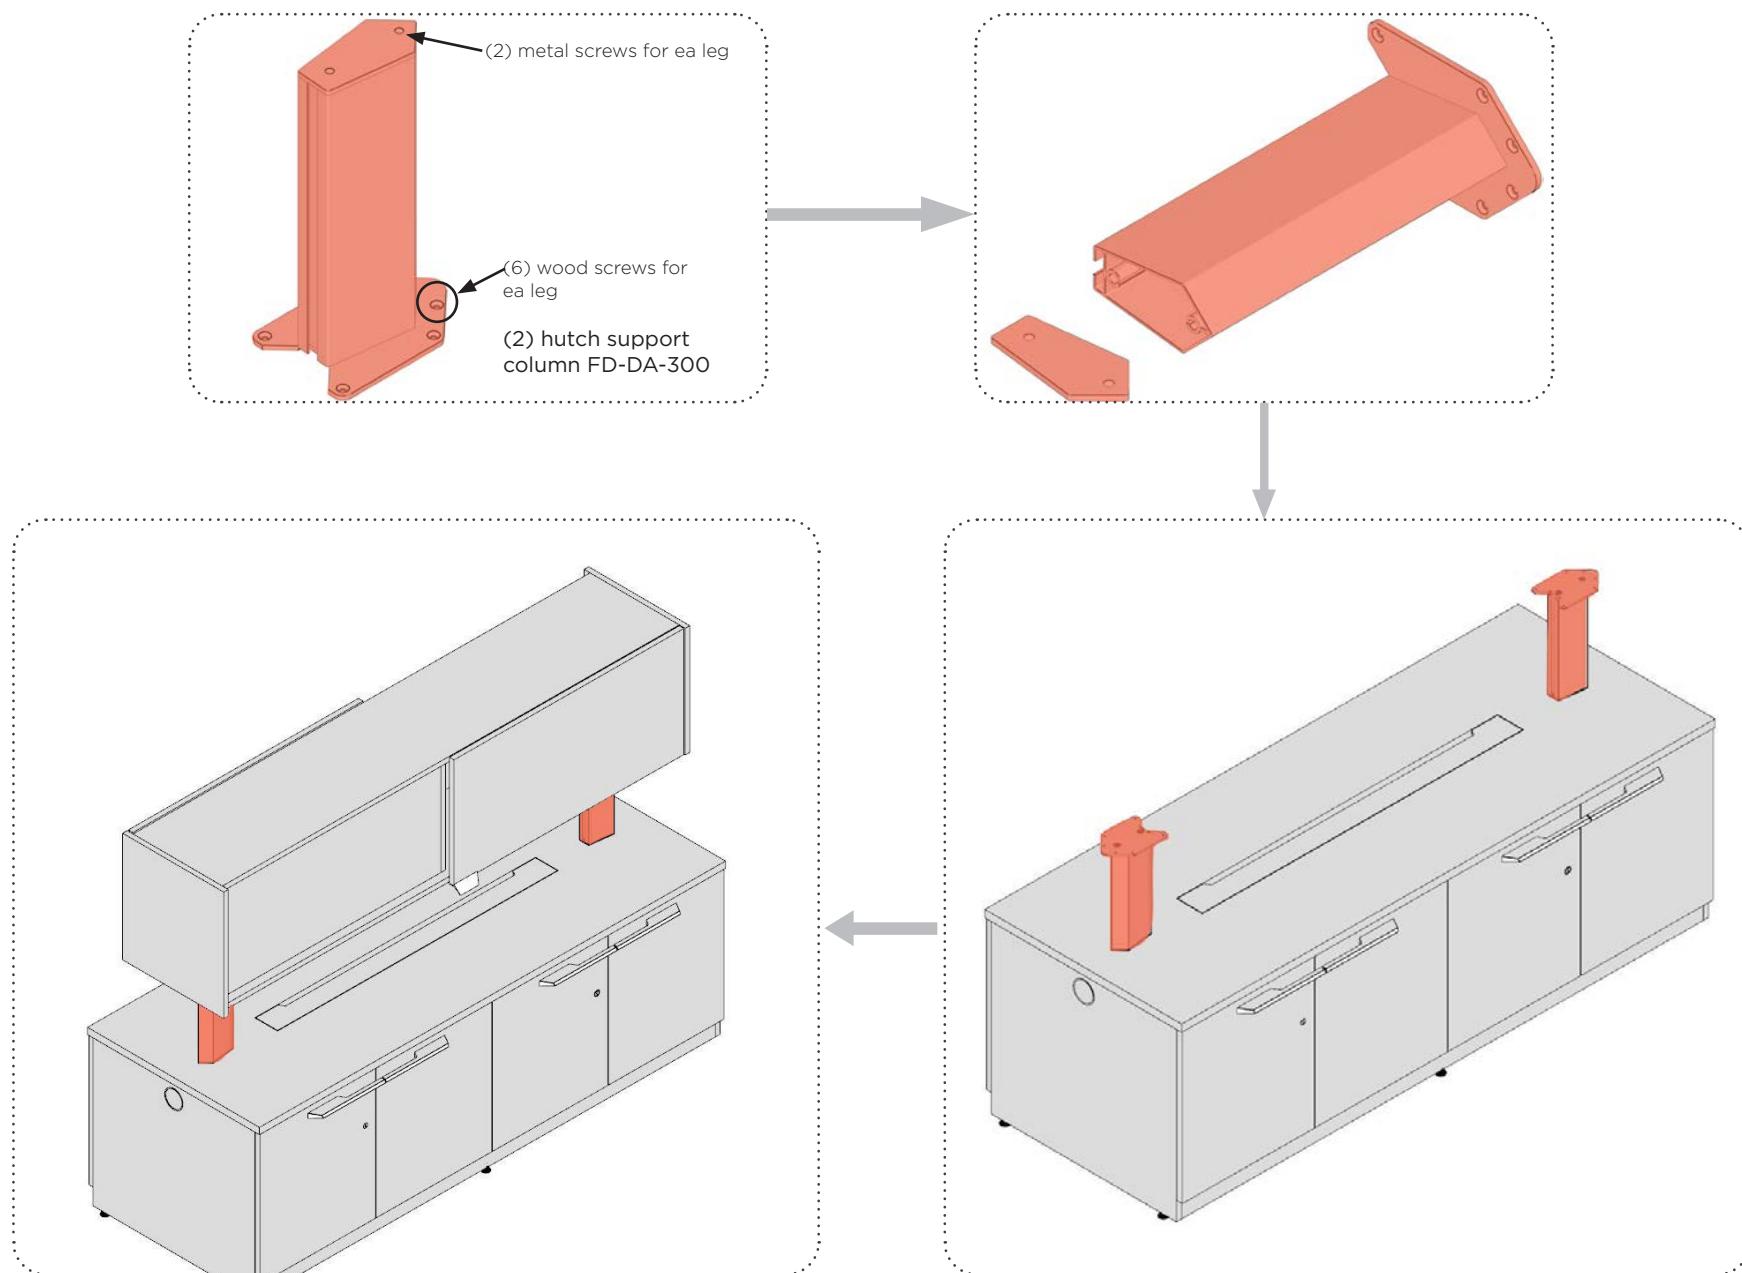


Storage

Wall Mounted Overhead

Warning

- Failure to follow the instructions in this manual can result in product damage, personal injury or both.
- Use two people to safely lift and install.
- Be careful when installing the cleat — you must use appropriate anchors for attaching this product to the wall. These anchors will vary depending on the field conditions. Be careful not to damage corner beads for drywall; it is strongly suggested you space off the edge of a drywall corner 2", to prevent damage.

pg 1 of 2

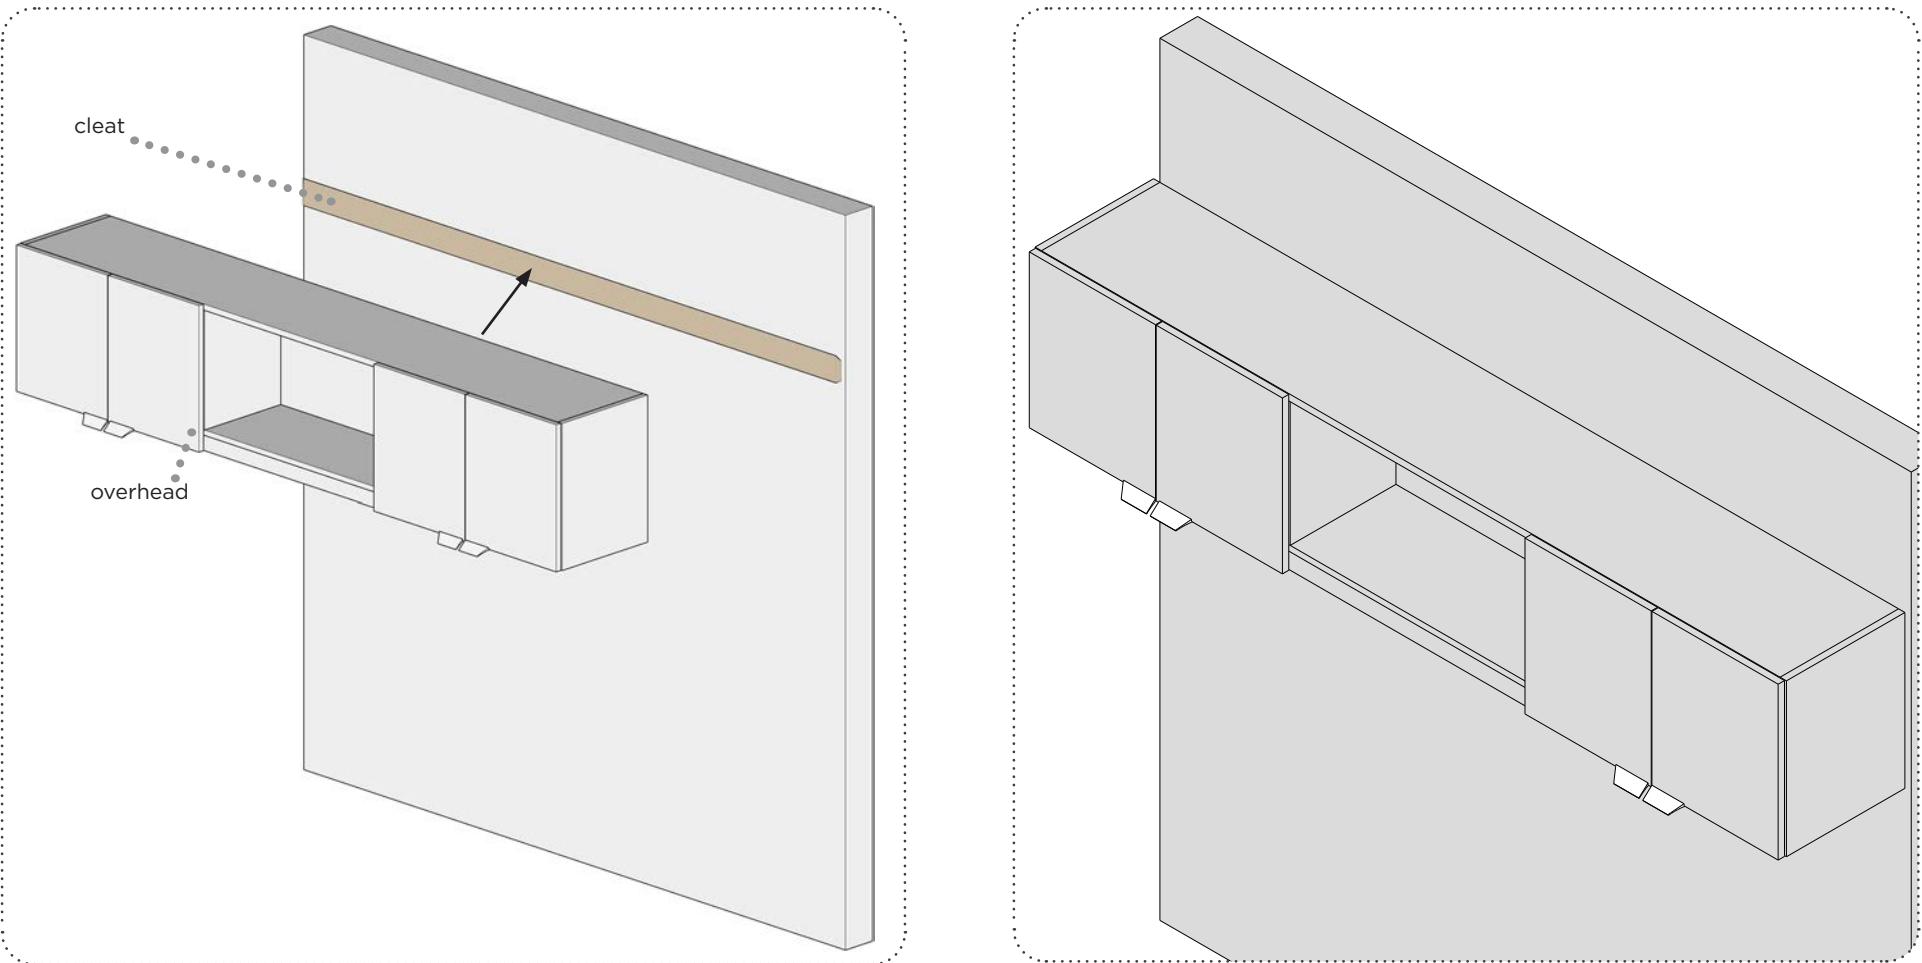

continued... 31


Storage

Wall Mounted Overhead continued..

pg 2 of 2


Attention Installer

After the cabinet is hung on the wall cleat, use the 1 - 1/2" wood screws (provided) and secure the cabinet through the inside per the drawing. Use provided cover caps to cover screws.

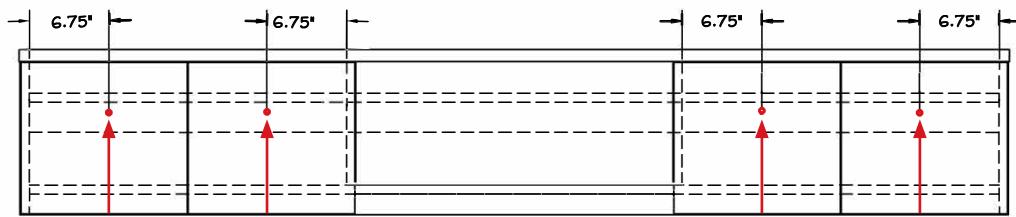

* Quantity and spacing varies per unit

Enlarged View Showing Application

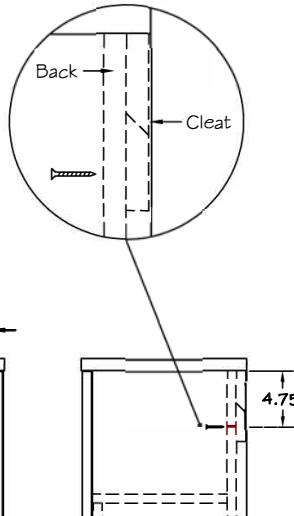

Quantity of screws required for each width cabinet:


FD-OS-XX36 = QTY 3
FD-OS-XX42 = QTY 3
FD-OS-XX48 = QTY 3
FD-OS-XX54 = QTY 4
FD-OS-XX60 = QTY 4
FD-OS-XX66 = QTY 4
FD-OS-XX72 = QTY 4
FD-OS-XX78 = QTY 4
FD-OS-XX84 = QTY 4

Components

Wall Mounted Tackboard



⚠ Warning

- Failure to follow the instructions in this manual can result in product damage, personal injury or both.
- Use two people to safely lift and install.
- Be careful when installing the cleat — you must use appropriate anchors for attaching this product to the wall. These anchors will vary depending on the field conditions. Be careful not to damage corner beads for drywall; it is strongly suggested you space off the edge of a drywall corner 2", to prevent damage.

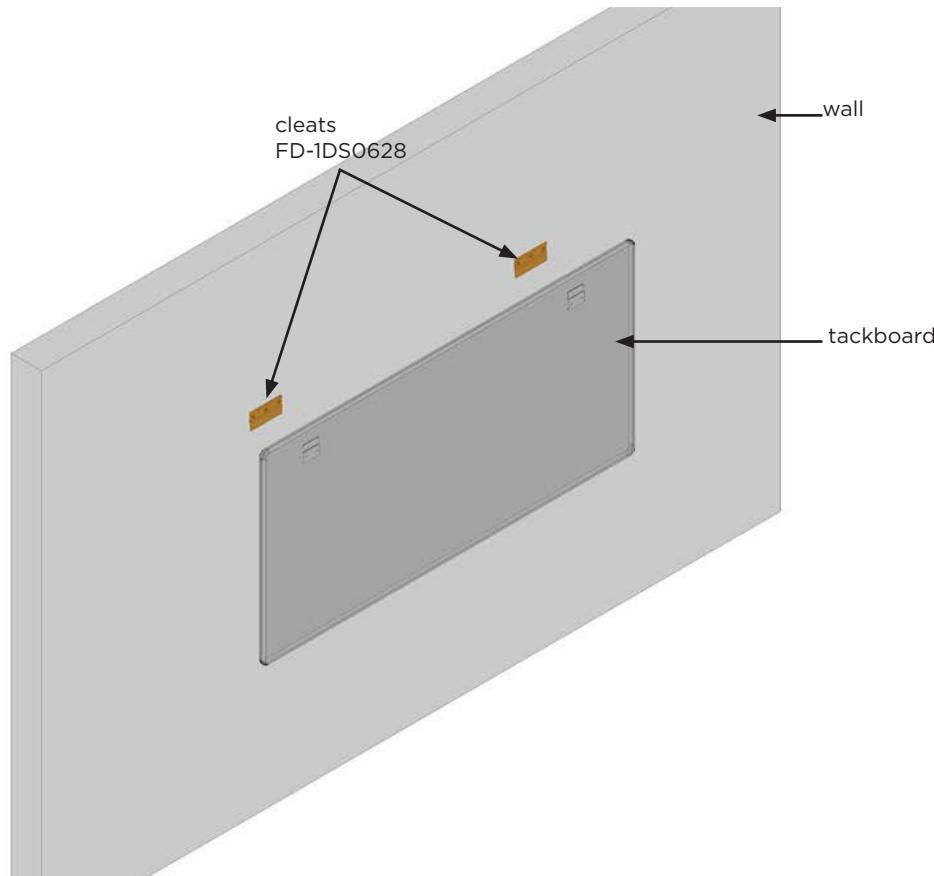


Interra Connectors

Credenza Bracket

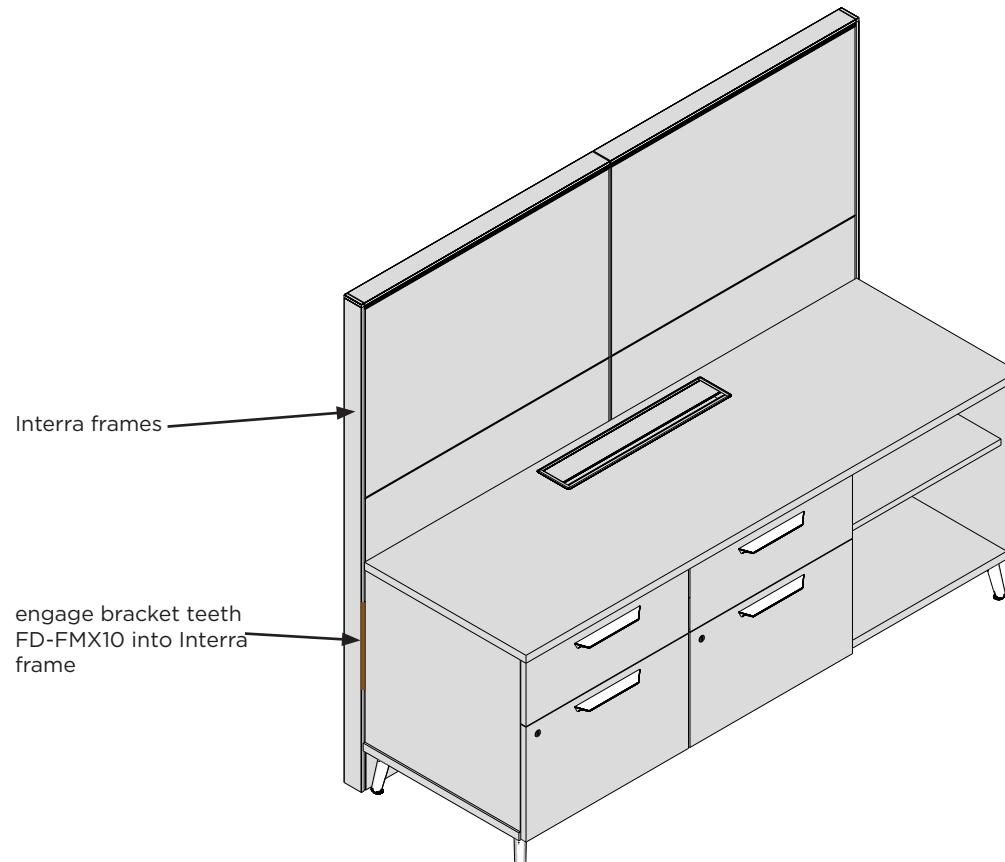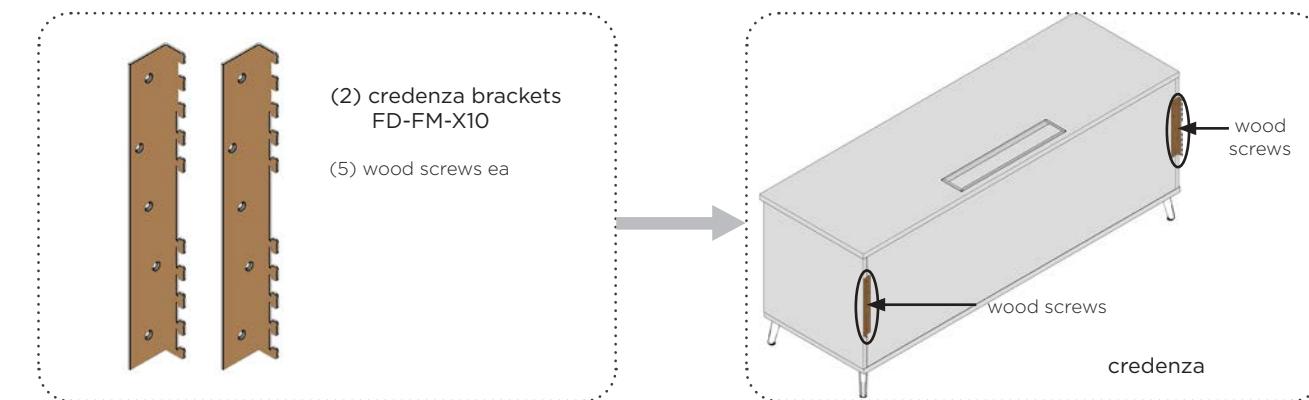



Interra Connectors

Panel Mount Kit

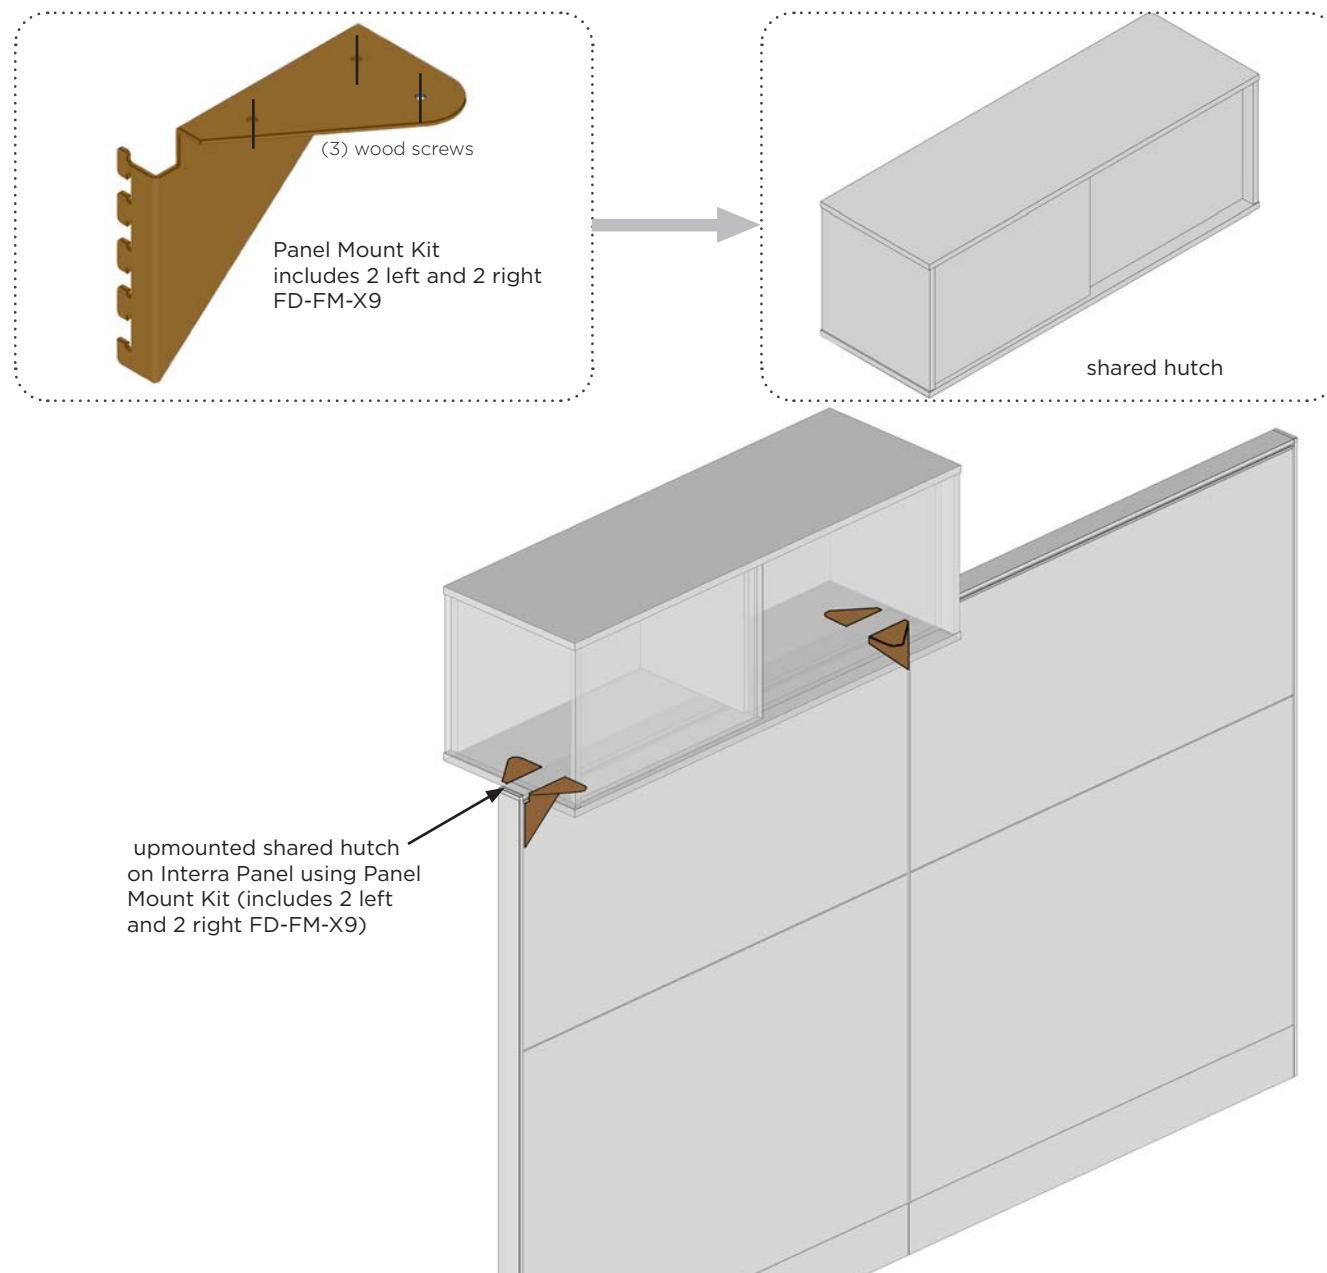



Components

Modesty Panel

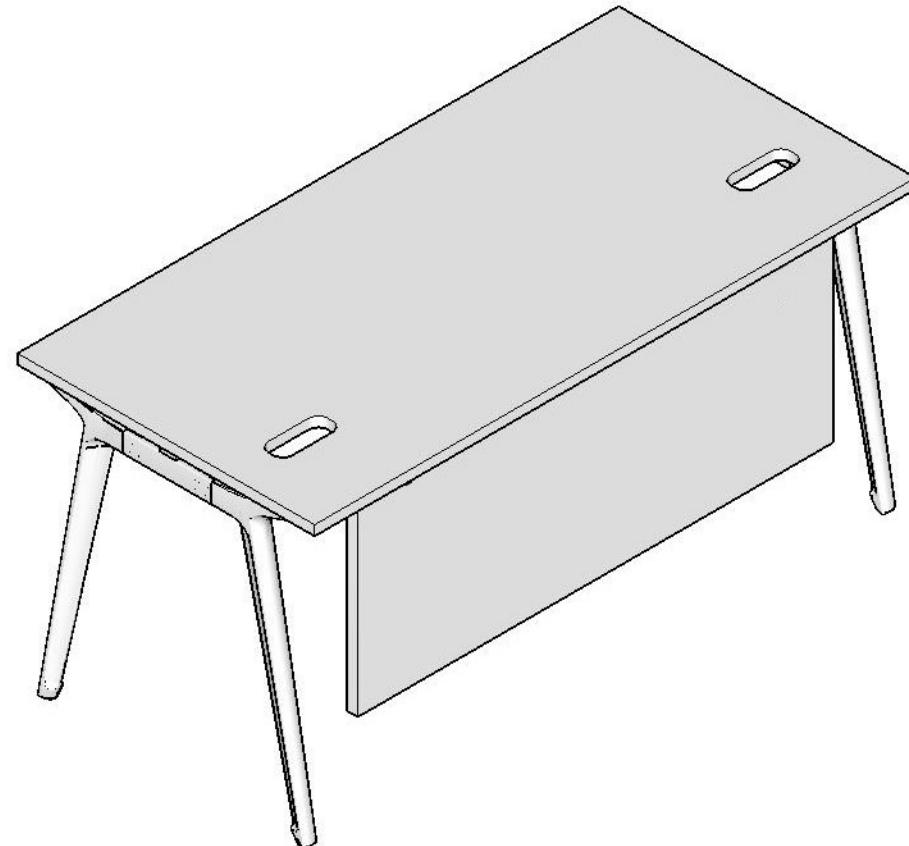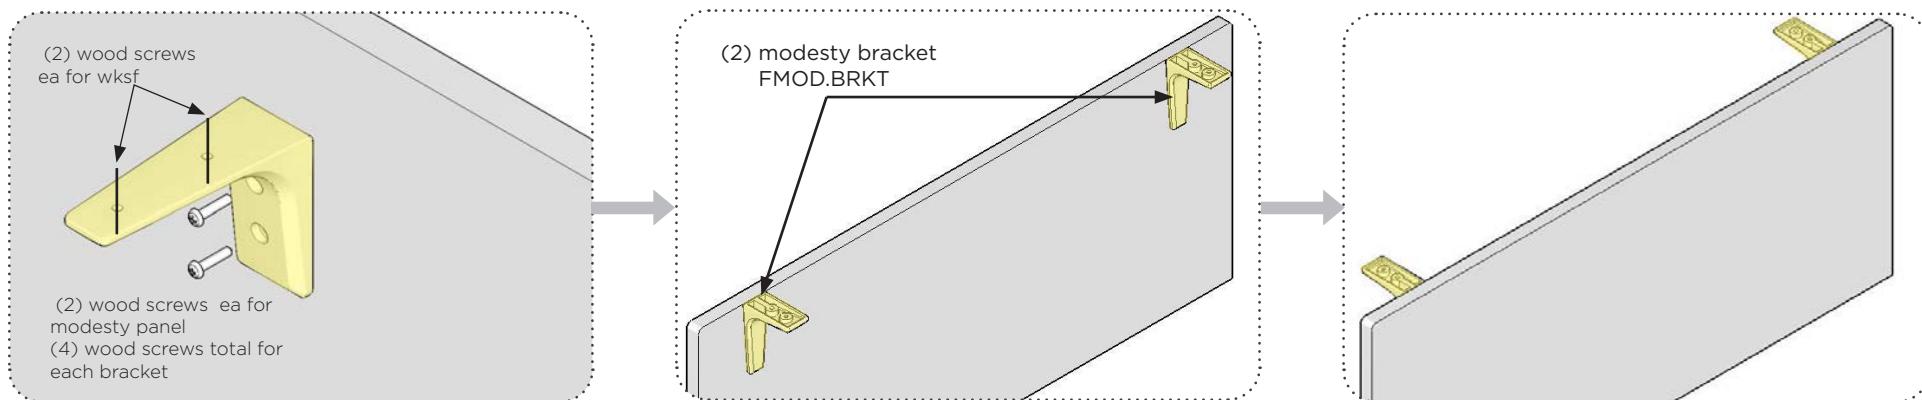



Components

Privacy Screen

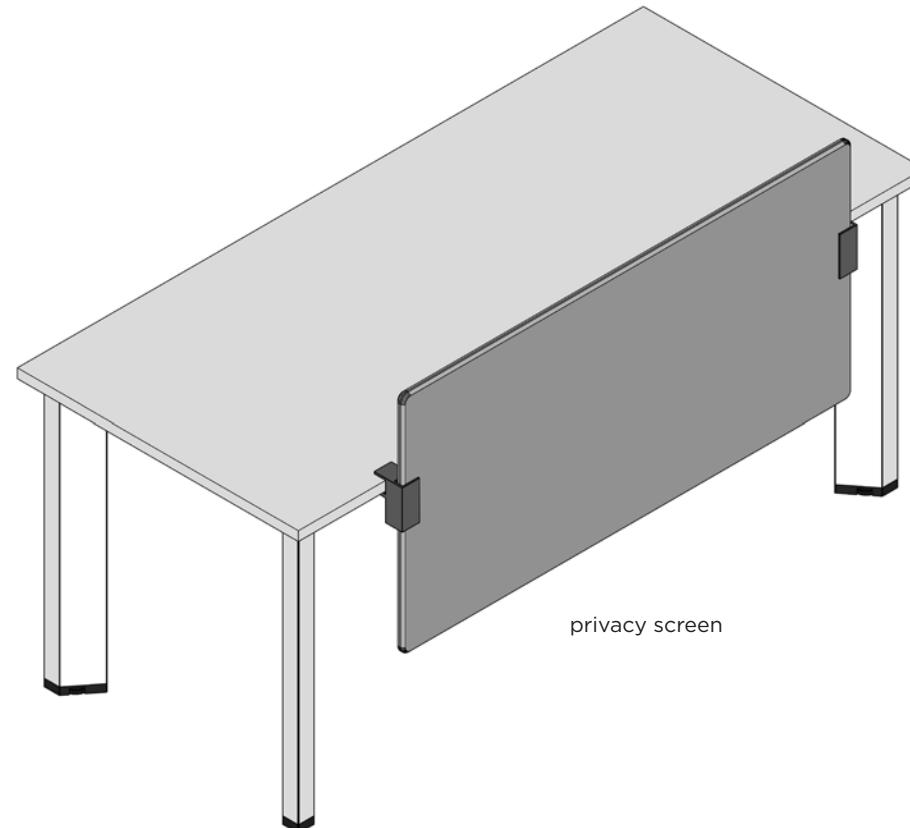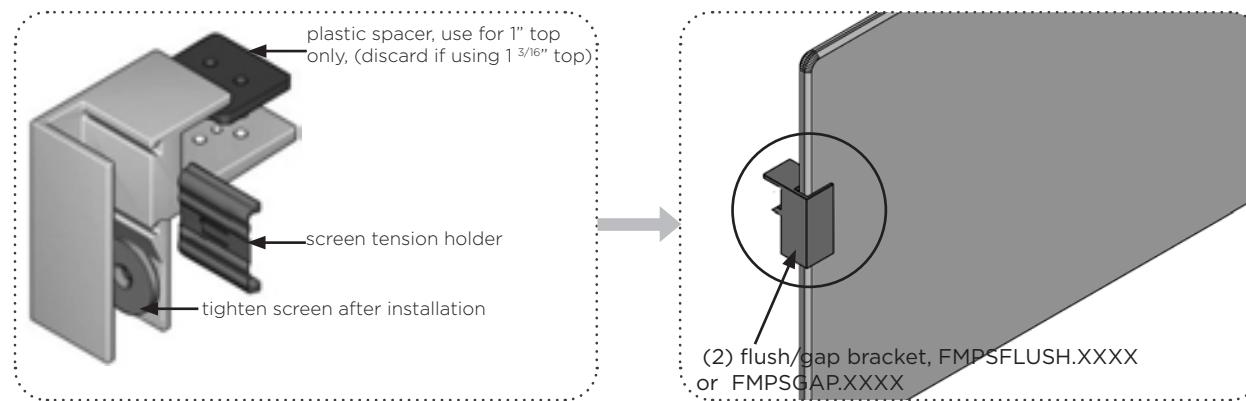



Storage

Feet Installation - Inset or Taper

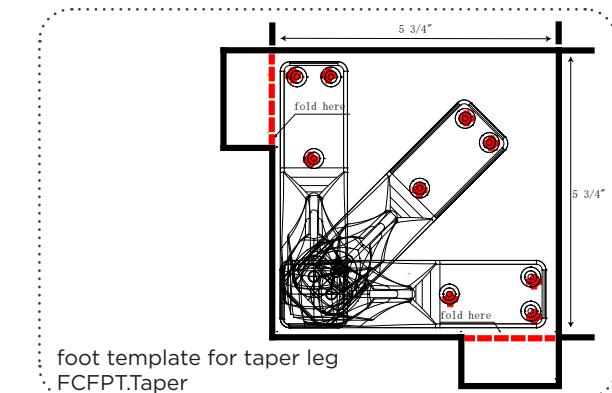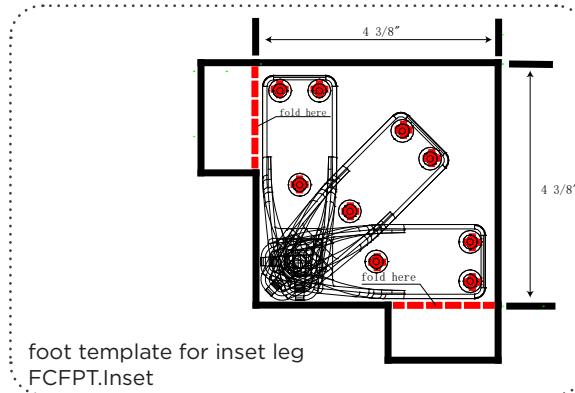

use paper template to predrill
holes on bottom of credenza

* no. of legs to be installed on
credenza - see next page 39

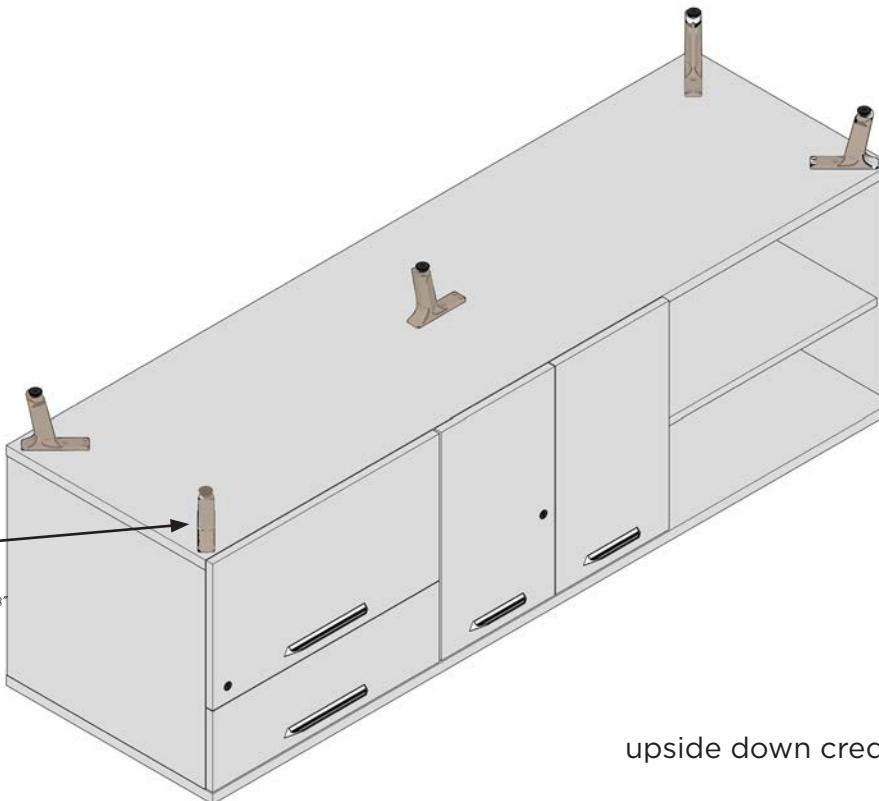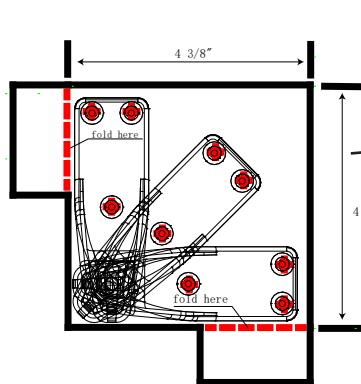

upside down credenza

Storage


Feet Matrix for all DASH Storage

No. of legs to be installed on credenza depends on size of credenza.

	HEIGHT	WIDTH	FEET
CREDENZA	26" or 29"	36 - 42"	4
	26" or 29"	48 - 60"	5
	26" or 29"	66 - 84"	6
PEDESTAL/ LATERAL FILES	26" or 29"	All	4
TOWERS	45"	18"	4
	53"	18"	4
	69"	18"	4
COMBO WARDROBE	All	36-42"	5
	All	48"	6
COMBO BOOKCASES	45-69"	48 - 60"	6
BOOKCASE / STORAGE	29-45"	30-36"	4
	53-69"	30-36"	5
	53-69"	42-48"	6

Electrical

Credenza Power: Single Circuit


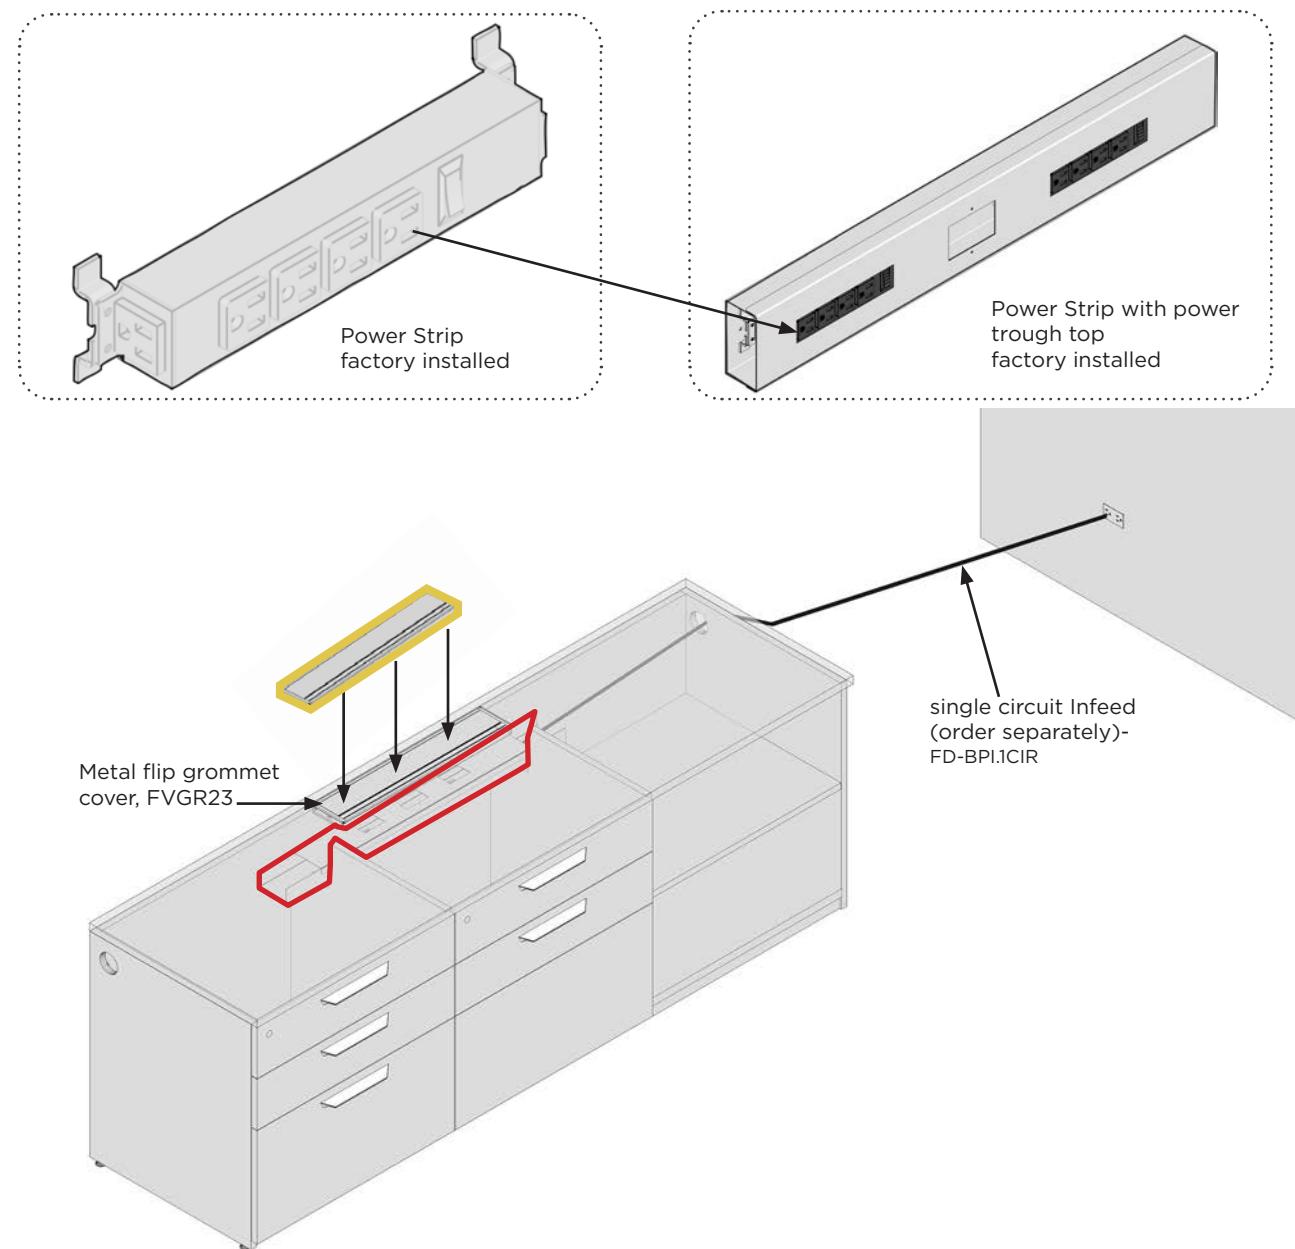


Electrical

Credenza Power: 4 Circuit


Warning

- The installation of the power entries, must be made by a qualified electrician. The purpose of this installation instruction is to assist you in working with the electrician to have this product installed. Under no circumstances should this be attempted by a person not recognized by local building authorities as a qualified electrician.
- Power entries should not be installed by any person(s) other than a qualified electrician. Attempting to do so can result in electric shock, personal injury, product damage, property damage or death.
- Failure to follow these instructions for connecting the festoon can cause a short circuit and may result in product damage, electrical shock, property damage or personal injury.

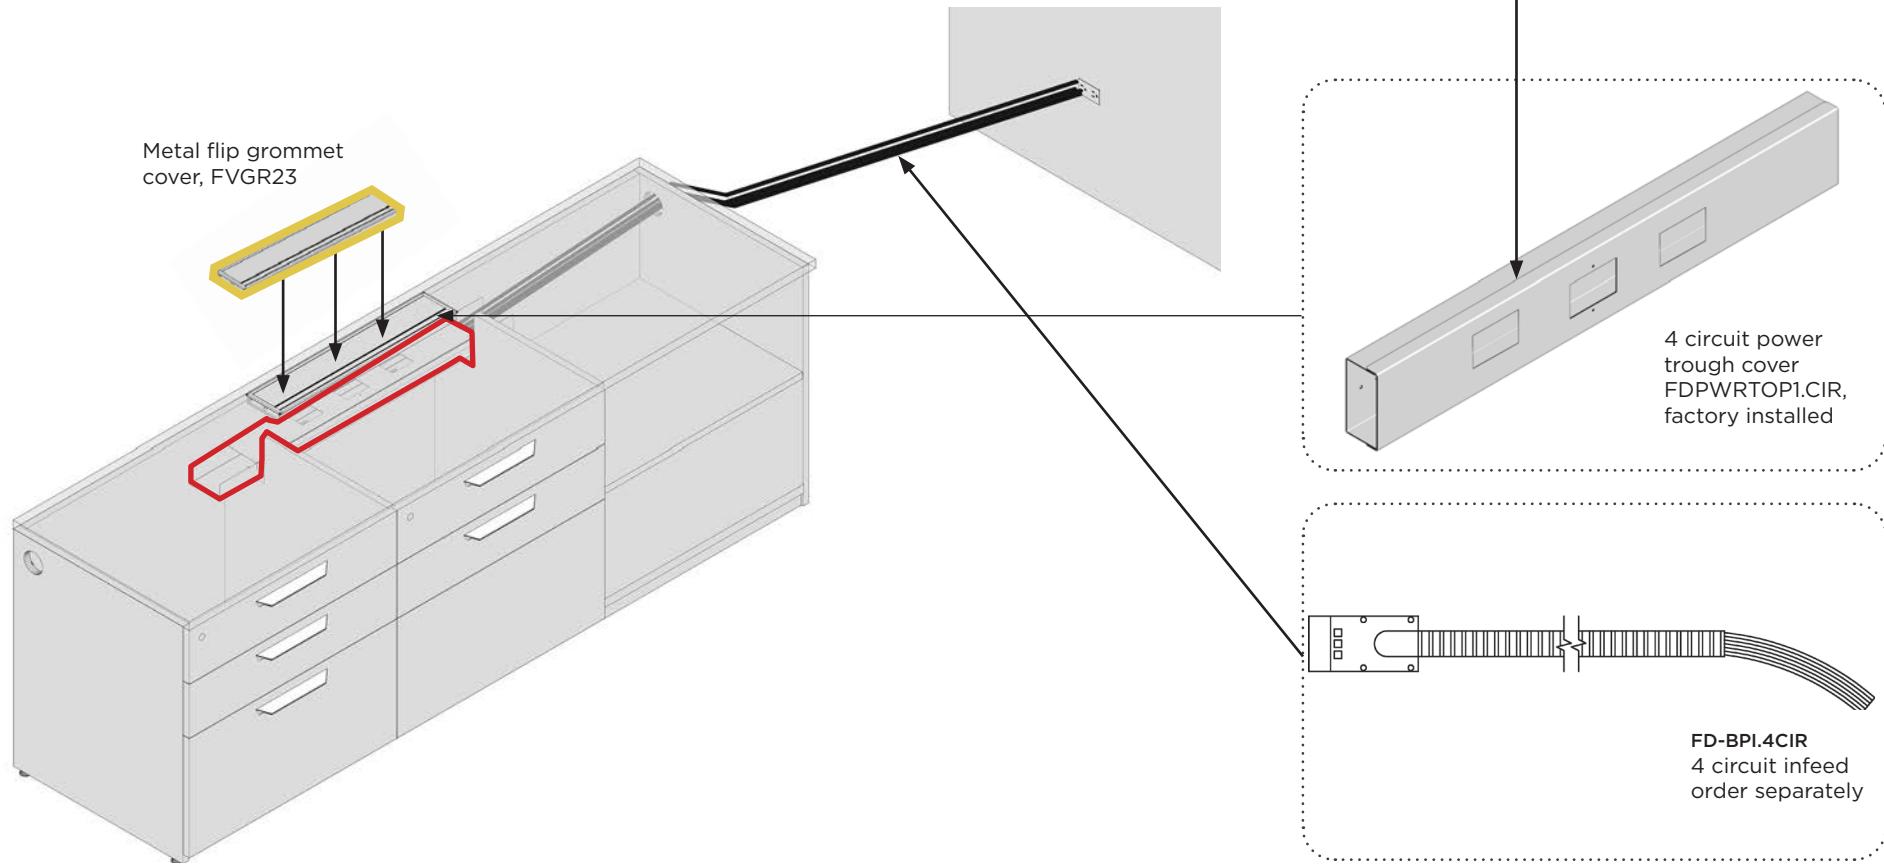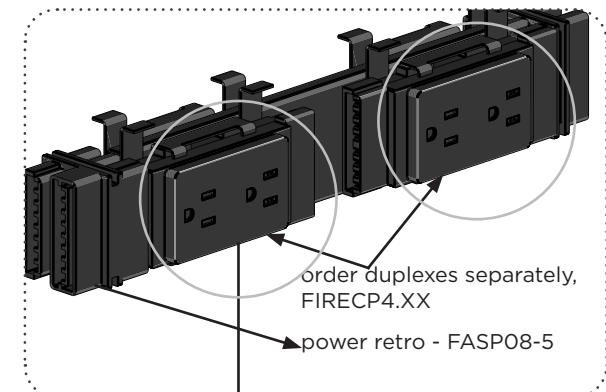

4 Circuit Wire Diagram

System is rated for connection to a 3 phase system.
Rating 120/208V, 3-PH WYE, 60-hz, 20 amp (CSA 15 amp)
multi-wire branch circuit

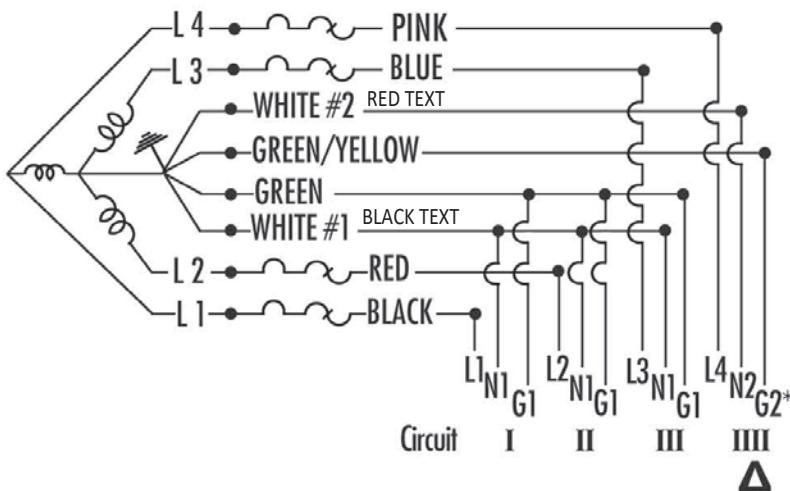


*Separate isolated ground

WARNING:

Risk of fire or electric shock. This office furnishings system may be connected to more than one source of supply.
All sources must be disconnected prior to any servicing. No single circuit may be powered by more than one source.


System is rated for connection to a ground 120/240V,
1-PH 60-hz, 20 amp multi-wire branch circuit

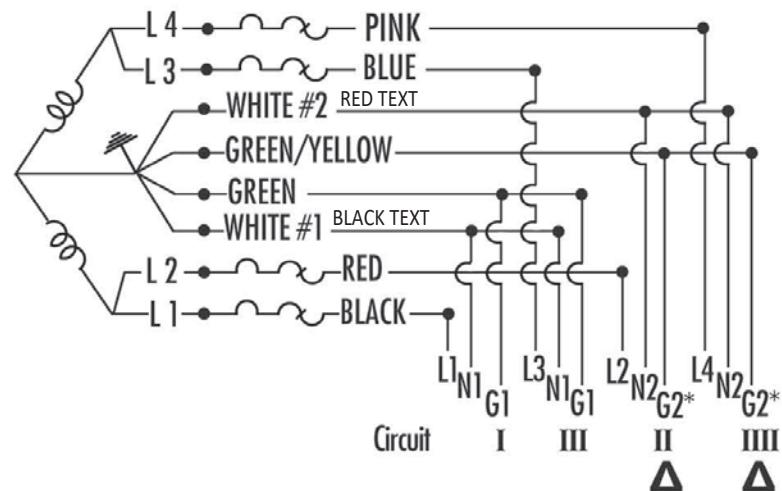




*Separate isolated ground

Electrical

Chicago Power Box

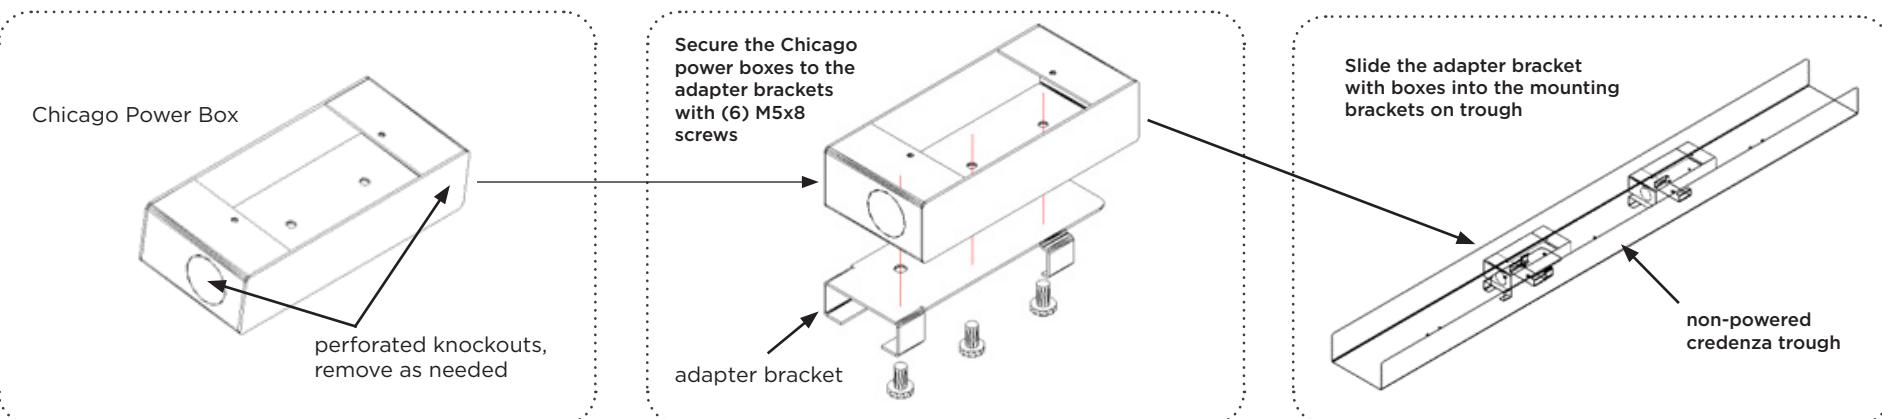

Note: Chicago electrical components provided by others

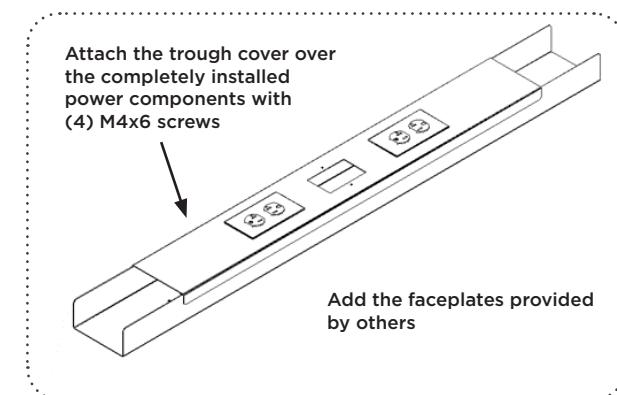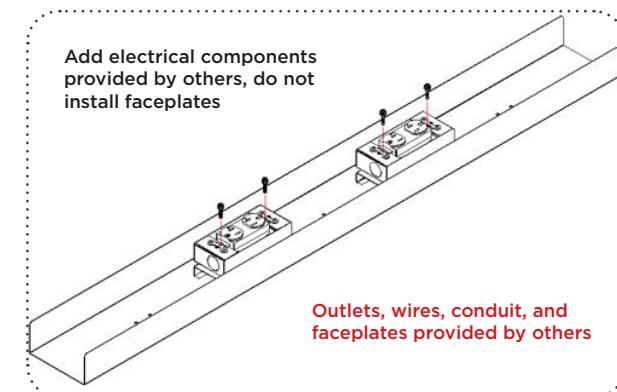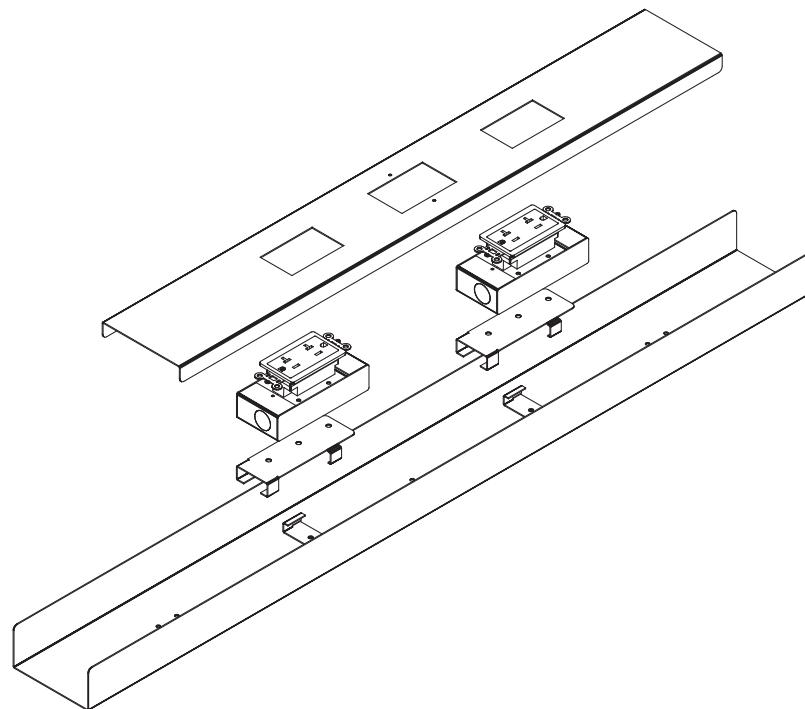

#	IMAGES	PART #, DESCRIPTION	#	IMAGES	PART #, DESCRIPTION
1		FCWKS.2430, Worsurface Support Stand-Off Support Plate	9		FD-DA-HL-XX - Support Beam FD-DA-BL-XXIN - Support Beam for return/resting bridge FD-DA-BL-14IN - Crossbeam Beam
2		FCWKS.3642, Worsurface Support Stand-Off Support Plate	10		2" FD-DA-DT-52 Freestanding Support Leg
3		FAAL-INSET, Concave Inset Leg	11		FD-DA-HL52-L/R Beam Bracket
4		FDSB-CXX, Concave Connecting Beam	12		FD-DA-HL-L/R Beam Bracket
5		FDSB-SXX, Straight Connecting Beam	13		FDTB-2000(1251-2000) FDTB-1250(800-1250) telescopic beam (2 lengths)
6		FDCJ-4040 Angled Leg Connector	14		FASS22-0-ZN mending plates
7		FCSO.2 2" Stand-Off's	15		FAAL-Taper Concave Taper Leg
8		FD-DA-DT-685 Freestanding Support Leg	16		FALC-5050 Angled Leg Connector-Small Conference Table

#	IMAGES	PART #, DESCRIPTION	#	IMAGES	PART #, DESCRIPTION
17		FCHS14XX Hutch Overhead Support	25		FASP08-5 Power retro
18		FD-DA-DT300 Shared Hutch Overhead Support Column	26		FIRECP4.X, FIRECP4.XX-CONT duplex
19		FD-FM-X10 Credenza Brackets	27		FD-BPI.1CIR Single Circuit infeed
20		FD-FM-X9 Panel Mount Kit Bracket	28		FD-BPI.4CIR 4 Circuit infeed
21		FMOD.BRKT Modesty Bracket	29		FCPT.Inset foot template for inset leg
22		FPSFLUSH and FPSGAP Flush and Gap Bracket for privacy screen	30		FCPT.Taper foot template for taper leg
23		FD.SFC.306.4B Power Strip	31		FCREDLEG.Inset
24		FVGR23 Grommet Cover	32		FCREDLEG.Taper