
USER GUIDE



ASSEMBLY GUIDE

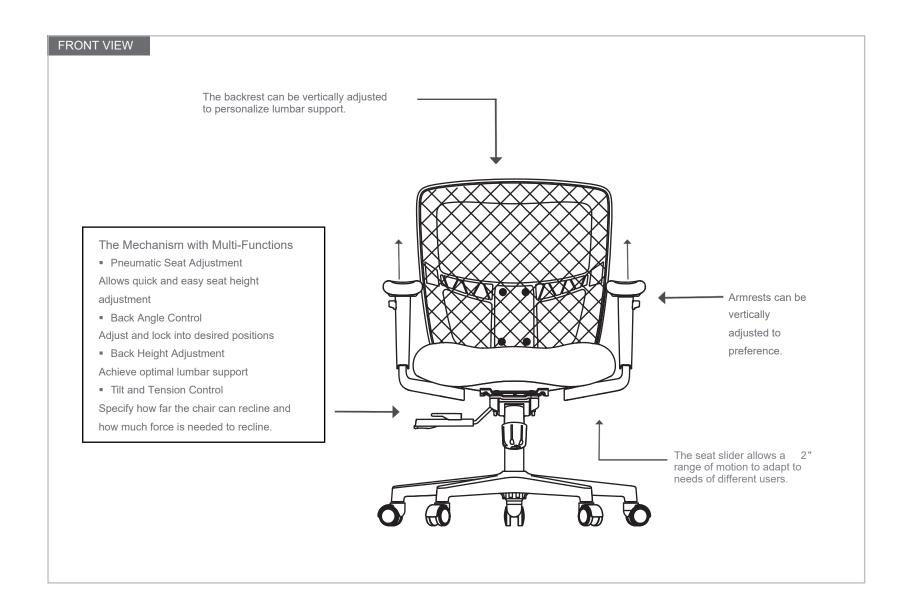

NOTE: Carefully check all parts according to the instructions before assembling. Please assemble carefully to avoid scratching surfaces, especially powder- coated surfaces.

Parts & Hardware


Item	Parts	Qt y.
A	Back Assembly	1
В	Seat Assembly	1
С	Seat Mechanism	1
D Q Q	Armrest L/R	1
E C	Gas Lift	1
F	Base	1
G 💍	Caster	5

Item	1	Parts	Qt y.
Н		M4 Wrench	1
ı		Inner Hexagon Screws 5/16" x 3/4"	3
J		Inner Hexagon Screws 1/4" x 1-3/5"	6
K		Inner Hexagon Screws 1/4" x 1"	4
L		M5 Wrench	1
M		Flat Pad 19 x 8.3 x 2mm	4

ASSEMBLY GUIDE


1. Base Assembly

Insert five Casters (G) in the Base (F). Snap Casters in place by pushing them until you hear or feel a click. Set the Base upright with Casters on the floor. Insert the Gas lift (E) into the Base.

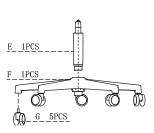


2. Arm Rest Assembly

Align Armrests (D) with predrilled holes. Secure armrests using Hex Bolts (J) and Hex Key (H).

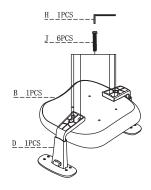

3. Assemble the Seat Mechanism & Seat

Attach Preassembled Seat Mechanism (C) to the Seat (B) using Washers (M) and Hex Bolts (K), tighten with Hex Key (H).

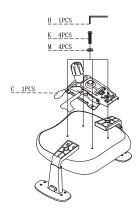


4. Back Assembly

Set Seat Assembly on a raised surface (like a table). Insert the Back (A) into Seat Assembly and align with the predrilled holes. Join with Hex Bolts (I) and tighten with Hex Key (L).



5. Final Assembly

Insert Seat Assembly (Step 2) into Base Assembly (Step 1).

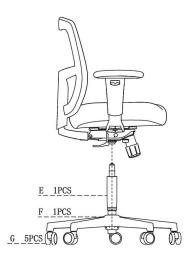

OPERATION GUIDE

